



Quick Installation Guide

SP800


Remote controlled phone for soft clients



A Delivery content · Lieferumfang · Contenu de la boîte · En la caja · Contenuto della confezione

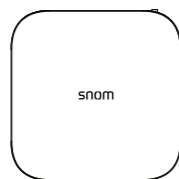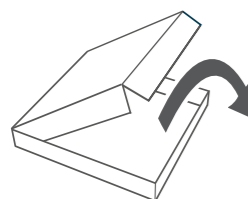


B Connecting · Anschließen · Connector · Conectar · Collegare

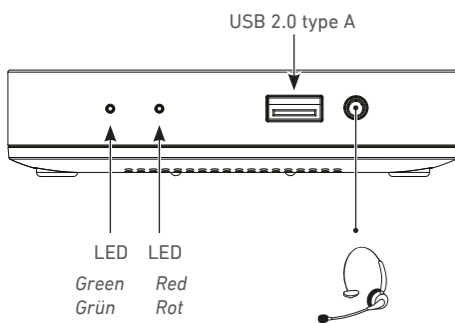

LED LED  
Green Red  
Grün Rot  
Vert Rouge  
Verde Rosso

- Headset not included
- Headset nicht im Lieferumfang enthalten
- Casque non inclus dans la boîte
- Cuffia non inclusa nella confezione
- Auricular no incluido en la caja

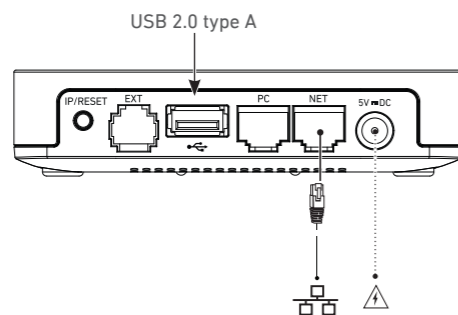

- If PoE not available (power adapter not included)
- Wenn PoE nicht verfügbar (Netzteil nicht im Lieferumfang enthalten)
- S'il n'y a pas de PoE (bloc d'alimentation non inclus dans la boîte)
- Si no se dispone de PoE (alimentatore no incluida nella confezione)
- Se non disponibile PoE (fuente de alimentación no incluido en la caja)

Snom Technology GmbH  
Wittestr. 30 G  
13509 Berlin, Deutschland  
office.de@snom.com

Snom Technology GmbH  
Via Milano 1  
20020 Lainate, Italia  
office.it@snom.com

Snom Technology GmbH  
130, avenue Joseph Kessel  
78960 Voisins-le-Bretonneux  
France  
office.fr@snom.com



VTech Communications Inc.  
Snom Americas  
9020 Washington Square Road,  
Suite 555  
Tigard, OR 97223  
Phone support: (339) 227 6160

Snom Technology GmbH  
The Courtyard  
High Street  
Ascot, Berkshire SL5 7HP, UK  
office.uk@snom.com


VTech Technologies Canada Ltd.  
Suite 222  
13888 Wireless Way  
Richmond, B.C. V6V 0A3, Canada  
Phone support: (339) 227 6160

**Manufacturer:**  
VTech Telecommunications Ltd.  
23/F., Tai Ping Industrial Centre,  
Block 1,  
57 Ting Kok Road, Tai Po  
HONG KONG


C Initializing · Initialisierung · Initialisation · Inizializzazione · Inicializando

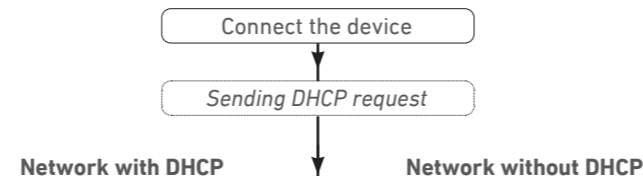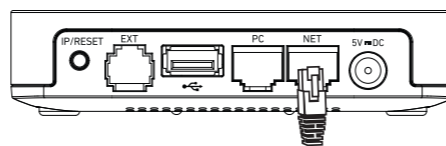

Network with DHCP      Network without DHCP

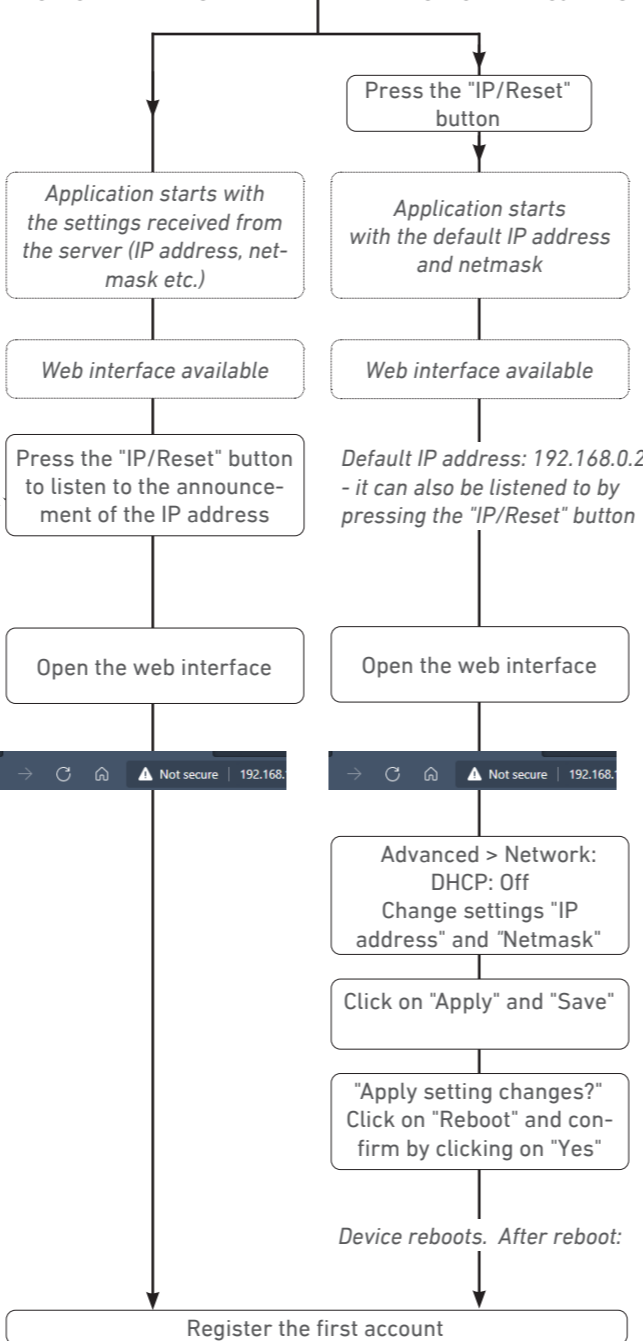

After successful registration, the red LED turns off.

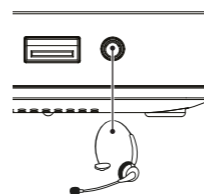

ENGLISH

Copyright, Trademarks, Legal Disclaimers

© 2023 Snom Technology GmbH. All Rights Reserved. Snom, the names of Snom products, and Snom logos are trademarks owned by Snom Technology GmbH.

All product specifications are subject to change without notification. Snom Technology GmbH reserves the right to revise and change this document at any time, without being obliged to announce such revisions or changes beforehand or after the fact.

Although due care has been taken in the compilation and presentation of the information in this document, the data upon which it is based may have changed in the meantime. Snom therefore disclaims all warranties and liability for the accurateness, completeness, and currentness of the information published, except in the case of intention or gross negligence on the part of Snom or where liability arises due to binding legal provisions.

Important Information

Please read the instructions on safety and disposal and on how to set up and use the device before using it and also give them to other users to read or inform those users of their contents.

The nameplate is located at the bottom or rear of the product.

Safety Instructions

- **Warning:** The product included (ITE) in this manual is to be connected only to PoE networks without routing to the outside plant.
- The socket outlet for the power adaptor must be near the equipment and easily accessible.
- Mount the device only at heights not exceeding 2m.
- If the device is not supplied with power via the Ethernet cable, use only a power adapter expressly recommended by Snom. Other power supplies may damage or destroy the device, affect its behavior, or induce noise.
- Avoid placing the cables where people may trip over them or where they may be exposed to mechanical pressure as this may damage them.
- This device is for indoor use only! NOT FOR OUTDOOR USE!
- Do not install the device in rooms with high humidity (for example, in bathrooms, laundry rooms, damp basements). Do not immerse the device in water and do not spill or pour liquids of any kind onto or into the device.
- Do not install the device in surroundings at risk for explosions (paint shops, for example). Do not use the device if you smell gas or other potentially explosive fumes.
- Do not use the device during thunderstorms. Lightning striking the power grid may cause electric shocks.

SELV (Safety Extra Low Voltage) Compliance

Safety status of input/output connections comply with SELV requirements.

**Warning:** To avoid electric shock, do not connect safety extra-low voltage (SELV) circuits to teledevice-network voltage (TNV) circuits. LAN ports contain SELV circuits, and PSTN ports contain TNV circuits. Some LAN and PSTN ports both use RJ-45 (8P8C) connectors. Use caution when connecting cables.

Standards conformance

This device complies with the essential health, safety, and environmental requirements of all relevant European directives and UK legislation.

This device meets US and Canadian health, safety, and environmental standards.

The declaration of conformity can be downloaded at <https://www.snom.com/conformity>.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada

This Class A digital apparatus complies with Canadian requirements: CAN ICES-3 (A)/NMB-3(A).

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Unauthorized opening, changing, or modifying the device will cause the warranty to lapse and may also result in the loss of CE, UKCA, and IC conformity, and FCC compliance. In case of malfunction contact authorized service personnel, your seller, or Snom.

Technical specifications

- **Safety:** IEC 62368-1
- **Connectors:**
  - 2 RJ45: 1 x LAN, 1 x PC
  - 1 RJ12 (for Debug)
  - 2 x USB 2.0 ports, type A
  - 1 x coaxial power connector
  - 1 x 3.5mm headset connector
- **Ethernet:** 2 x IEEE 802.3, 1 Gigabit Ethernet switch
- **Power:** Power over Ethernet (PoE), IEEE 802.3af, Class 3. If PoE is not available, use the separately available power adapter (not included):
  - Mass Power, model NBS12E050200UV, Snom PN 00004570 (EU, UK, U.S.A.)
- **Wallmount bracket.** Optional, order separately, Snom PN 00004657.

Disposal of the device

This device is subject to European Directive 2012/19/EU and may not be disposed of with general household garbage. If you do not know where to dispose of the device at the end of its lifespan, contact your municipality, local waste management provider, or vendor.

Cleaning

To clean the device, use an anti-static cloth. Please avoid cleaning liquids as they might damage the surface or internal electronics of the device.

**Connecting the device:** See Fig. B.

Initializing

1. See Fig. C.
2. Settings depend on the soft client used.

For more information see <https://service.snom.com>

DEUTSCH

Copyright, Markenrechte, Haftungsausschluss

© 2023 Snom Technology GmbH. Alle Rechte vorbehalten.

Snom sowie die Namen der Snom-Produkte und die Snom-Logos sind gesetzlich geschützte Marken der Snom Technology GmbH.

Produktspezifikationen können ohne Vorankündigung geändert werden. Snom Technology GmbH behält sich jederzeit das Recht auf Überarbeitung und Änderung

