

# Is my call held on the A100M headset when I disconnect the Quick Release connection

The **Quick Release** connection to the Snom Headsets "A100M" and "A 100D" are used for fast connection and disconnection at classic call center workstations.

- If the connection is disconnected during a call, nothing happens.
- The call is neither put on hold nor terminated. It simply continues to run.
- After reconnecting, the call can be continued.



## Further Information

- [VoIP Essentials](#)
- [Visit the Snom Forum](#)
- [Open a support ticket](#)
- [Find a local partner](#)

## Related articles

- [A150 / A170 DECT Encryption](#)
- [ACPJ - A100 M/D Adapter Cables](#)
- [ACPJ25 - A100 M/D Adapter Cables](#)
- [ACUSB - A100 M/D Adapter Cables](#)
- [Headsets How-to](#)
- [How do I do that with the home office](#)
- [How to assign functions to the A190 buttons](#)
- [How to configure the Voice prompt on the A190 headset](#)
- [How to send the ringtone to a Bluetooth Jabra headset](#)
- [How to setup the A170 Earpiece Ringer](#)
- [Is my call held on the A100M headset when I disconnect the Quick Release connection](#)
- [Misc FAQ](#)
- [Misc How-to](#)
- [Misc PBX How-to](#)
- [What is the difference between settings\\_refresh\\_timer and prov\\_polling\\_period? How do they relate to each other?](#)
- [Why can't I login to SRAPS](#)