

snom



User Manual
IP Phone D815W

TABLE OF CONTENTS

Copyright, Trademarks, GPL, Legal Disclaimers	7
Important information	8
Safety instructions	8
Standards conformance	9
Product specifications	11
Disposal of the device	12
Cleaning	12
Setting up the phone	13
Delivery Content	13
Attaching and detaching the footstand	13
Wall mounting	14
Rotating the tab of the cradle	14
Connecting the phone	15
Removing the protective film from the display	16
Connecting a headset	16
Initializing and registering the phone	18
Prerequisites	18
Initialization	18
What to do if initialization and registration are unsuccessful	22
Correcting the clock	22
Getting to know your phone	23
At a glance	23
LED indicators	25
Call indicator	25
Function key LEDs	25
Hard keys	26
Context-sensitive, programmable function keys	26
Navigation, confirmation, and cancel keys	26
Dedicated keys	26
Audio Control Keys	27
SmartLabel Keys (freely programmable function keys with LEDs)	27
Alphanumeric Keypad	28
Input modes and navigation	28
Entering numerals, letters, special characters, and symbols	29
Display layout	30
In idle mode	30
When the phone is active	32

SmartLabels	33
Settings	34
Phone settings	34
Settings available in administrator mode	35
Settings available in user mode	36
Display settings	37
Adjusting the backlight on the phone's display	37
Adjusting the color and opacity on the phone's display	38
Adjusting the theme on the phone's display	40
Opening the web interface	42
How the web interface works	43
User mode/administrator mode	45
Directories	47
Directory	47
Definitions, explanations	47
Directory entries	47
Contact Types	48
Outgoing identity	48
Group	48
Ringtones	48
Adding/Editing Entries on the Phone	49
Adding new entry manually	49
Adding new entry from call list	49
Adding current caller	50
Sorting entries	50
Editing existing entry	51
Deleting an entry	52
Adding/editing entries on the web interface	54
Adding new entry	54
Editing an entry	55
Deleting entry on web interface	56
Dialing from phone directory	56
Deleting whole directory	56
Importing/Exporting Directory	57
External directories	57
LDAP	57
Contacts	57

- Using the phone 59**
- Making calls 59
 - Selecting identity for current outgoing call 59
 - Using different audio devices 59
 - Handset 59
 - Headset 59
 - Speakerphone 59
 - Using different dialing methods 59
 - Auto dial 59
 - Redialing 60
 - Calling number from call history (missed, received, dialed calls) 60
 - Calling number from phone directory 60
 - Calling number from external directory 60
 - Speed dialing 61
 - Calling emergency numbers 61
 - Call completion 61
 - QuickLookup (number guessing/auto completion) 62
- Accepting calls 63
 - Using different audio devices 63
 - Automatically accepting calls 63
 - Call pick-up from another extension 63
 - Call waiting 64
- Active calls 67
 - Hold 67
 - Conference 68
 - Transferring calls 70
 - Attended transfer 70
 - Blind transfer 72
- Terminating calls 73
- Missed calls 73
- Call lists 75
- Locking and unlocking the keyboard 76
- Rejecting or redirecting incoming calls 77
 - Manually 77
 - Automatically 77
 - Rejecting anonymous calls 77
- Call forwarding 79
 - Making/changing the settings on the phone and turning on call forwarding .80
 - Turning off call forwarding 81
 - Turning forwarding of all calls on/off with a function key or SmartLabel key .81

Configuring the function keys	82
Function key types on Snom phones	82
Function key page of phone's web interface	84
Programming the function keys	85
Function key settings on the phone	85
Function key settings on the web interface	89
Selected examples for function key programming	90
Example 1, Extension monitoring and call pick-up	91
Example 2, Speed dialing	93
Example 3, Changing setting of context-sensitive key	95
Display options for SmartLabel keys	96
Settings on the phone	96
Display mode settings	96
Timer setting for returning display mode to default	98
Timer setting for returning label page to page 1	99
Settings on the web interface	101
Customizing the phone settings	102
Identities/accounts	102
Configuring and editing identity/account	102
Assigning ringtones	104
Date and time formats	105
Date	105
Time	106
Time zone	106
Language settings of phone and web interface	107
Phone language	107
Web interface language	108
Dial tones	108
Emergency numbers	108
Keyboard Locking	109
Call forwarding	110
Call completion	111
Call waiting	113
Hiding my caller ID	114
Rejecting anonymous calls	115
QuickLookup	115
Speed dial	116

Software update	118
Manual update	118
Auto provisioning	118
SRAPS	118
Troubleshooting	119
Reboot	119
Hard reboot	119
Reset to factory values	119
TFTP Update	119
Manual initialization	119
Contacting Snom Support	120
Traces	120
Appendix 1 - Display Symbols and Icons	122
Symbols found in the function key line	122
SmartLabel function symbols	125
Display indications	128
Symbols found in the Info/Status bar	129
Appendix 2 - Status Messages	130
Appendix 3 - Wall Mounting	131
Appendix 4 - Programmable Functions	133
Freely programmable functions	133
Key Events	137
Appendix 5 - GNU General Public License.....	140

Copyright, Trademarks, GPL, Legal Disclaimers

© 2024 Snom Technology GmbH

All Rights Reserved.

Snom, the names of Snom products, and Snom logos are trademarks owned by Snom Technology GmbH. All other product names and names of enterprises are the property of their respective owners.

Product specifications are subject to change without notice.

Snom Technology GmbH reserves the right to revise and change this document at any time, without being obliged to announce such revisions or changes beforehand or after the fact.

Texts, images, and illustrations and their arrangement in this document are subject to the protection of copyrights and other legal rights worldwide. Their use, reproduction, and transmittal to third parties without express written permission may result in legal proceedings in the criminal courts as well as civil courts.

When this document is made available on Snom's web page, Snom Technology GmbH gives its permission to download and print copies of its content for the intended purpose of using it as a manual. No parts of this document may be altered, modified or used for commercial purposes without the express written consent of Snom Technology GmbH.

Although due care has been taken in the compilation and presentation of the information in this document, the data upon which it is based may have changed in the meantime. Snom therefore disclaims all warranties and liability for the accurateness, completeness, and currentness of the information published, except in the case of intention or gross negligence on the part of Snom or where liability arises due to binding legal provisions.

Our firmware includes some source code that may be used and modified by anyone and everyone under the GNU Public License (GPL) (see "Appendix 5 - GNU General Public License" on page 140), provided they, in turn, make it available to everyone else with the same licensing agreement. Please go to <https://www.snom.com/en/footer/discover-snom/gtc/source-code-gpl-open-source/> for the original GPL license and the source code of components licensed under GPL and used in Snom products.

Important information

Please read the instructions on safety and disposal and on how to set up and use the device before using it and also give them to other users to read or inform those users of their contents. Save this manual and do not give the device to third parties without it.

The nameplate is located at the bottom or rear of the product.

Safety instructions

Follow the instructions in this manual and other applicable documentation of the device.

- This device is designed for professional use.
- **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **Warning:** The product included (ITE) in this manual is to be connected only to PoE networks without routing to the outside plant.
- The socket outlet for the power adaptor must be near the equipment and easily accessible.
- Mount the device only at heights not exceeding 2m.
- Follow the instructions in this manual and other applicable documentation of the device.
- If the phone is not supplied with power via an Ethernet cable, use only a power adapter expressly recommended by Snom Technology (see "Product specifications" on page 11). Other power supplies may damage or destroy the phone, affect its behavior, or induce noise.
- Avoid placing the cables where people may trip over them or where they may be exposed to mechanical pressure as this may damage them.
- This device is for indoor use only! NOT FOR OUTDOOR USE!
- Do not install the device in rooms with high humidity (for example, in bathrooms, laundry rooms, or damp basements). Do not immerse the device in water and do not spill or pour liquids of any kind onto or into the device.
- Do not install the device in surroundings at risk for explosions (paint shops, for example). Do not use the device if you smell gas or other potentially explosive fumes.
- Do not use the device during thunderstorms. Lightning striking the power grid may cause electric shocks.
- **Warning:** The handset contains a magnet, and its earpiece may attract small dangerous objects such as needles or pins. Please ensure before each use that no such objects are present.

SELV (Safety Extra Low Voltage) compliance

Safety status of input/output connections comply with SELV (Safety Extra Low Voltage) requirements.

Warning: To avoid electric shock, do not connect safety extra-low voltage (SELV) circuits to telephone-network voltage (TNV) circuits. LAN ports contain SELV circuits, and PSTN ports contain TNV circuits. Some LAN and PSTN ports both use RJ-45 (8P8C) connectors. Use caution when connecting cables.

Standards conformance



This device complies with the essential health, safety, and environmental requirements of all relevant European directives and UK legislation. The declaration of conformity can be downloaded at <https://www.snom.com/conformity>.

You can download the declaration of conformity at www.snom.com/conformity.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

This phone is FCC Class A verified and meets US health, safety, and environmental standards.

Unauthorized opening, changing, or modifying the device will cause the warranty to lapse and may also result in the loss of CE, UKCA, and ISED conformity and the FCC verification. In case of malfunction contact authorized service personnel, your seller, or Snom.

Additional Information U.S.A.

FCC Part 15

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Privacy of communications may not be ensured when using this phone.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To ensure safety of users, the FCC/ISED has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product.

This product has been tested and found to comply with the FCC/ISED criteria. The handset may be safely held against the ear of the user.

RF Radiation Exposure

This VoIP Phone complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. Caution: To maintain compliance with the radio frequency exposure requirement, the phone shall be installed and used so that parts of user's body other than hands keep a distance of 20 cm or more.

FCC Part 68

Consumer Information

- a. This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
- b. An applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e., RJ45C) in the packaging with each piece of approved terminal equipment.
- c. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant LAN cable (RJ45) and modular plug is provided with this product. An RJ45 jack should normally be used for connecting to the SIP equipment through the LAN cable. See installation instructions for details.
- d. If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
- e. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
- f. Should you experience trouble with this equipment, please contact
Snom Technology GmbH
1 (339) 227-6160 (select option 2)
for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
- g. Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified.
- h. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.
- i. **NOTICE:** If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this device does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
- j. This equipment is hearing aid compatible.

NOTICE: According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrestor is recommended.

Additional Information Canada

Industry Canada

This Class A digital apparatus complies with Canadian requirements: CAN ICES-003 (A)/NMB-003(A). Cet appareil numérique de la classe A est conforme à la norme CAN ICES-003 (A)/NMB-003(A) du Canada.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Privacy of communications may not be ensured when using this telephone.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

RF Radiation Exposure

This VoIP phone also complies with Industry Canada RSS-102 with respect to Health Canada's Safety Code 6 for human exposure to radiofrequency electromagnetic energy.

To maintain compliance with the radio frequency exposure requirement, the phone shall be installed and used so that parts of user's body other than hands keep a distance of 20 cm or more.

Product specifications

- **Safety:** IEC 62368-1
- **Wireless LAN (WLAN, WiFi):** 802.11b/g/n/a/ac
 - **Radio frequency (RF) bands:**
 - EMEA: 2412–2472 MHz, 5150–5850 MHz
 - US: 2412–2462 MHz, 5150–5850 MHz
 - **Max. transmission power:**
 - 2.4G Wi-Fi: 18dBm (U.S. & EMEA)
 - 5G Wi-Fi B1: 16dBm (U.S. & EMEA)
 - 5G Wi-Fi B2: 16dBm (U.S. & EMEA)
 - 5G Wi-Fi B3: 16dBm (U.S. & EMEA)
 - 5G Wi-Fi B4: 16dBm (U.S. & EMEA)
- **Ethernet:** 2 x IEEE 802.3 / 1 Gigabit Ethernet switch
- **Power:** Power over Ethernet (PoE), IEEE 802.3af, Class 3. If PoE is not available, the following power adapter (not included in delivery) can be ordered separately:
 - Mass Power, model NBS12E050200UV (U.S.)
- **Connectors:**
 - 2 x RJ45 (Ethernet): 1 x LAN, 1 x PC
 - 2 x 4P4C for handset and optional wired headset (headset not included)
 - 1 x RJ12 for Snom EHS Advanced
 - 2 x USB 2.0 ports, type A
 - 1 x coaxial power connector DC 5V (power adapter not included)

Disposal of the device




This device is subject to European Directive 2012/19/EU and may not be disposed of with general household garbage. If you do not know where you may dispose of the device at the end of its lifespan, contact your municipality, your local waste management provider, or your seller.

Cleaning

To clean the device, use an anti-static cloth. Please avoid cleaning liquids as they might damage the surface or internal electronics of the device.

Setting up the phone

Delivery Content

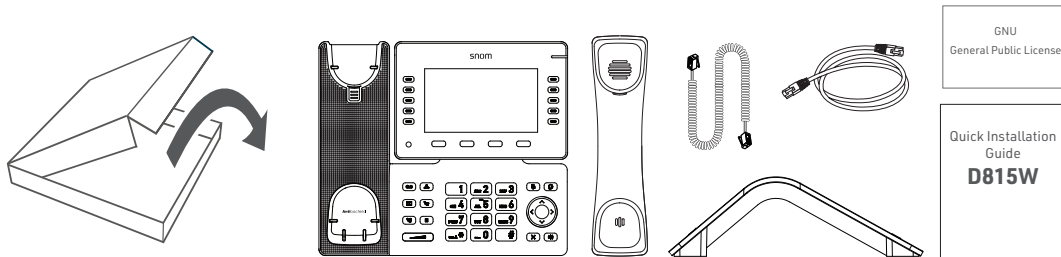


- Base phone unit
- Footstand
- Handset
- Handset cord
- Ethernet cable
- Quick Installation Guide, GNU General Public Licence


Attaching and detaching the footstand

The footstand can be attached at two different angles: 46° and 28°.

Note: Before attaching the footstand to the phone, plug the long end of the handset cord into the connector labelled "☞" on the back of the phone and place the cord in the cable guide.

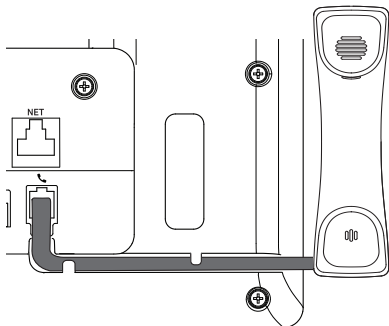

1. Place the top of the grooves on the footstand below the slideguides on the back of the phone.
2. Push the footstand upwards onto the slideguides until they lock in place.

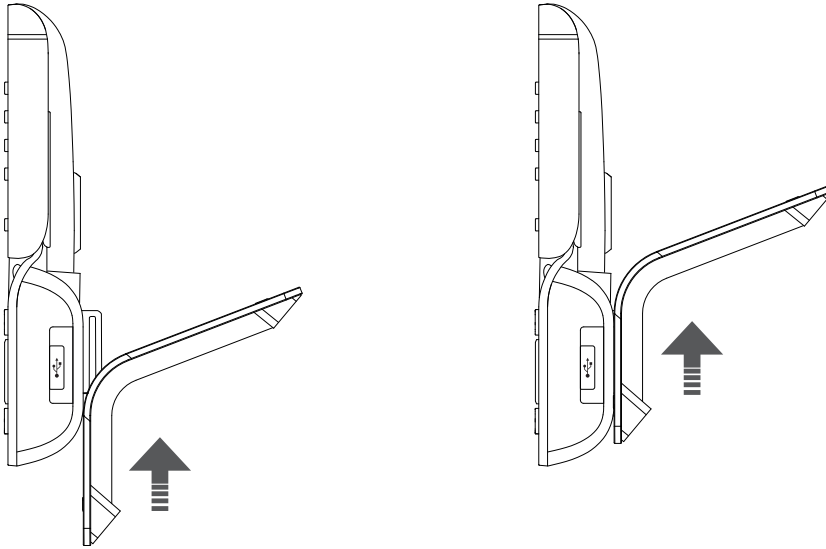

3. Plug the short end of the handset cord into the connector on the handset.
4. Place the phone on an even, horizontal surface.

Wall mounting

See "Appendix 3 - Wall Mounting" on page 131.

Rotating the tab of the cradle

The phone is delivered with the tab level with the inner edge of the cradle. If you are going to mount the phone on a wall, we recommend that you rotate the tab 180°. After rotation, the tip of the tab will protrude slightly above the edge of the "cradle". The small rectangular hole in the receiver casing fits perfectly over the now protruding tip, holding the receiver safely in place in the upright position on the wall.

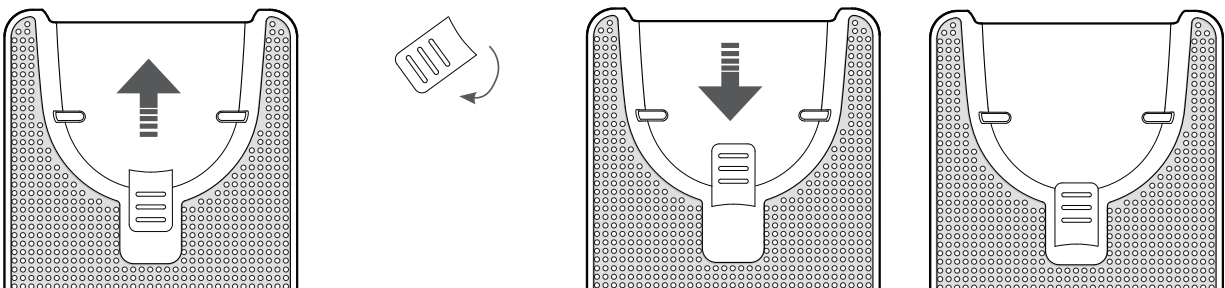



Fig. 1

Fig. 2

Fig. 3

1. Slide the plastic tab from the cradle (Fig. 1)
2. Rotate the tab 180°.
3. Slide the tab back into the cradle (Fig. 2). The top of the tab now protrudes slightly above the inner edge of the cradle (Fig. 3), so that it will hold the handset more securely.

Connecting the phone

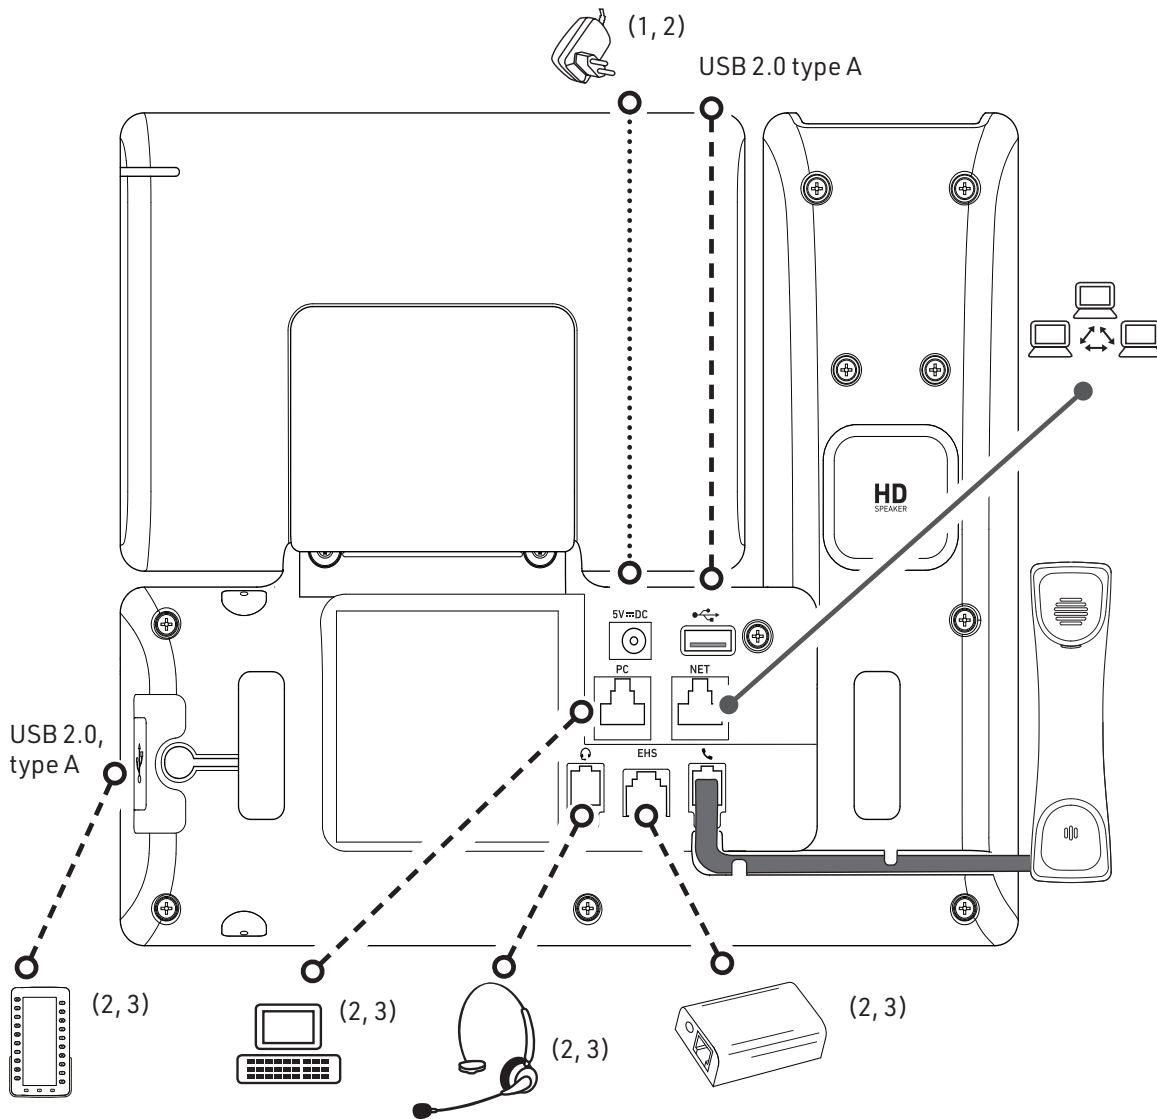


- (1) If PoE not available ●.....●
- (2) Not included in delivery
- (3) Optional ●-----●

The phone can be operated with Power over Ethernet (PoE) provided via the network cable or, if PoE is not available in your network, with the separately available 5V DC power adapter (see "Product specifications" on page 11).

- Plug one end of the Ethernet (network) cable into the RJ45 connector labeled "NET" and the other one into the network side to establish a data link.
If PoE is not available, insert the plug of the power supply into the connector labeled "5V DC" and hook up the plug to the wall outlet.
- The second RJ45 connector, labeled "PC", is for daisy-chaining further Ethernet devices without the need for a second Ethernet connection line.

Removing the protective film from the display

The display is covered by a protective film, either by a one-piece or a two-piece film. Gently pull the tab(s) to peel it off.

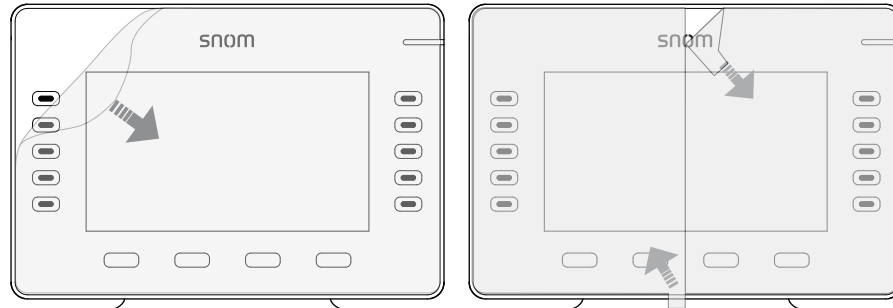

One-piece film

Two-piece film

Note: The display's cover is held in place magnetically for easy removal when necessary for customization or replacement. If the protective film is peeled off with too much force, the cover may become dislodged from the display. Simply put it back into its proper position.

Connecting a headset

You can use wired as well as wireless headsets with the phone.


- Wired headsets

If you want to use a wired headset, connect it to the RJ audio jack labeled .

Note: If both a wired and a wireless headset are connected to the phone, incoming calls will go to the wireless headset.

- Wireless headsets


- Connecting the base station of your headset via the Snom EHS Adapter.

1. Connect the plug labeled **D3xx/D785** on the 2xRJ12 cable that came with the Snom EHS Adapter to the jack marked **EHS** on the phone, and the plug labeled **EHS box** to the Snom EHS Adapter's RJ12 jack. For more information, see the illustrated EHS Advanced Quick Installation Guide at <https://service.snom.com>, **Snom products, Accessories, EHS Wireless Headset Adapter**.
2. Connect the EHS box to the headset's base station with the 2xRJ45 cable also provided with the Snom Advanced.
3. Connect the 4P4C/4P4C audio cable that came with the headset to the phone's RJ audio jack labeled . Connect the other end to the headset's base station. For more information, please refer to the headset's user guide.

- Connecting the headset to the phone via a Bluetooth-compatible adapter.

Insert the adapter into the USB port of the phone. See also the manual of the headset.

Note: The default settings for USB headsets are *VID=0a12:PID=100d:HOOK=38/1*.

- If you are using a different headset, enter the parameters of the headset manually on the phone's web interface at > **Advanced** > **Audio** > text field of **Audio parameters**. Click the question mark  to find out which parameters you need to use for your respective headset.

Initializing and registering the phone

Prerequisites

To be able to use VoIP, you or your company must have:

- A broadband internet connection.
- Access to the internet via a router. This could be a separate device available in various versions from many different manufacturers or in the form of a router on a server or a PC.
- Account information provided by your network administrator or a VoIP account with a VoIP service provider who supports the VoIP SIP standard. The phone supports up to 12 VoIP accounts with one or more VoIP providers.


The registration information received from your Internet service provider or your network administrator may differ and may contain required and optional data. The required data normally includes:

- Account (usually the phone number). On Snom phones, an account is called an "identity".
- Registrar
- Password

User name, authentication name, and outbound proxy may also be required. These are settings that can only be configured on the web interface of the phone after it has been successfully registered. If your provider or your network provides a mailbox account, that setting is also configured on the web interface. For more information, see "Identities/accounts" on page 102.

Initialization

Snom phones are plug-and-play. Once the phone is connected to your network, it will begin to initialize.




Note: Normally the initialization is completely automatic, using DHCP. If the phone cannot discover a DHCP server in the subnet, you will be asked: Are you using DHCP? If your network does not support DHCP, press  and enter the IP address, netmask, IP gateway, and DNS server manually. Ask your Internet service provider or your network administrator for them.

Watch the display and, when asked to, make selections with  and  on the navigation key




and save with




1. You will be prompted in English to select a language. Use  or  to select another language, if applicable, and press  to save the highlighted language.




- 2. Next, you will be prompted to enter a new HTTP username for accessing the phone's web interface.

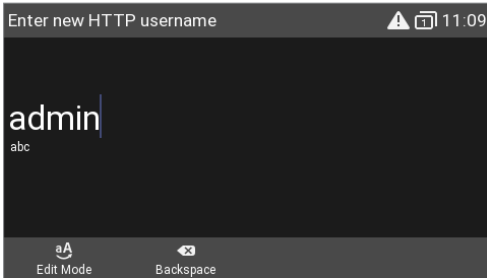


- To keep the default HTTP username "admin", press  -OR-

- Use the keypad to enter a new HTTP username, and then press  (for keypad text entry instructions, see Fig. 2 on page 28 and page 29).

- 3. Next, you will be prompted to enter a new HTTP password for accessing the phone's web interface.

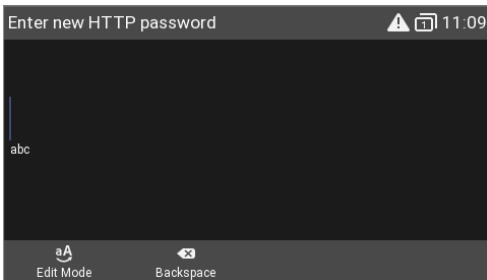

Use the keypad to enter a new HTTP password, and then press . The password must be at least six alphanumeric characters.

- 4. Next, you will be prompted in the language of your choice to select a time zone. This affects the time shown on your display.

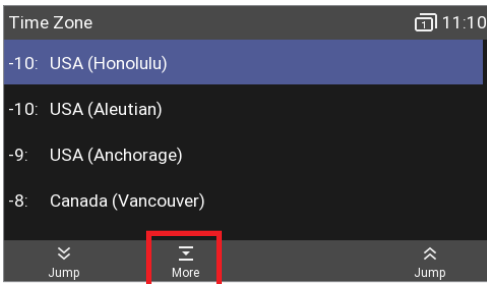


Fig. 1

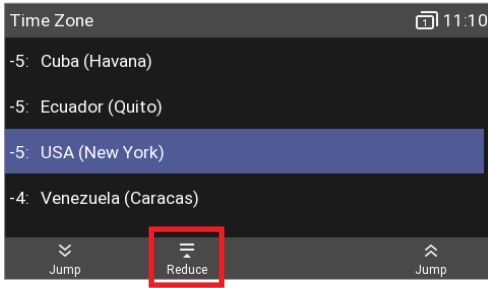


Fig. 2

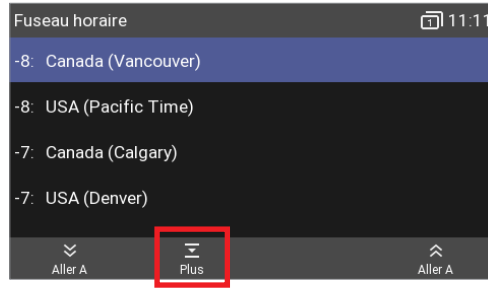









Fig. 3

- Press  or , respectively, on the navigation key to move up or down the list one item at a time; press the function key underneath  or , respectively, to jump to the beginning of the next or the previous time zone.
 - Press the function key underneath  (Fig. 2) to show only those time zones where the selected phone language is spoken. If you have selected English, all time zones are shown.
 - If you have selected a time zone other than English, press the function key underneath  to show all time zones and all countries or cities within the individual time zones, if there are any (Fig. 3).
 - Press  to save the selected time zone, indicated by the blue bar.
5. Next, you will be prompted to select the tone scheme of a country. This affects the dial tone you hear when you pick up the receiver. Different countries use different dial tones.









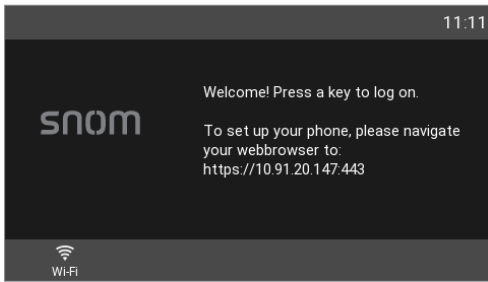

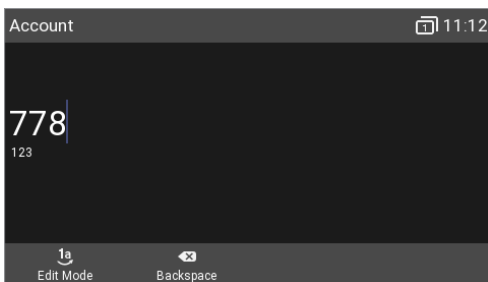


Fig. 4


- Press  or , respectively, to move up or down the list one item at a time.
 - Press  to jump to the last country on the screen; when the last country is selected, press  to jump to the last country on the next screen.
 - Press  to jump to the first country on the screen; when the first country is selected, press  to jump to the first country on the preceding screen.
 - Press  to save the selected country's tone scheme.
6. The display shows the "Welcome" screen. Press any key to log on.

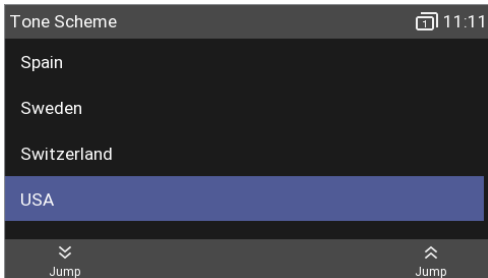



7. Enter the account number and save with .




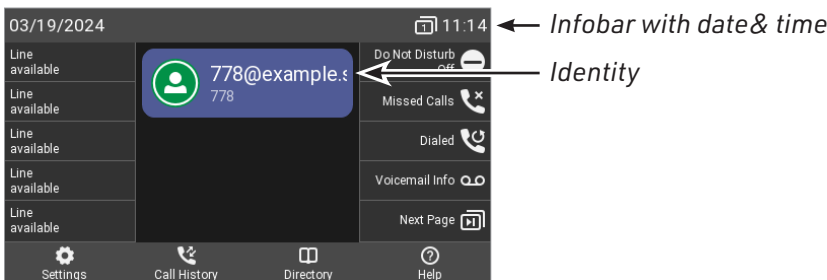
Note: See "Entering numerals, letters, special characters, and symbols" on page 29 on how to enter numbers and letters.

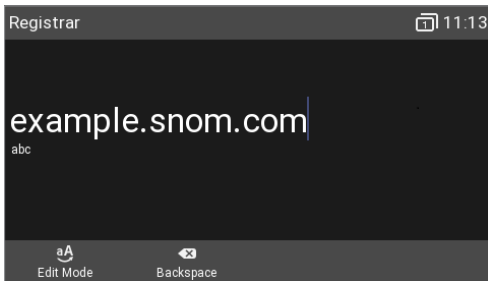

8. Enter the registrar and save with .




9. If required, enter the password received from your Internet service provider or administrator and press .

After successful registration you will see the identity symbol  and the registered account (identity) in the identity line underneath the date/time bar:



Note: If you see the account on the display preceded by  or  and the phone is not working, the server may be down, either for servicing or due to a malfunction. The registration and initialization should be completed as soon as the server is up and running again. You may want to check with your administrator or your provider if nothing happens within a reasonable amount of time.

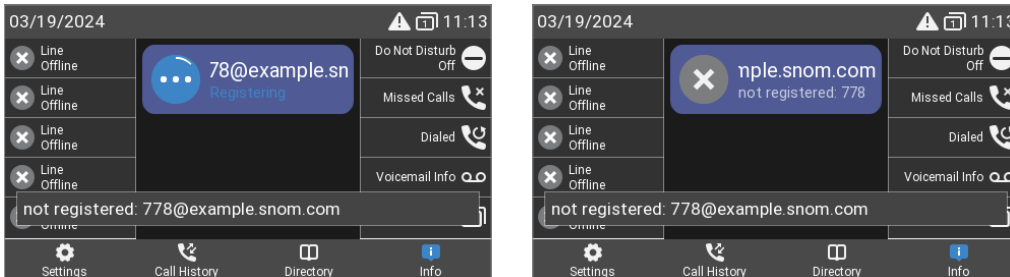

What to do if initialization and registration are unsuccessful

Your network or your VoIP provider may require more login data than requested by the Snom phone during the initialization and registration process. This data is entered on the web interface of the phone. Contact your network system administrator or your VoIP provider for more information.

1. When you have received all necessary data, open the phone's web interface. See "Opening the web interface" on page 42 for more information.
2. Open **Setup > Identity 1** and enter any additional login information you have received from your provider. See "Identities/accounts" on page 102 for more information.

Note: A number of IP telephony service providers and a number of SIP PBXs require settings that are different from Snom's standard factory settings. Snom's web page lists numerous providers and PBXs that have been tested for interoperability with our phones and specific settings that may be required. Do not change the standard configuration unless you know what you are doing. Expert help may be required.

Correcting the clock

The phone receives the time and date from your NTP time server. If the time and/or date on the display are incorrect, you may need to set the correct time zone.

- Changing the settings on the phone and on the web interface: See "Time zone" on page 106.

If the time is still incorrect, there may be a problem with the time server. Contact your network administrator or your IP provider.


Default formats:

- **Time.** 24-hour clock, e.g. 17:35. Changing to AM and PM formats: See "Time" on page 106.
- **Date.** US date format MM/DD/YEAR, eg. 11/23/2024. Changing to European format DD.MM.YEAR, e.g. 23.11.2024: See "Date" on page 105.


Getting to know your phone

At a glance

The factory settings at a glance:

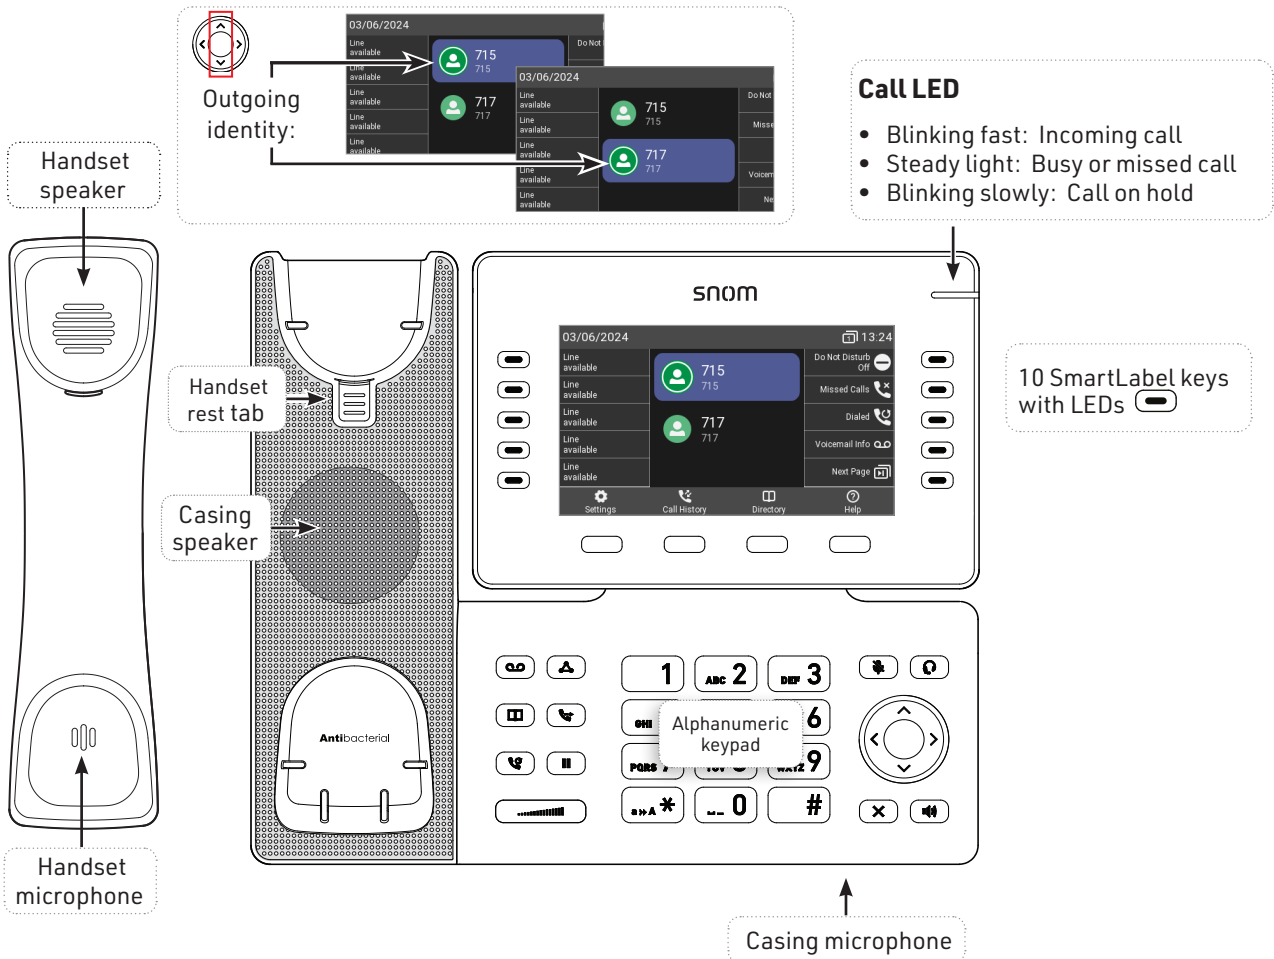



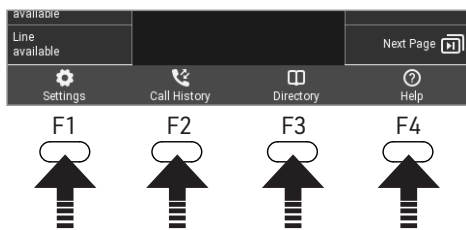


Context-sensitive, programmable function symbols and function keys F1-F4







Press the function key underneath the display symbol to activate the function, open the list etc. depicted by the symbol above the key.



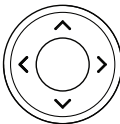
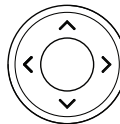
Standard functions available on idle screen. Default settings and icons depend on firmware installed on phone.

-  Settings menu
-  Call History (missed, received, dialed calls)
-  Internal phone directory
-  Status information (call forwarding active, passwords not set, missed calls, etc.) or, if no status info,  to show phone's IP address and URL to the Snom Service Hub





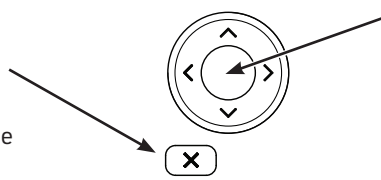

Audio control keys

-  Adjusting the volume
 - of the ringer when the phone is idle or ringing
 - of the handset/casing loudspeaker when in a call
-  Mute/unmute microphone
-  Toggling between handsfree and handset mode. Press to dial number and accept calls on speakerphone.
-  Headset mode on/off

Navigation keys

- Canceling actions & input, and returning to previous screen
 - Terminating calls on speakerphone and in headset & handset modes
- 
- Confirming, saving actions & input, and returning to previous screen
 - Accepting calls on speakerphone and in headset mode
 - **From idle screen: Missed Calls (Call History)**
-
- | | | | | |
|--|--|---|--|--|
|  <p>From idle screen:
Select outgoing identity</p> <p>In other contexts (settings, lists):
Navigate up/down</p> |  | <p>< From idle screen:
Received calls</p> <p>< In other contexts:
Navigate/space left</p> |  | <p>> From idle screen:
Missed calls</p> <p>> In other contexts:
Navigate/space right</p> |
|--|--|---|--|--|


Dedicated, customizable function keys





-  MWI key with LED
 - LED is lit when message is waiting on mailbox (if mailbox supplied on PBX)
 - Press key to listen to message(s)
-  Conference
-  Directory
-  Transfer
-  Redial
-  Hold

SmartLabel keys P1-P40, self-labeling, with LEDs 

Default setting: Line

03/06/2024  13:24

- Fast-blinking LED: Incoming call. Press blinking key or  to accept
- Steadily lit LED: In call
- Slow-blinking LED: Call on hold

- P1-P10 
- P11-P20 
- P21-P30 
- P31-P40 

Default page keys: P10, P20, P30, P40

Next Page 


Star key 

- **In editing mode:** Press briefly to type *
- **On idle screen:** Press for 3 seconds to **lock/unlock the keypad**

LED indicators

Call indicator

The bright-red LED situated on the top right corner of the phone indicates incoming, ongoing, held, and missed calls. LED status indications:

- Blinking rapidly when a call is coming in.
- Glowing steadily when dialing, when in a call, and when you have missed a call. To turn the LED off after a missed call, press the right arrow  on the navigation key to view the **Missed calls** menu and simultaneously turn off the LED.
- Blinking slowly when you have put a call on hold.

Function key LEDs


SmartLabel keys P1–P40


Depending on the function mapped onto the key, the red or green LEDs on the key will be activated when the key event occurs. The factory setting is red LED and "line". The LEDs of a line key:



- blink rapidly when a call is ringing on the line;
- glow steadily when there is an ongoing call on the line;
- blink slowly when a call is on hold on the line;
- are off when the line is free.

When other functions are mapped onto the keys, the LEDs may glow or blink. For example: When the "extension" function has been mapped onto a key and monitoring of extensions is enabled on both phones, the LED:

- blink rapidly when a call is ringing on the extension;
- glow steadily when the extension is busy;
- are off when the extension is not busy.

MWI key : Has a red LED that lights up when there is a new message in the mailbox.

Mute key : Has a red LED that lights up when and as long as the microphone is muted.

Speakerphone  **and headset**  **keys**: Have green LEDs that light up when and as long as speakerphone or headset mode, respectively, are turned on.

Hard keys








Context-sensitive, programmable function keys

These function keys can be programmed on the **Function Keys** page of the phone's web interface with a number of key events; the programmed functions are available when the phone is in idle mode. For more information, see "Configuring the function keys" on page 82. For the factory default settings, see "At a glance" on page 23.

You cannot change the functions that are available when the phone is active, e.g., when you are in a call, when the phone is ringing, etc. Depending on the activity, different functions will be available.





Navigation, confirmation, and cancel keys

can be programmed with the key events available in their drop-down menus. See "Configuring the function keys" on page 82 for further information. Factory settings:

Navigation key	
	<ul style="list-style-type: none">  • On idle screen: Press to select identity for outgoing calls  • In other contexts: Moving up and down lists one item/button at a time
	<ul style="list-style-type: none">  • On idle screen, press to open list of received calls. • In text fields, press to move the cursor to the left one character at a time.
	<ul style="list-style-type: none">  • On idle screen, press to open the list of missed calls and simultaneously turn off the missed call LED • In text fields, press to move the cursor to the right one character at a time.
	<ul style="list-style-type: none"> • On idle screen: Redial (view list of dialed calls). • Press to accept calls on speakerphone and in headset mode. • Press to confirm actions/settings and return to preceding screen.
	<ul style="list-style-type: none"> • Press to terminate calls on speakerphone and in headset and handset modes. • Press to cancel actions and return to preceding screen.

Dedicated keys

The factory settings is printed on the key. Other functionalities can be programmed onto them. See "Configuring the function keys" on page 82 for more information.

	Message Retrieve key. The LED of the key is lit when a new message is waiting on the mailbox. Press the key to retrieve messages.
	Conference. See "Conference" on page 68.
	Directories. See "Directories" on page 47.
	Call transfer of active call. See "Transferring calls" on page 70 for further information.

	Redial. Press to show the dialed calls, in descending order with the last one at the top of the list.
	Hold key. See "Hold" on page 67 for further information.

Audio Control Keys

	Press the right or left edge of the key to adjust the volume <ul style="list-style-type: none"> of the ringer when the phone is idle or ringing of the loudspeaker in handset, casing, or headset, respectively, when in call
	Muting and unmuting the microphone
	<ul style="list-style-type: none"> Toggling between handsfree and handset mode Dialing numbers on speakerphone Accepting calls on speakersphone
	Toggling between headset and handset modes. <p>Note: Handset mode overrides headset mode. When the handset is picked up, the headset symbol in the status line will be replaced by the handset symbol, indicating that you can now use only the handset for the call. To return audio to the headset, press again. The headset symbol will reappear in the status line. You can then place the handset in the cradle without ending the call.</p>

SmartLabel Keys (freely programmable function keys with LEDs)

These 40 SmartLabel keys – five each on the left and right side of the display – control the SmartLabels (see "SmartLabels" on page 33). They can be programmed and labeled on the phone and on the **Function Keys** page of the phone's web interface. Four different functions for each key can be set on four "pages." For information on how to map functions onto these keys, see "Configuring the function keys" on page 82. The factory default setting is line, except for keys P6–P10 which are preprogrammed with the following functions:

Do Not Disturb	Turn "do not disturb" (DND) mode on and off for all identities registered on the phone (Fig. 1). If you want to turn on DND for one or more, but not all of the identities (Fig. 2), use the Configuration identity settings on the phone's web user interface. In DND mode incoming calls do not ring; callers hear the busy signal. <p>Exception: Phone numbers on your directory's VIP list (see "Contact Types" on page 48).</p> When DND is on, you'll see the DND symbol on the display.
	<p>Fig. 1 - DND active</p>
	<p>Fig. 2 - DND active for one of the configured identities</p>

Missed Calls	Displays a list of missed calls and simultaneously turns off the missed call LED.
Dialed	List of dialed calls for redialing, last-dialed call at the top of the list.
Voicemail Info	Displays the Voice Mail screen.
Next Page	Displays the next page of SmartKeys (cycles through page 1 to 4).

Alphanumeric Keypad

Input modes and navigation

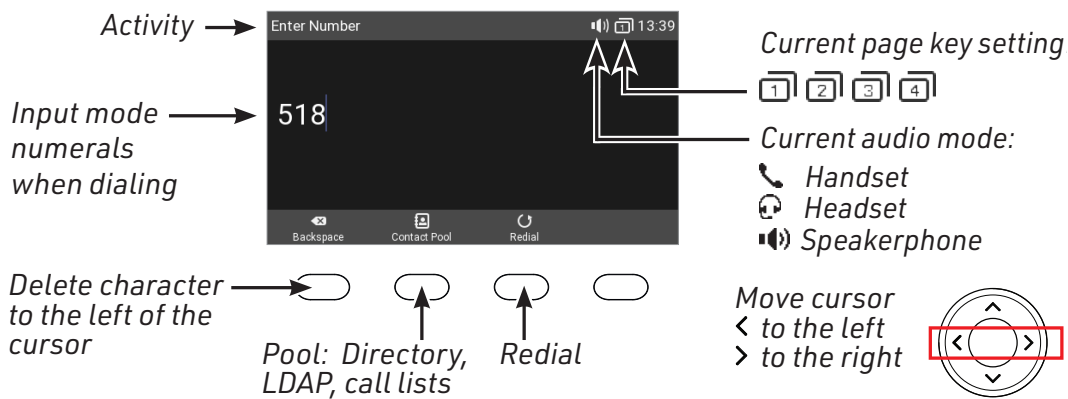


Fig. 1

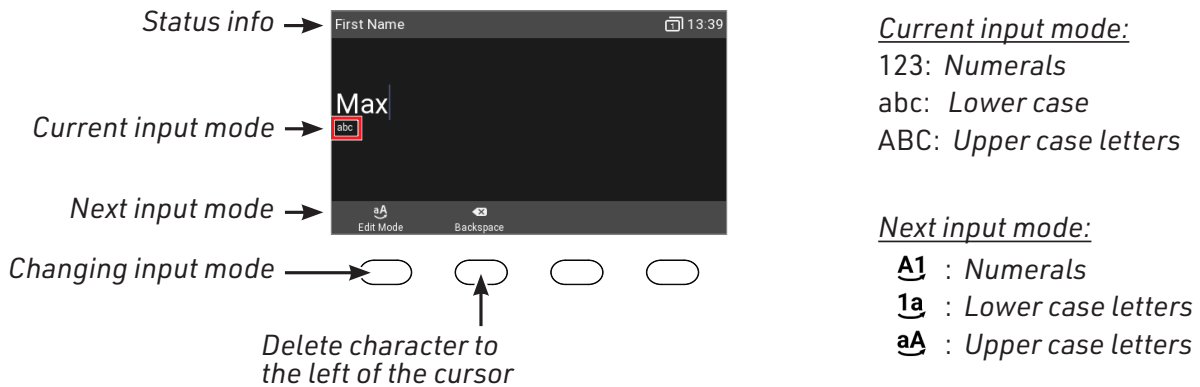


Fig. 2

Press any key on the alphanumeric keypad or pick up the handset to open the "Enter Number" screen. When dialing a number (Fig. 1), the input mode is always numerals. When editing directory entries (Fig. 2) and identities, the current input mode is indicated in the line underneath the cursor. Press the left function key underneath the display to switch to the next input mode.

Text underneath cursor = current input mode	Press function key to switch to next input mode	Next input mode
123	1a	abc
abc	aA	ABC
ABC	A1	123

Entering numerals, letters, special characters, and symbols

When entering letters and special characters, pause briefly after each character until the cursor has moved forward so that you won't overwrite the last character you entered. Pausing is not necessary when entering numerals.

Numerals. In numeral mode, press the respective number key to type the number printed on the key.

Letters. In input modes lower and upper case letters, press the alphanumeric key with the respective letter one, two, three, or four times quickly to type the first, second, third, or fourth letter printed on the key. Pause briefly after each letter.

Example: In lower case letter mode, press the "2" key once to type an "a", twice to type a "b", and three times to type a "c".

Letters with accents and umlauts. In input modes lower and upper case letters, press the alphanumeric key with the basic form of the respective letter as many times as necessary. Pause briefly after each letter. Available letters with accents and umlauts depend on the phone's language setting.

Example: If the phone language is German, press key "2" four times to type "ä".

Entering special characters and symbols. In input modes lower and upper case letters, press keys "0" and "1" one or more times quickly. Pause briefly after each character or symbol.

- Period. Press "1" once.
- Space (" "). Press "0" once.
- Underscore ("_"). Press "0" twice.
- Special characters listed in the following table. Press "1" as many times as indicated:

1x	.	2x	+	3x	@	4x	1	5x	:	6x	,		
7x	?	8x	!	9x	-	10x	_	11x	/	12x	\	13x	(
14x)	15x	;	16x	&	17x	%	18x	*	19x	#		
20x	<	21x	=	22x	>	23x	\$	24x	[25x]		

Display layout

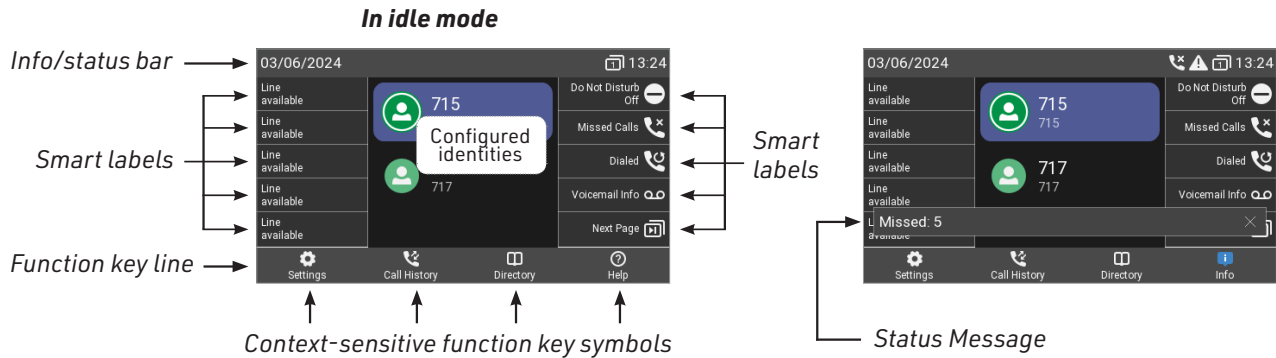


Fig. 1

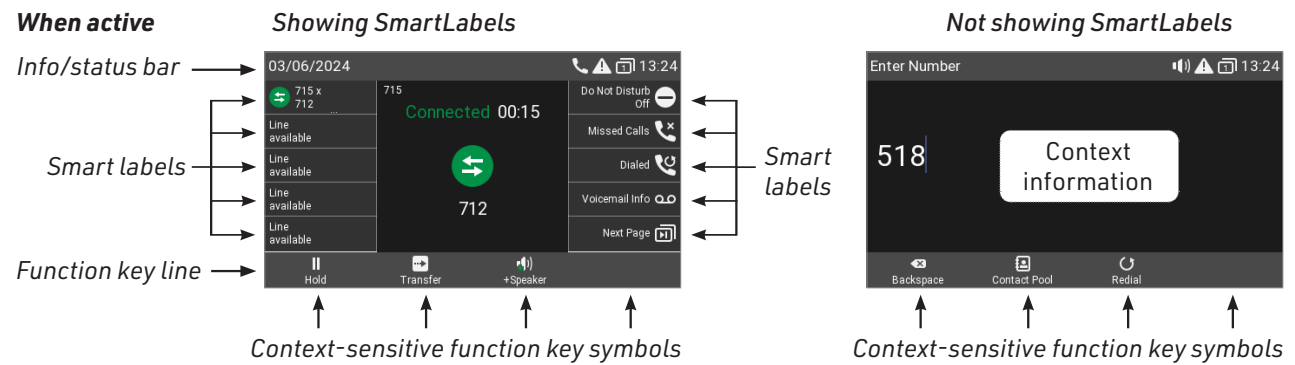


Fig. 2



In idle mode



In idle mode, the display presents the following information:

Info/status bar

- Date
- Time
- Screen icons that indicate the phone's current status (see "Symbols found in the Info/Status bar" on page 129).

Context area: Configured identities and SmartLabels.

 	<p>Outgoing identity</p> <p>The current outgoing identity is indicated by a green ring around a green circle on a blue bar. When you call someone, this is your identity for the call.</p> <p>Active identity</p> <ul style="list-style-type: none"> • An active identity that is not the current outgoing identity is indicated by a green circle. • It can be called. • It can be selected as the outgoing identity for making calls by pressing ∨ / ^ on the navigation key.
---	---

	A blue circle with a revolving white ring indicates that the identity is trying to register.
	A gray circle with a white "x" indicates that the identity is not properly registered. Check your connections and whether the server is down.

Note: Identities can be deactivated without removing the registration settings by changing their status to "inactive" on the phone's web interface. Inactive identities are not displayed on the idle screen. They cannot be called or selected as the outgoing identity.

1. To deactivate the identity, open the phone's web interface > **Setup** > **Identity** (1-12).



2. Change the "Identity active" setting to **off**.
3. Click **Re-Register**.
4. Click **Save**.







For information on configuring new identities or modifying existing ones, see "Identities/accounts" on page 102. The default setting for the SmartLabel keys controlling the information shown on the SmartLabels is "Line", except for keys P5–P10, P20, P30 and P40. For more information on the labels, see "SmartLabels" on page 33; for information on mapping other functions onto the keys, see "Configuring the function keys" on page 82.

Status messages

When there are status messages: Any of numerous messages concerning the current status of the phone might be displayed in this line, for example the availability of a firmware update, a reboot being required, etc. If there is more than one current status message at any one time, the one with the highest priority will be shown. Some of the status messages you may see in idle mode are:









- The text "Missed:" and the total number of missed calls since the last time you turned off the missed call indication (the text in the info bar as well as the call LED). The missed calls will remain in your missed call list, however.
- The warnings "HTTP Password not set" and "Admin Password not set". They can be turned off by setting the passwords or manually on the phone's web interface (administrator mode only; not recommended due to increased security risk).

Deleting or temporarily suppressing status messages:

- Messages will be deleted automatically when the underlying cause is removed, i.e., call forwarding is turned off, HTTP password is set, etc.
- Temporarily suppressing messages: Press , if the button is available, or  > **Information** > **Status info** to open the "Status info" screen. Use   to select an item from the list. Press  to view details of the selected item, if available; press  to delete the selected item.
- Messages classified as important cannot be deleted. Examples: "HTTP Password not set", "Admin Password not set".

Function key line

The symbols on the buttons in this line depict the functions that can be activated by pressing the function key underneath the respective symbol. See "Appendix 1 - Display Symbols and Icons" on page 122 for a complete list. The factory defaults are:

	Settings menu.
	Call History. See "Call lists" on page 75.
	Directory. See "Directory" on page 47.
	Pressing this key will put the IP address of the phone on-screen. If another function is mapped onto the key or if the key has been replaced by  because of new status messages, IP address and URL can also be looked up in the settings menu:  > Information > Help .
	Displaying all currently available status messages. This key is available whenever a status message becomes newly available even when a different function is mapped onto the far-right function key underneath the display. Press the key to display the status messages; press  to delete the highlighted status message. When all messages have been deleted, the symbol will disappear from the function key line; the message in the status line will also disappear. The function mapped onto the key is now available on this key again. If you have mapped the "Info" function onto the key, the key will remain blank until a new status message becomes available or until a reboot when all current status messages will be displayed anew.

When the phone is active

The display will inform you of any activity the phone is engaged in (see Fig. 1 on page 30). This information is presented in the form of text or symbols or both.

Info/status bar. Name of current activity, time and screen icons.

Context area

Depending on the activity, this area will contain symbols (incoming call ringing, outgoing call ringing, list entries, etc.) and text like the phone number calling, the extension number being called, conference partners, etc. Depending on the context, the SmartLabels will or will not be shown.

Function key line

Depending on the current activity of the phone, the function key line will present various functions that can be activated by pressing the function key underneath the respective symbol. See "Appendix 1 - Display Symbols and Icons" on page 122 for a list of available functions.

SmartLabels

When the phone is idle, and in some contexts when it is active, the labels of the SmartLabel keys are displayed on four (4) "pages" in ten (10) label areas each, five on each side of the display (Fig. 1).

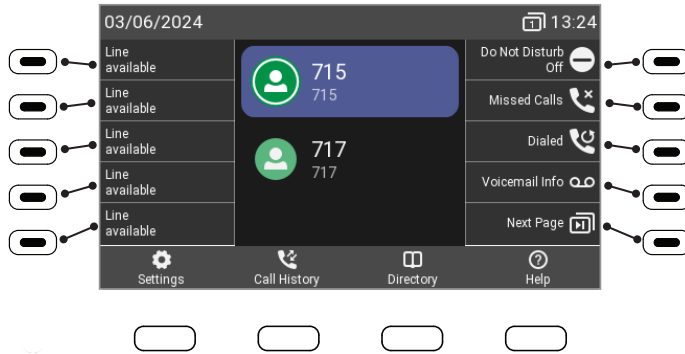









Fig. 1

The LED of the key  associated with the label will react in accordance with the label's mapping, i.e., the function assigned to the key on a given page; pressing the key may affect what you see on the label.

By default, the lower right key on each page, keys P10, P20, P30, and P40, serves to switch to the next page, from 1 to 2, 3, and 4 and back to 1. The number of the on-screen page, , , , or , is indicated to the left of the time. The default is .

NOTE: You can assign the **Next Page**  function to another key but one key on each page must have the function if you want to be able to use more than one page.

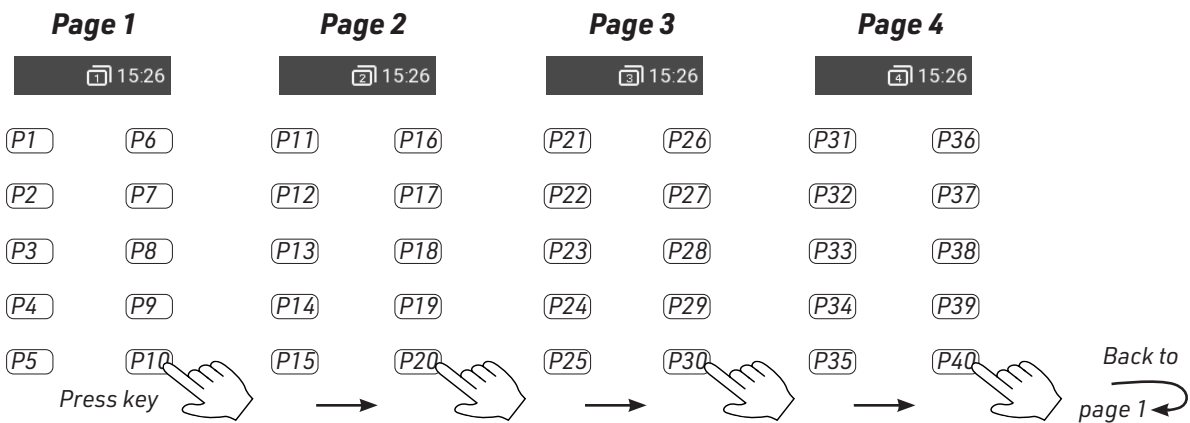





Fig. 2

The function keys can be mapped on the phone and, faster and more comfortably, on the phone's web interface. For information on programming the function keys, see "Configuring the function keys" on page 82.

Settings

Many settings can be adjusted on the phone and on the phone's web interface while some are available only on the phone or its web interface.

Phone settings

Press  to open the settings menu on the display. To open submenus and settings, press  / 
to scroll to the submenu/setting and press .

Settings available in administrator mode

All settings of the phone menu and on the phone's web interface are accessible.

1 Preferences	2 Call Features	3 Identity	4 Network	5 Maintenance	6 Information
1 Language	1 Call forwarding	1 Select Outgoing Identity	1 IP Settings	1 Security	1 Status Info
2 Date & Time	1 Forward All	2 Reregister Identity	1 IPv4	1 Administrator Mode On ⁽²⁾	2 System Info
1 Time Zone	2 Forward when Busy	3 Edit Identity	2 IPv6	2 Set keyboard lock PIN	3 Demo Mode
2 Date Format	3 Forward after Timeout	1 Hotdesking	2 Webserver	2 Reboot	4 Help
3 24 Hour Clock	2 Outgoing calls	2 Edit Identity	1 Webserver On/Off	3 Reset Values	
3 Audio	1 Auto Dial	4 Log Off Identity	2 Webserver Type	4 Synchronize Settings	
1 Headset Detection	2 Auto Busy Redial	1 Log Off all Identities	3 Username		
2 Tone Scheme	3 Call Completion	2-13 (select individ. identity)	4 Password		
3 Ringer	4 Hide Outgoing ID		3 VLAN		
4 Volume Settings	3 Incoming calls		1 VLAN ID		
4 Display	1 Call Waiting		2 VLAN Priority		
1 Primary Display⁽¹⁾	2 Auto Answer		4 WLAN		
1 Backlight on Activity	3 Reject Anonymous		1 WLAN On/Off		
2 Backlight When Idle	4 Silent mode		5 Advanced		
3 SmartLabel Options	5 Do Not Disturb		1 802.1X		
Idle Screen Behavior	4 Speed dial		2 Hardware		
Call Screens Behavior			3 NTP		
Other Screens Behavior			4 DNS		
Return to Default Mode			5 LLDP		
Return to First Page	5 Function Keys				
4 Color and Opacity	1 Context-Sensitive Keys				
5 Themes	2 Dedicated Keys				
2 Expansion modules⁽¹⁾	3 SmartLabel Keys				
1 Backlight on Activity ⁽¹⁾	1-4 Page 1-4				
2 Backlight When Idle ⁽¹⁾	4 Expansion Keys ⁽¹⁾				
3 Appearance ⁽¹⁾	6 General				

⁽¹⁾ Only when a D8C expansion module is connected.

⁽²⁾ Pressing this key will put the phone in user mode; many settings will not be accessible (see next page).

The administrator password will be needed to return the phone to administrator mode. If you have not yet set the administrator password, then use the HTTP password to return the phone to administrator mode.

NOTE: For security reasons, we recommend that you set your own administrator password. **Be sure to write it down and store it in a safe place** because if it is lost or forgotten, you will not be able to return the phone from user to administrator mode and gain access to all phone settings.

Settings available in user mode

1 Preferences	2 Call Features	3 Identity	4 Maintenance	5 Information
1 Language	1 Call forwarding	1 Select Outgoing Identity	1 Security	1 Status Info
2 Date & Time	1 Forward All	2 Reregister Identity	1 Administrator Mode Off ⁽²⁾	2 System Info
1 Date Format	2 Forward when Busy		2 Set Keyboard Lock PIN	3 Help
2 24 Hour Clock	3 Forward after Timeout		2 Reboot	
3 Audio	2 Outgoing calls		3 Synchronize Settings	
1 Headset Detection	1 Auto Dial			
2 Tone Scheme	2 Auto Busy Redial			
3 Ringer	3 Call Completion			
4 Volume Settings	4 Hide Outgoing ID			
4 Display	3 Incoming calls			
1 Primary Display ⁽¹⁾	1 Call Waiting			
1 Backlight on Activity	2 Auto Answer			
2 Backlight When Idle	3 Reject Anonymous			
3 SmartLabel Options	4 Silent mode			
Idle Screen behavior	5 Do Not Disturb			
Call Screens Behavior	4 Speed dial			
Other Screens Behavior				
Return to Default Mode				
Return to First Page				
4 Color and Opacity	5 Function Keys			
5 Themes	1 Context-Sensitive Keys			
2 Expansion modules ⁽¹⁾	2 SmartLabel Keys			
1 Backlight on activity ⁽¹⁾	1-4 Page 1-4			
2 Backlight when idle ⁽¹⁾	3 Expansion Keys ⁽¹⁾			
3 Appearance ⁽¹⁾	6 General			

⁽¹⁾ Only when a D8C expansion module is connected.

⁽²⁾ Pressing this key will put the phone in administrator mode. The administrator password is needed to return the phone to administrator mode. If you have not yet set the administrator password, then use the HTTP password to return the phone to administrator mode.

Most of the individual settings are described elsewhere in this manual: See "Using the phone" on page 59 and "Customizing the phone settings" on page 102.

Display settings

The backlight on the display of the phone can be adjusted separately for the times when the phone is active and when the phone is idle. The backlight when idle can be reduced to zero bars.

NOTE: When the phone has been inactive for a specified number of seconds, the backlight will return to idle mode. This setting is available only on the phone's web user interface, not on the phone itself.

For the display modes and options of the SmartLabels, see "Display options for SmartLabel keys" on page 96.


Adjusting the backlight on the phone's display

- **Intensity of backlight.** The setting adjusts the intensity of the backlight for both displays.


1. Press .

2. Select **Preferences** and press .


3. Select **Display** and press .

4. If any expansion modules are connected to the phone, select **Primary display** and press .


5. Select **Backlight on activity** or **Backlight when idle** and press .

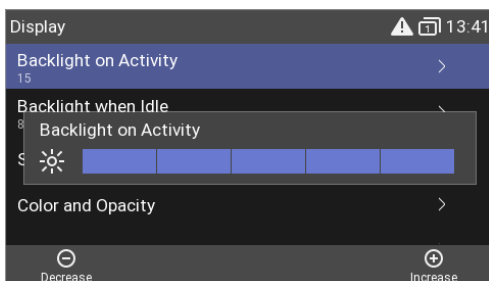

6. Press the right or left arrow on the navigation key or the function key underneath  or  in the function key line to decrease or increase the backlight's intensity.

7. When done, press  to save and return to the **Display** menu.

- **Period of inactivity.** The number of seconds after which the phone will switch from backlight on activity to idle backlight can be set on the phone's web interface only.
 1. Open the phone's web interface (see "Opening the web interface" on page 42).
 2. Click **Preferences** (see "How the web interface works" on page 43).
 3. Click the **Display** tab.
 4. Enter the number of seconds in the text field of **Dim after (in seconds)**. The default is 20 seconds.

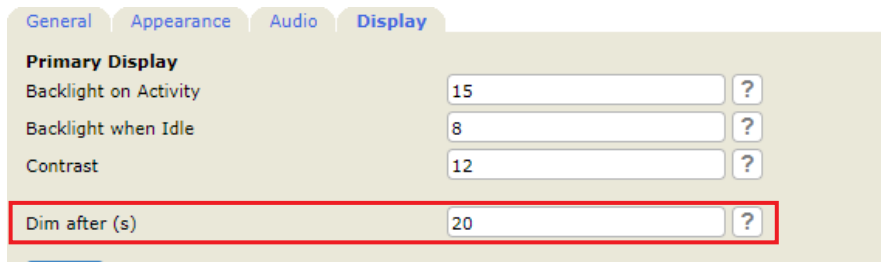

5. Click **Apply** and **Save**.


Adjusting the color and opacity on the phone's display

- **Color.** The setting adjusts the interface colors of items (text, function keys, scrollbar, cursor, etc.) displayed on the screen.

1. Press .




2. Select **Preferences** and press .


3. Select **Display** and press .




4. If any expansion modules are connected to the phone, select **Primary display** and press .


5. Select **Color and Opacity** and press .

6. Select **Color** and press .

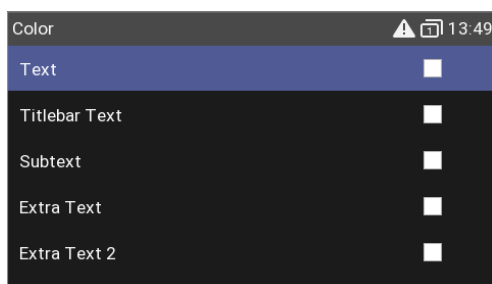7. Press  /  to select an item and press .




8. Press  /  to select a color and press .

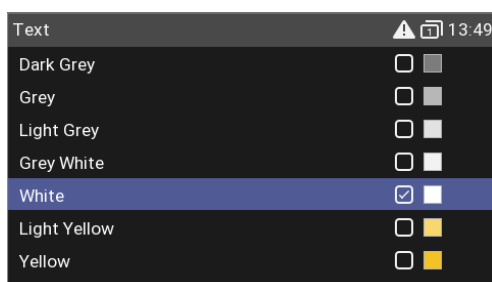


9. If you picked **Custom Color**:

a. Press **∨ / ∧** to select **Red, Green** or **Blue** and press .

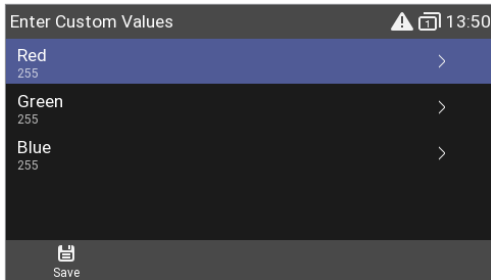

b. Enter a value from 0-255 and press .

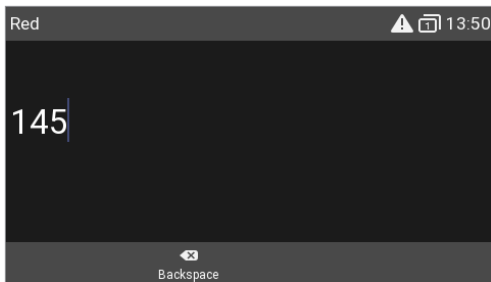

c. Press .

d. To change another color (**Red, Green** or **Blue**), press  and go to step a.


10. Press  to return to the **Color** menu; press  for approx. 3 seconds to return to the idle screen.

- **Opacity.** The setting adjusts the opacity (level of transparency) of items (text, function keys, scrollbar, cursor, etc.) displayed on the screen.

1. Press .

2. Select **Preferences** and press .


3. Select **Display** and press .

4. If any expansion modules are connected to the phone, select **Primary display** and press .


5. Select **Color and Opacity** and press .

6. Select **Opacity** and press .

7. Press **∨ / ∧** to select an item and press .

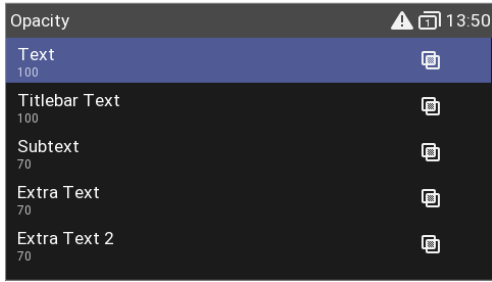

- Enter the opacity value (0-100, where 0 is fully transparent and 100 is fully opaque) and press .


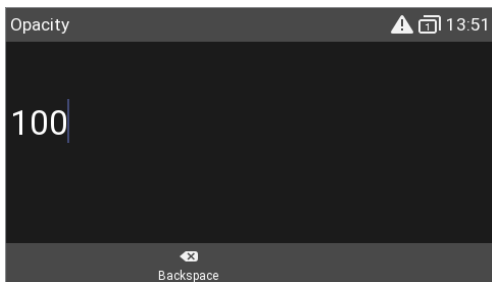


- Press to return to the **Color and Opacity** menu; press for approx. 3 seconds to return to the idle screen.

Adjusting the theme on the phone's display

You can select a display theme (predefined wallpaper and color settings) for the phone.


- Press .
- Select **Preferences** and press .
- Select **Display** and press .
- If any expansion modules are connected to the phone, select **Primary display** and press .
- Select **Themes** and press .
- Press / to select a theme and press .

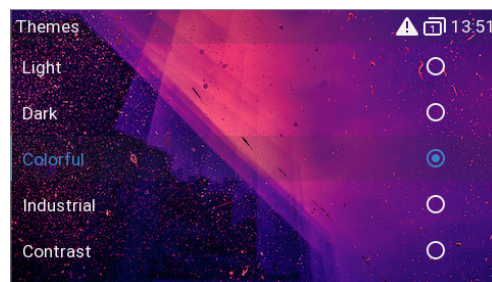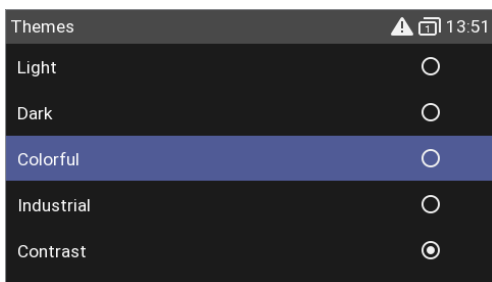

- Press to return to the **Display** menu; press for approx. 3 seconds to return to the idle screen.

The phone's web interface

When the web interface is opened for the first time upon initialization, you will see the **Security** page.

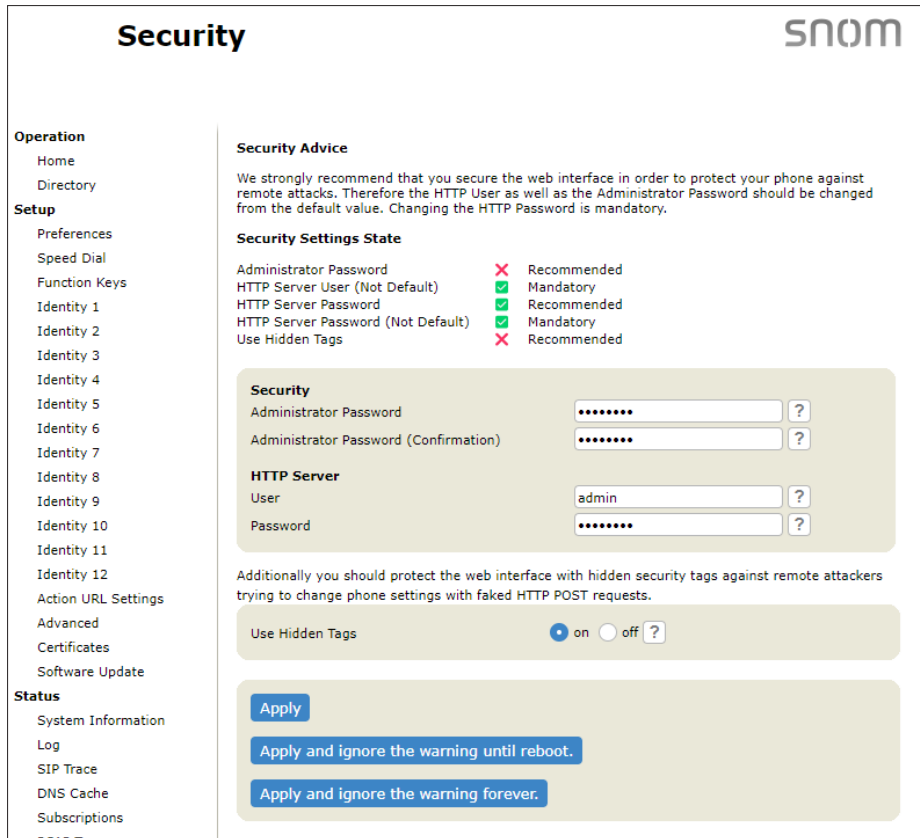

We urge you to set administrator and HTTP passwords to protect your phone. You already set your HTTP password when you initialized your phone (see page 19). **Please note:**


- Administrator password. If you do not replace the default administrator password by an individual one, an unauthorized third party with access to the phone could set an administrator password unknown to you. In such a case, you would no longer be able to switch from user mode to administrator mode to regain access to all phone settings.
- HTTP user name and HTTP password. If you do not set these, you make it easier for experienced hackers to break into your system.

Note: Be sure to write down your admin password and your HTTP user name and password and store them in a secure place.

Without the administrator password, you will not be able to return the phone and the web interface from user mode to administrator mode; many settings will be inaccessible. Without HTTP user name and password you cannot open the phone's web interface.

You can set and change the data on the phone's web interface at any time.

1. Click **Advanced Settings** in the vertical menu on the left side.
2. Click the **QoS/Security** tab at the top of the **Advanced Settings** page.



3. Enter the data in the text fields and click **Apply**.

- Administrator password. Valid values are arbitrary character strings of numerals, letters, and/or special characters of any length. Keep in mind that you may have to enter these characters on the phone's keypad (see "Entering numerals, letters, special characters, and symbols" on page 29). **Write the password down and store it in a safe place!**

Security



- Ignore Security Advises: on off ?
- Use Hidden Tags: on off ?
- Restrict URI Queries: on off ?
- Allow CSTA Control: on off ?
- Empty Client Cert: on off ?
- Filter Packets from Registrar: on off ?
- Authentication for SIP Reboot: on off ?
- Authentication for SIP Check-Sync: on off ?
- Administrator Mode: on off ?
- Administrator Password: [password field] ?
- Administrator Password (Confirmation): [password field] ?
- Minimum PIN Length: [text field] ?
- Maximum PIN Retries: [text field] ?

- HTTP user name and password. Enter the data in the text fields of the **HTTP Server** section and click **Apply**. The default value is blank.
 - User name. Valid values are character strings of letters and numerals, e.g. john or jh24.
 - Password. Text string.


HTTP Server

- User: [text field] ?
- Password: [password field] ?
- Authentication Scheme: Digest Basic ?

Opening the web interface

1. Look up the phone's IP address: Press , if available, or  > **Information** > **Help**.
2. Open a web browser on your PC. Enter the IP address, preceded by "http://" or "https://" in the address bar (for example: http://192.168.10.115) and press ENTER.
3. Enter the HTTP username and password when you are prompted.


The home screen opens:

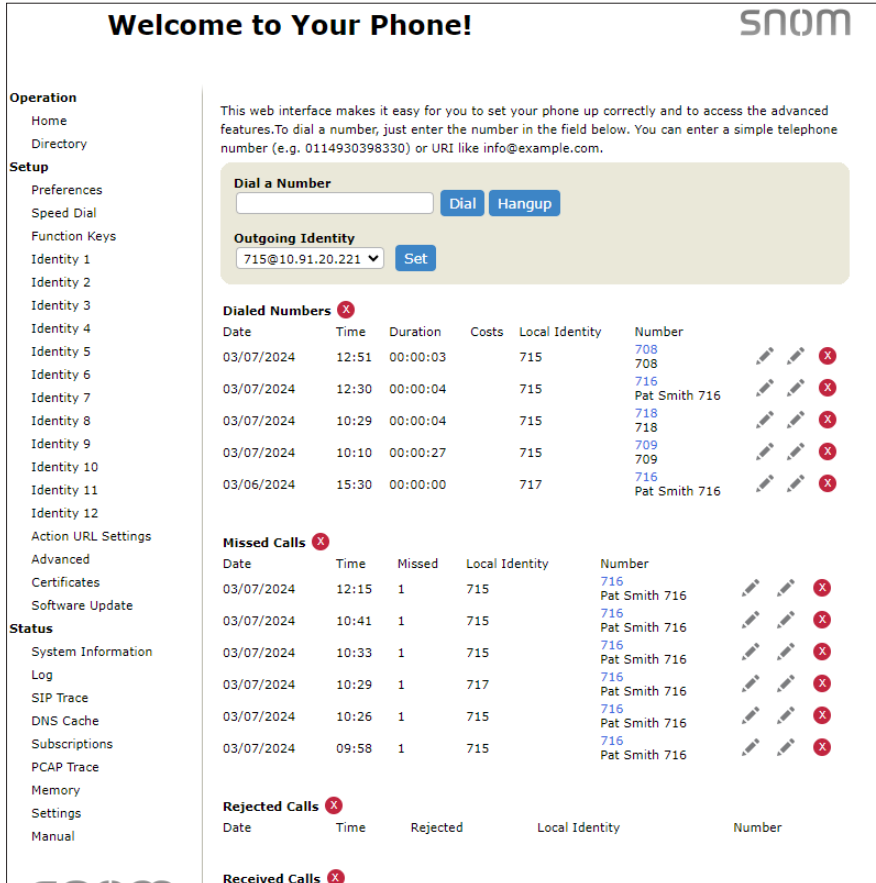

How the web interface works


The vertical menu on the left side of the window is always the same, no matter which window happens to be open at the time. Available menu items depend on whether the phone is running in user or administrator mode.


Click a menu item to open that page. Some pages contain several documents. To make a document visible, click its tab. The font weight of the characters on the active tab is **bold**. Only one tab can be active at a time.

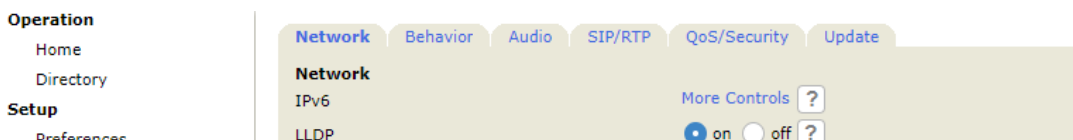

Note: Any changes you make will not take effect until you click **Apply**. Changes will be lost if you open another page of the web interface or if you close the web interface without first clicking **Apply**.

After you have clicked **Apply**, in some cases the **Save** button will appear at the top of the page. Click **Save** to save the changes permanently. Changes that have not been saved will be lost if and when the phone loses power or is disconnected from its power source.



To the right of each setting, there is a link symbolized by the question mark . Click this link to open a wiki page with information on the setting (description, valid and default value, links to connected issues, etc.). Click the return button of your browser to return to the phone's web interface.

Note: You may have to enter your HTTP password to return to the phone's web interface.

Web settings overriding manual phone settings

In some cases settings activated on the web interface override manual settings on the phone. If a setting you have made on the phone does not appear to take effect, look for a conflicting setting on the web interface or check with your administrator.

User mode/administrator mode

Snom phones can be operated in administrator or user mode. In administrator mode, all settings are accessible and can be modified; in user mode, a number of settings are not accessible. The factory default is administrator mode.





When the phone is running in user mode, the administrator password is required to switch to administrator mode. We recommend that you change the password for security reasons.

Note: Do not forget to write the new password down and store it in a safe place; without it, a TFTP reset to factory values is necessary to return the phone to administrator mode.

If your phone is administered centrally, user mode may be the rule. Please check with your administrator.

User mode on the phone

The "Network" menu and various other settings are inaccessible in user mode. See "Settings" on page 34. To switch to administrator mode, proceed as follows:

1. Press .
2. Select, i.e. if necessary scroll to **Maintenance** and press .
3. Select **Security** and press .
4. Select **Administrator Mode** (Fig. 1), if necessary, and press .
5. Enter the **Admin Mode Password**.

NOTE: If you have not yet set the administrator password, then enter the HTTP password.

6. Press  to save and return to the **Security** menu where **Administrator Mode** has been changed to "on" (Fig. 2).

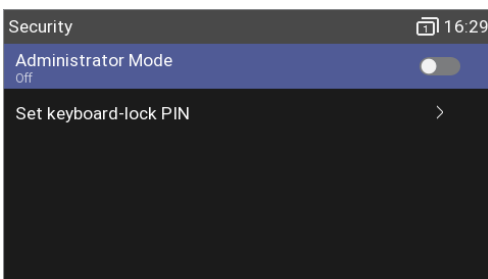


Fig. 1

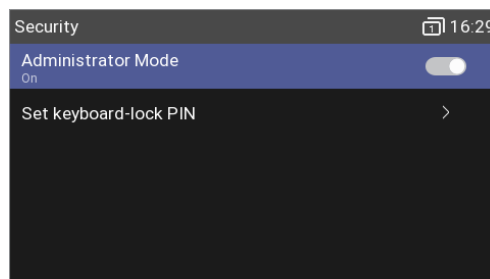


Fig. 2

7. Press  for three seconds to return to the idle screen.

User mode on the web interface

Some windows like **Preferences** are available in user mode while many others, like the identities, are not. The menu item **Advanced** is available in user mode but the settings normally found on the **Advanced Settings** page are not; in its place is the admin login.

In user mode the two pages look like this:

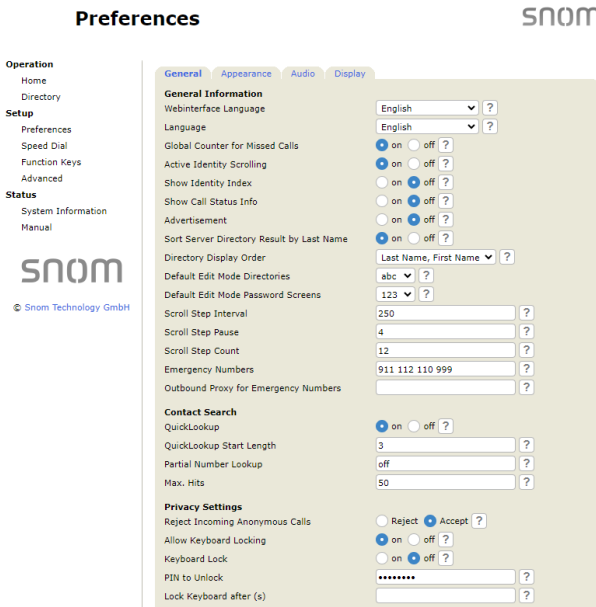


Fig. 1

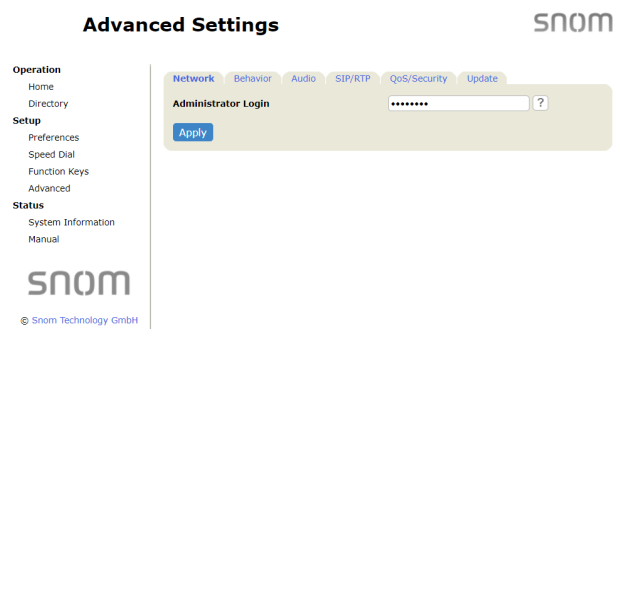


Fig. 2

To return the phone and its web interface to administrator mode, open the **Advanced Settings** page, enter the administrator password in **Administrator Login** and click **Apply** (Fig. 2).

In administrator mode, the two pages look like this:

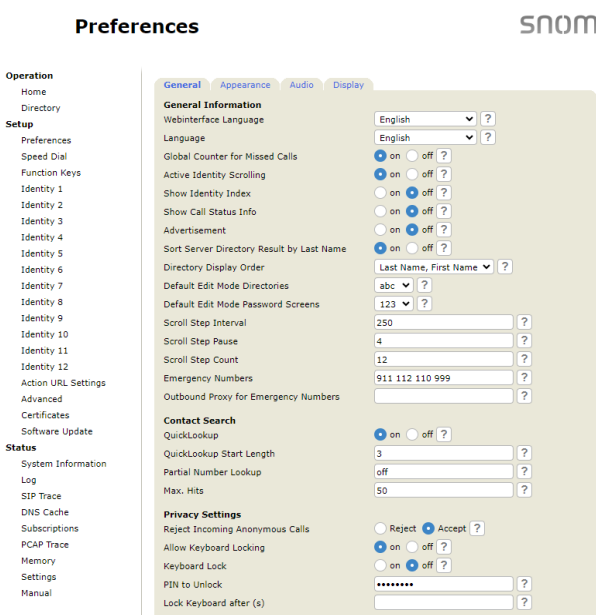


Fig. 3

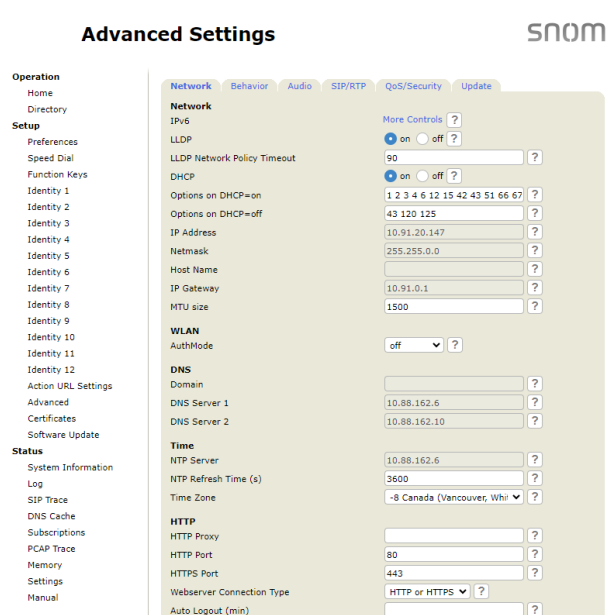


Fig. 4

Directories

Directory

The directory is the built-in directory of the phone. It can hold up to 2000 entries. Entries can be added and edited on the phone and on the web interface.

Name	Number	Contact Type	Outgoing Identity	Edit Delete
Jane Smith	9175554128	VIP	Active	[Edit] [X] [Phone]
John Miller				[Edit] [X] [Phone]
- Landline	9175554230	None	Active	[Edit] [X] [Phone]
- Home	9175557018	None	Active	[Edit] [X] [Phone]
- Mobile	9175554231	None	Active	[Edit] [X] [Phone]

Any changes you make on the web interface will not take effect until you click **Save** or click **Apply** and **Save**, depending on your firmware version. Changes will be lost if you open another page of the web interface without first clicking **Apply/Save**.

Definitions, explanations

Directory entries

Each entry must have at least one phone number; multiple associated phone numbers are possible. If you do not enter a first and/or last name, the phone number will appear under both "Name" and "Number".

- Entry with one phone number:

Jane Smith	9175554128	VIP	Active	[Edit] [X] [Phone]
------------	------------	-----	--------	--------------------

- Entry with several associated phone numbers:

John Miller				[Edit] [X] [Phone]
- Landline	9175554230	None	Active	[Edit] [X] [Phone]
- Home	9175557018	None	Active	[Edit] [X] [Phone]
- Mobile	9175554231	None	Active	[Edit] [X] [Phone]

Individual area (N): Individual settings for the master record and each subentry possible.

Blue area. For Master record, data can be different for each associated phone number. For Subentries, the data from the master record is displayed.

Master record (M)

Subentry 1


Subentry 2

Info area of Subentry 2: Different entry in textfield of "Number" (S), different "Number Type" selection (S), different "Outgoing Identity" selection (S). Blue area text fields are the same as Master Record (M).

Contact Types

VIP: Calls from numbers with the **VIP** checkbox selected will ring on your phone even when DND mode is active. You can assign a ringtone to this contact type. If your VIP is also assigned to a group (see below) and if that group has a distinct ringtone, the ringtone assigned to the group will be played.

Deny List: Calls from phone numbers with the **Deny List** checkbox selected will not ring on your phone. The caller hears the "Busy" signal. To remove the number from the Deny list, you can either

- delete the entry from the directory by clicking the "delete" symbol 
- or - if you want to keep the number in the directory - Edit the entry in the web interface and clear the **Deny List** checkbox (see "Editing an entry" on page 55 for more information); OR edit the entry on the phone and set **block** to No (see "Editing existing entry" on page 51 for more information).

Outgoing identity

The default setting is "Active" which means that the phone will use the current outgoing identity whenever you dial the number of the phone book entry.

You can also select a specific identity to be used as the outgoing identity whenever the number is dialed, for example, if you want to use a specific VoIP provider for these calls.

Note: To use an outgoing identity specified in the directory, you must dial the number from the directory. If you simply type it on the keypad, the current outgoing identity, as indicated on the display, will be used.

Group

The available group types are **Friends, Family, Work, Colleagues, Server** or **None**. The default setting is **None**. You can assign a distinct ringtone to each group type.

Ringtones

The phone has 10 built-in ringtones that can be assigned to identities, group types, and VIP directory entries. It is also possible to download a custom melody.

Assigning ringtones to identities: See "Assigning ringtones" on page 104.



Assigning ringtones to VIP directory entries and group types

1. Open the phone's web interface, **Preferences** page > **Audio** tab > **Directory Ringtones** section.
2. Select a ringtone from the respective drop-down menu and click **Apply**. If you choose **Custom Melody URL**, enter the URL to the data file in the text field. It must be a file of the type PCM 8 kHz 16 bit/sample (linear) mono WAV.


Note: Ringers assigned to VIP directory entries and to any of the group types override the ringers assigned to the identities. For example, if you have assigned ringer 1 to one of the identities and ringer 2 to the group **Colleagues**, the phone will play ringer 2 when a contact from the **Colleagues** group calls that identity.


Adding/Editing Entries on the Phone

Adding new entry manually

1. Press  to open the phone's directory.
2. Press the function key underneath .

Note: See "Input modes and navigation" on page 28 and "Entering numerals, letters, special characters, and symbols" on page 29 for information on how to enter data.

3. Enter the telephone number and press  to save the entry. The Contact Details screen appears.

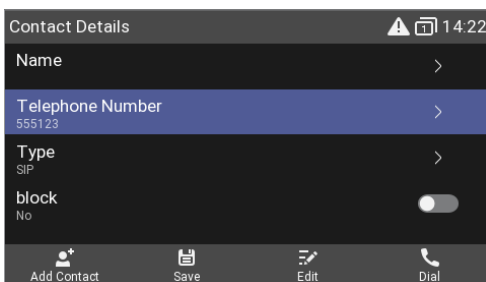




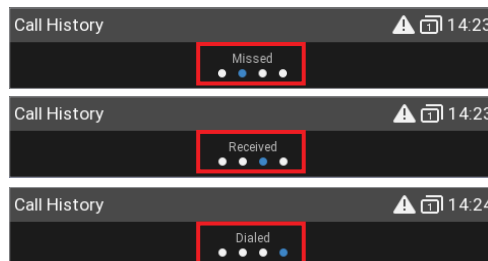
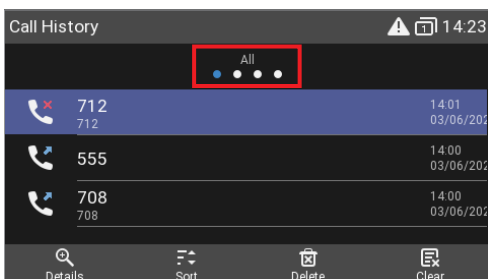
4. See step 5 of "Editing existing entry" on page 51 for details on how to edit the contact details (Name, Type, Group, etc.)




Note: Entering a first and/or last name is optional. If you don't enter either one, the entry will be listed under the phone number. You can add a first and last name later by editing the entry on the phone or on the web interface.

Adding new entry from call list


For further information on call lists, see "Call lists" on page 75.

1. Press the function key underneath  to open the call history. The list of **All** calls appears.
 - Press  /  on the navigation key to show the lists of **Missed**, **Received**, or **Dialed** calls instead.



2. Press  /  on the navigation key to select a call.
3. Press  to view call **Details**.





4. Press  to add the name (if the name was transmitted) and the number to the phone directory. If the name has not been transmitted, the number will be used in its place.

See step 5 of "Editing existing entry" on page 51 for details on how to edit the contact details (Name, Type, Group, etc.)

Adding current caller






With the call on the line, you can add the caller's name (if transmitted) and phone number to the directory. If the name has not been transmitted, the number will be used for both name and number.


Note: In order to perform these steps, you must have a SmartLabel key mapped to Directory.

1. With the call on the line, press the SmartLabel key mapped to Directory .
2. Press  to add the caller to the directory.

See step 5 of "Editing existing entry" on page 51 for details on how to edit the contact details (Name, Type, Group, etc.)


Sorting entries

1. Press  to open the phone's directory.
2. Press .
3. Press  /  to select the criterion for sorting (First Name, Last Name, Title, etc.) and press  to sort.

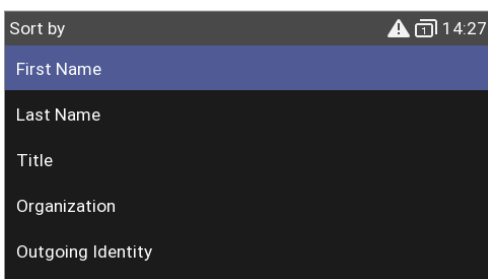


Editing existing entry

1. Press to open the phone's directory.
2. To search for a name, enter the first three letters of the first or last name.
3. Selecting an entry: Press ∇ / \blacktriangle to scroll to the entry.
4. Press . The **Contact Details** screen for the entry appears.
5. Editing a contact detail.

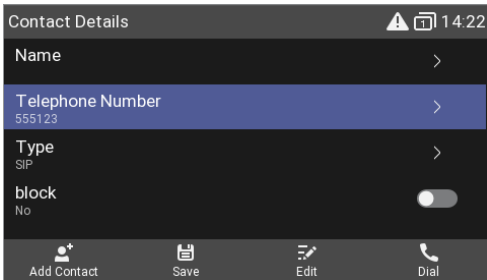


- a. Press ∇ / \blacktriangle and to select a contact detail. Depending on the contact detail,
- b. In some cases, you will see the prompt screen where you can enter or modify text. Edit the data, if necessary, and press to save. See also "Entering numerals, letters, special characters, and symbols" on page 29.

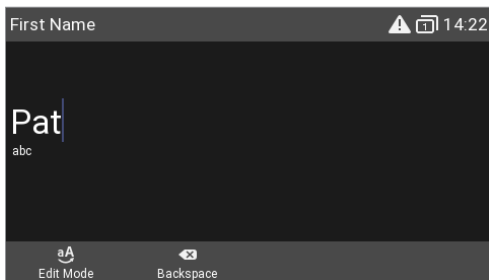


In other cases, you will see a list of values to select, or a question asking you to confirm yes/no. Examples:

- i. Select **Group** with ∇ / \blacktriangle and . The **Group** screen opens. Use ∇ / \blacktriangle to select Family, Friend, Colleague, Work or None. Press to save and return to the Contact Details menu.

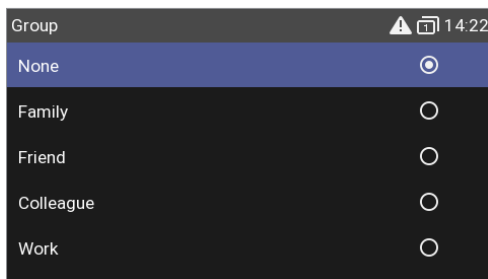

- ii. Select **Favorite** with ∇ / \blacktriangle and . The **Favorite** screen opens. Press to select Yes or No.

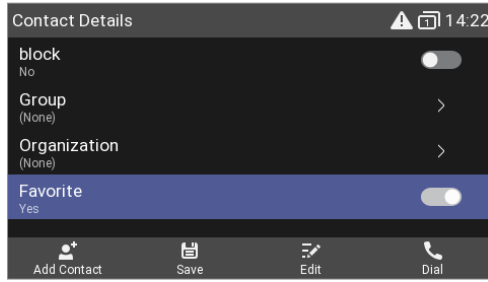

c. When you are done editing the entry, press .

Deleting an entry

1. Press to open the phone's directory.
2. To search for a name, enter the first three letters of the first or last name.
3. Selecting an entry: Press / to scroll to the entry.
4. If you want to delete the entry, press (Fig. 1) and **continue with step 5**, below.

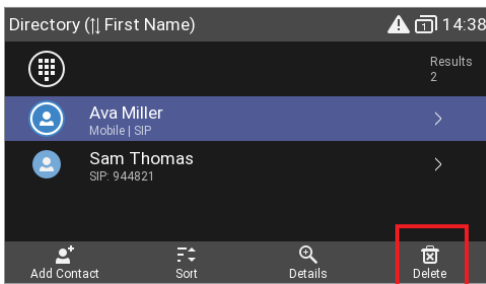


Fig. 1

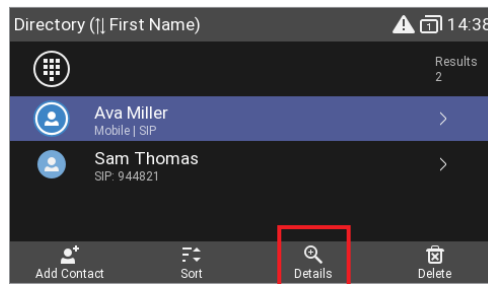


Fig. 2

- a. If there is **more than one phone number** associated with the entry and you want to delete only one of them, press (Fig. 2).
- b. Press / to select the number you want to delete, and then press (Fig. 3).

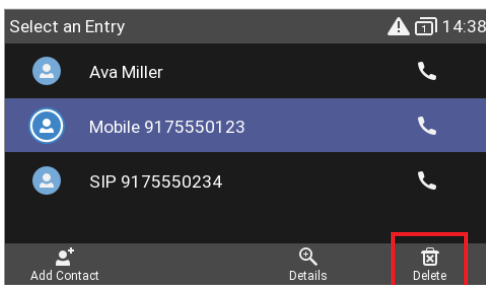


Fig. 3

5. You will be asked, "Are you sure?" (Fig. 4).

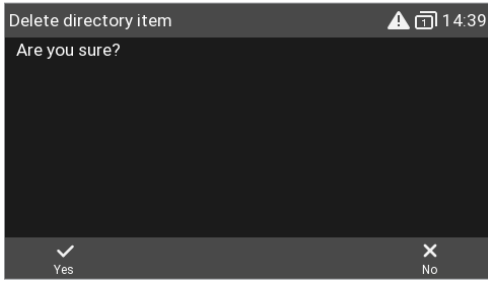


Fig. 4

6. If you are sure, press ✓ to delete the entry or phone number.

Adding/editing entries on the web interface

Click **Directory** in the menu on the left side.

Adding new entry

1. Type data in text fields of **Add or Edit Entry**.

- Number: Type the number exactly as you would dial it, with country and area codes, if necessary, and without parentheses, hyphens, blank spaces.
- Number Type: Select the type of connection from the drop-down menu. The default setting is SIP.
- Outgoing Identity: The drop-down list shows all identities configured on the phone. If you select one of the identities for one of the numbers listed in the phone book, all calls to that number initiated from the phone book will show that identity on the callee's phone.
- Deny List: Calls from entries with the **Deny List** checkbox selected will not ring on the phone. The caller will always hear the busy signal.
- Blue area: The data entered in the textfields will be displayed when the entry is opened on the phone. The data can be used to sort entries by group, name, organization, etc., and can be edited on the phone.
 - "Group" drop-down menu: Available types are "Friends", "Family", "Colleagues", or "Work". You can assign a distinct ringtone to each group type: **Preferences > Audio tab > Directory Ringtones** section.
 - First name, family (last) name: Will be added in this order under "Name" in the directory, unless you have also entered a nickname.
 - Favorite: Select the check box to add entry to "Favorites" list.
 - VIP: Calls from entries with the **VIP** checkbox selected will always ring on the phone, even when the phone is in a call or in DND mode.

Note: You can assign a distinct ringtone to the contact type "VIP": **Preferences page > Audio tab > Directory Ringtones** section.

2. Click **Add** to save new entry to directory.

Editing an entry

When you open an existing entry, the current information is displayed in the text fields of **Add or Edit Entry** and two additional buttons, **Add Sub** and **Change**, are available (see Fig. 2 and 3, below).

- Editing

Name	Number	Contact Type	Outgoing Identity	Edit Delete
Jane Smith	9175554128	VIP	Active	[Pencil] [X] [Phone]
John Miller				[Pencil] [X] [Phone]
- Landline	9175554230	None	Active	[Pencil] [X] [Phone]
- Home	9175557018	None	Active	[Pencil] [X] [Phone]

Fig. 1


- If single entry, click [Pencil] in the entry's line.
- If there is more than one number associated with a name:
 - Click [Pencil] in the name's line if you want to edit/add the first or last name and the data in the non-blue area applicable to the master record.
 - Click [Pencil] in a phone number's line if you want to edit the subentry's data (phone number, number type, outgoing identity, and any non-blue area data applicable to this subentry only).

Make changes as necessary and click **Change**.

- Adding additional phone number (subentry) for a name
 - Jane Smith's entry has only one phone number, her SIP phone number. In this example, the phone number of Jane Smith's landline will be added to the directory.
 - Click [Pencil] in Jane Smith's line (Fig. 1, above). The data is shown in the **Add or Edit Entry** area (Fig. 2).

Fig. 2

Fig. 3




- Enter the phone number in the text field of **Number** (Fig. 3).
- Select **Landline** from the drop-down menu of **Number type** (Fig. 3).
- **Optional:** Select an outgoing identity from the drop-down list, or select the **Deny List** checkbox (Fig. 3).
- Click **Add Sub** (Fig. 3).
- John Miller's entry has a landline number and a home number. In this example, his mobile number will be added as a third number.
 - Click  in the line containing John Miller's name. The data is shown in the **Add or Edit Entry** area.
 - Enter the phone number in the text field of **Number**.
 - Select **Mobile** from the drop-down menu of **Number Type**.
 - **Optional:** Select a contact type and an outgoing identity from the respective drop-down list.
 - Click **Add Sub**.

The directory now contains Jane Smith's landline number and John Miller's mobile phone number (Fig. 4).


Jane Smith					
- sip	9175554128 VIP	Active			
- Landline	9175554129 VIP	Active			
John Miller					
- Landline	9175554230 Deny List	Active			
- Home	9175557018 Deny List	Active			
- Mobile	9175554231 Deny List	Active			

Fig. 4

Deleting entry on web interface

- Entry with one phone number. Click  in the entry's lines to delete the entry.
- Entry with more than one phone number.
 - Deleting the entry. Click  in the line of the master record to delete the name and all associated phone numbers.
 - Deleting one of the phone numbers. Click  in the line of a phone number subentry to delete that subentry, but keeping the master record and all other subentries.

Dialing from phone directory

To dial, click the phone symbol  on the right side of the line with the phone number.

Deleting whole directory

Deletes the entire directory irretrievably. A confirmation screen will ask if you are sure you want to delete.

Attention!

Be aware your directory will be completely lost! You really want to delete all entries of your directory ?

Yes

No

Importing/Exporting Directory


See our Service Hub at <https://service.snom.com/display/wiki/Phone+directories>.

External directories

Available if provided by your network, your VoIP provider, or another external source.

LDAP

Enter the necessary data received from your administrator, VoIP provider or other external source in the text fields of the phone's web interface > **Advanced Settings** page > **Network** tab > **LDAP** section and click **Apply** and **Save**.

LDAP search on the phone: Enter the first letter of the name you are searching for. Type more letters if the name shown isn't the right one or scroll through the list. Press  to dial.

Contacts

If you want to use an external contacts list, the **Contact list** and **Contact list URI** settings are mandatory. **Publish presence** is optional; when enabled, the phone sends out "PUBLISH" SIP messages with the phone's status, e.g. busy, etc.

1. On the phone's web interface, **Identity (1-12)** page > **SIP** tab, click the radio button **on** of the **Contact list** entry.
2. Enter the URI received from your administrator, VoIP provider or other external source in the text field of **Contact list URI**.
3. Optional: Click the radio button **on** of the **Publish presence** setting.
4. Click **Apply** and **Save**.

Login Features SIP NAT RTP Audio

SIP Identity Settings

Voice Quality Report Collector ?

Music on Hold Server ?

Send Hold as Inactive on off ?

Alert Info URL ?

User Picture URL ?

Dial Plan String ?

Count all Groups in Dial Plan on off ?

ENUM Support on off ?

Country Code ?

Area code ?

Proxy Require ?

Additional Supported Headers ?

Contact Source Priority (SIP) INFO PAI RPID FROM ?

Q-Value 1.0 ?

Proposed Expiry 3600 ?

Auto Answer on off ?

Long SIP-Contact (RFC3840) on off ?

Support Broken Registrar on off ?

Shared Line on off ?

Publish Presence on Bootup on off ?


DTMF via SIP INFO Off ?

Extension Monitoring & Call Pickup List URI ?

Contact List on off ?

Publish Presence on off ?

Contact List URI ?

To dial a contact on the phone, enter the first letter of the name you are searching for. Type more letters if the name shown isn't the right one, or scroll through the list. Press  to dial.

Using the phone

This section describes the functions of the phone with the factory default settings. If your phone was installed and/or set up by someone else, the default settings may have been changed. Please check with that person or company if the phone does not react as described here.

The caller information displayed on the screen is controlled by a setting on the phone's web interface. The default setting is "Name + Number". To change the setting, click **Preferences > Appearance**. In the **Interface elements** section, select an option from the pull-down menu **Number Display Style**. The other options are Full Contact, Name, Number, and Number + Name.


Making calls

See "Entering numerals, letters, special characters, and symbols" on page 29 for information on input modes and entering letters, numerals, and special characters.

Selecting identity for current outgoing call


See "Identities/accounts" on page 102 on how to configure identities.

If more than one identity is shown on the display, the one on the blue bar with the white and green rings around the green circle is the outgoing identity for the call and the number/name that will show on the callee's phone. Use the up or down arrow on the navigation key to select another identity.

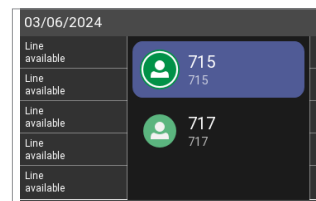

Using different audio devices


Handset

- Pick up the handset, enter the phone number, and press  OR
- enter the phone number and pick up the handset.

Headset

Enter the phone number and press .

Speakerphone

Enter the phone number and press .




Using different dialing methods

Auto dial



When the function is enabled, the phone will dial the number on the display when the time span in seconds specified in this setting has elapsed since the last digit was typed.

Note: The default setting is off. In administrator mode, the setting can be enabled on the phone's web interface at > **Advanced Settings** > **Behavior** tab, **Phone Behavior** section, **Auto Dial** Timeout setting by entering a time span in seconds.





Redialing

1. Press  to show the last numbers dialed, with the very last number at the top.
2. Press  to dial that number or use \checkmark / \wedge to select a different number and then press .



Calling number from call history (missed, received, dialed calls)

1. Press  (dialed calls), \leftarrow (received calls), or \rightarrow (missed calls) to open the respective call list.
2. Press \checkmark / \wedge on the navigation key to select a call.
3. Press  to dial the number.

Calling number from phone directory

1. Press  to open the phone's directory.
2. To search for a name, enter the first three letters of the first or last name on the alphanumeric keypad.
3. Press \checkmark / \wedge to select a name.
4. To dial the number, press  or lift the handset off the cradle
-OR-
press  and then press .

Calling number from external directory

1. Open the dial screen to get access to the external directory:
 - a. Lift the handset off the cradle or press  to open the dialing screen (Fig. 1).
 - b. Press the function key underneath  to show the list of available directories and call lists (Fig. 2).

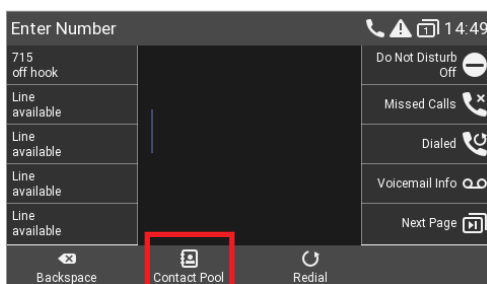


Fig. 1

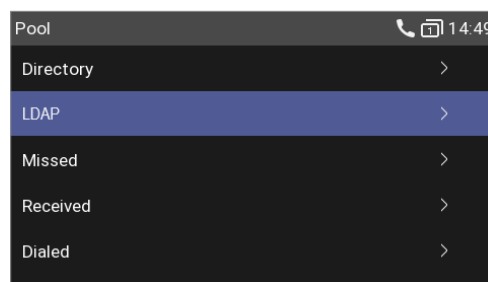


Fig. 2

- c. Select the external directory. In our example, scroll down to LDAP.

2. To search for a name, enter the first three letters of the first or last name on the alphanumeric keypad.
3. Press \blacktriangledown / \blacktriangle to select a name.
4. Press + and then press ☎ to dial the number.

Speed dialing

Setting speed dial numbers: See "Speed dial" on page 116. Mapping a speed dial number onto one of the SmartLabel keys: See "Configuring the function keys", "Example 2, Speed dialing" on page 93.

- Speed dial number on speed dial list
 1. Enter the speed dial number (0-30) assigned to the phone number you wish to dial.
 2. Press ☎ to dial.
- Speed dial number mapped onto a SmartLabel key 1-32: Select the page, if necessary, and press the key.

Calling emergency numbers

Numbers specified as emergency numbers can be dialed even when the keyboard is locked. See "Emergency numbers" on page 108 on how to set emergency numbers. Several numbers (911, 112, 110, 999) have been preconfigured.

- On an unlocked keyboard: Enter the number and press ☎ to dial.
- On a locked keyboard: Enter the number. The phone dials the number as soon as you have entered all the digits of one of the programmed emergency numbers.

Call completion

Note: This function depends on whether it is available in your network or not. On Snom phones call completion means that when a called number is busy or not available, you can have your phone call you back as soon as the dialed number is not busy anymore or available again. The default setting is "off".

Changing the setting to turn on call completion : See "Call completion" on page 111.

1. When call completion is available and enabled, the Waiting screen appears when you are calling a number that is busy or unavailable (Fig. 1).

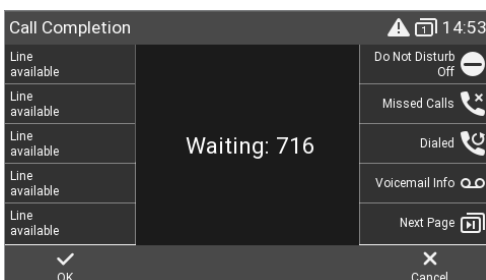


Fig. 1

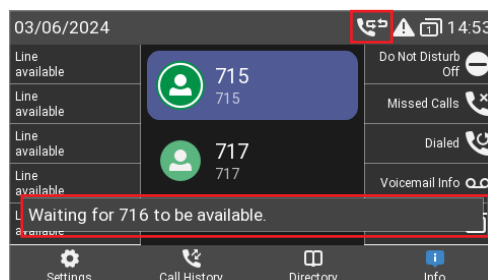





Fig. 2

- Press  / ✓ if you wish to dial another number while waiting for call completion (Fig. 1). You can now hang up the handset to return to the idle screen (Fig. 2); use handset, headset, or speakerphone to dial another number; receive calls etc. Call completion will not interfere with the normal operation of your phone. The symbol  appears in the Info bar/status line and a message appears in the context area (Fig. 2).

OR: Press  / ✗ to turn off call completion for this call (Fig. 1).

- When the number becomes available, you will see it announced on the display (Fig. 3) and hear a double beep if you are in a call.

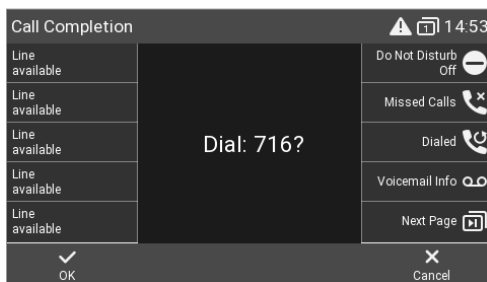



Fig. 3


- Press  / ✓ to dial; OR

Press  / ✗ to turn off call completion for this call.


QuickLookup (number guessing/auto completion)

When you have entered a few numbers, the phone begins searching its directories and calls list for numbers matching the numbers typed on the phone's keypad.

- Start entering the phone number you want to call. The matching results are shown on the display.

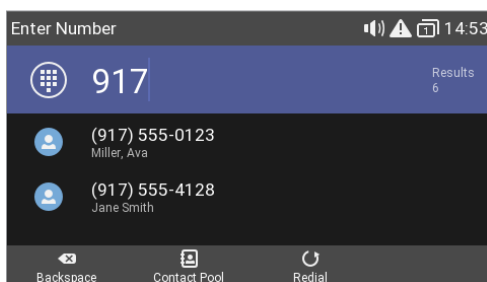


- Press the ▼ / ▲ arrows on the navigation key to scroll through the list of numbers.



- Select the number you want to dial and press .

Accepting calls

Using different audio devices


Handset: Pick up the handset.

Headset: Press . If the phone is already in headset mode, you can also press the blinking line key.

Speakerphone: Press  or  or the blinking line key.

Automatically accepting calls

The default is **off**. Turning the function on: On the phone's web interface > **Identity** (1-12) > **SIP** tab > Auto answer, click the radio button **on**. With this setting, your phone will automatically accept incoming calls when it is idle.

Calls will be accepted on speakerphone, and you will be alerted acoustically by a single long beep; press the headset key  if you want calls to go to the headset.

To turn off the acoustic alert, open the phone's web interface to **Preferences** page > **Audio** tab > **Auto Answer** section > **Auto Answer Indication** and click the radio button **off**.

Call pick-up from another extension

You can pick up calls ringing on another extension, for example when the other extension is busy or when the user is absent. The prerequisites for this function are as follows:

- It must be supported by the PBX.
- The extensions whose calls you want to pick up on your own extension must permit this function. It is possible but not required to restrict the permission for monitoring to certain users or groups of users.

Settings: See "Example 1, Extension monitoring and call pick-up" on page 91.

- Each extension to be monitored must be programmed onto one of the SmartLabel keys with LEDs on the phone (and the page the key is on must be on-screen on the phone's display).
- If you want to see who is calling or connected to any of your monitored extensions, the function must be enabled; the default setting is off. It can be turned on in administrator mode only. Open the phone's web interface > **Advanced Settings** page > **Behavior** tab > setting **Go to Call-Monitor on Activity** and click the radio button **on**.

When these prerequisites are met, the status of the monitored extension is indicated by the LED of the function key:

- Blinking LED: Incoming call ringing. If the call is not answered, press the key to pick it up;
- LED glowing steadily: The monitored extension is busy (in call, dialing, etc.);

and by the idle display showing the call-monitor state.

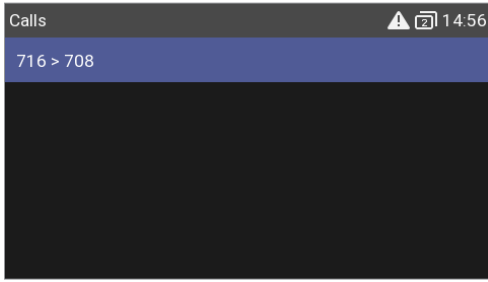


Fig. 1

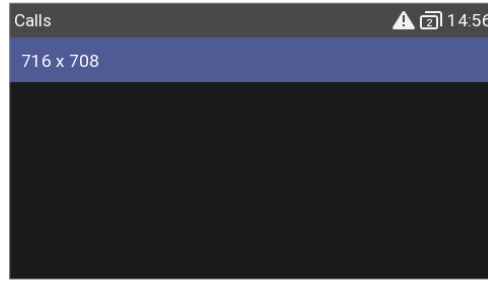


Fig. 2

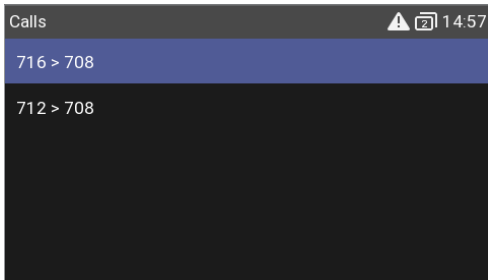


Fig. 3

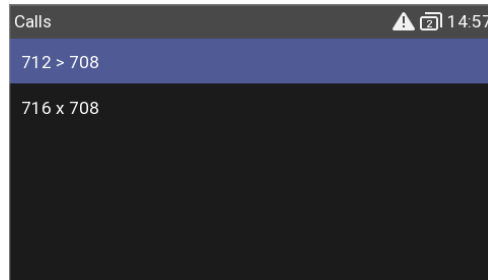


Fig. 4

- When your phone is idle, any ongoing activity on all extensions monitored by your phone will be shown on the display. In the above examples, "716 > 708" (Fig. 1) indicates that extension 716 is calling extension 708; "716 x 708" (Fig. 2) indicates that 716 is connected to 708 and that 716 is the caller, 708 the callee. If more than one monitored extension is being called or in a call, the last incoming call is added to the top of the list (Fig. 3, 4).
- Press to close the Calls screen and return to the idle screen.

Call waiting

When you are in a call, another call coming in will be announced visually by the flashing call LED and by the symbol appearing in the function key line (Fig. 1); it will also be announced acoustically by a double beep. If you want to switch to visual or acoustic announcement only or turn call waiting off completely, see "Call waiting" on page 113.

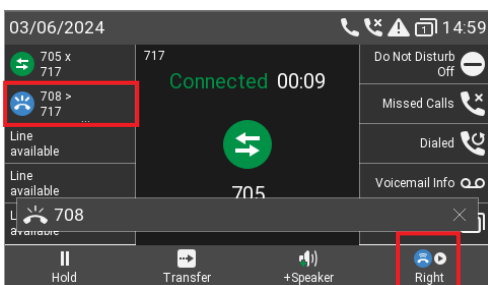


Fig. 1

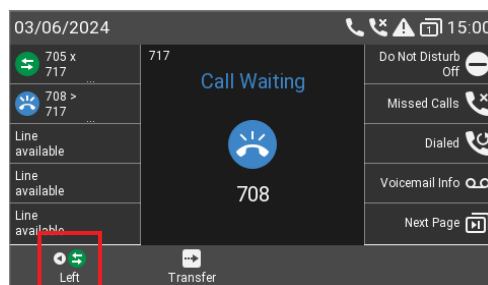


Fig. 2

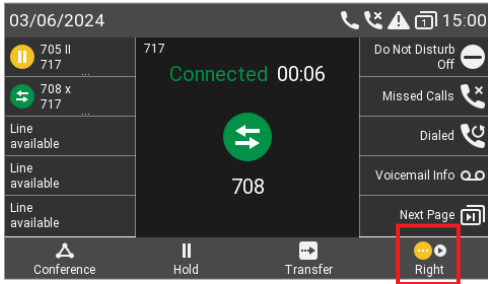


Fig. 3

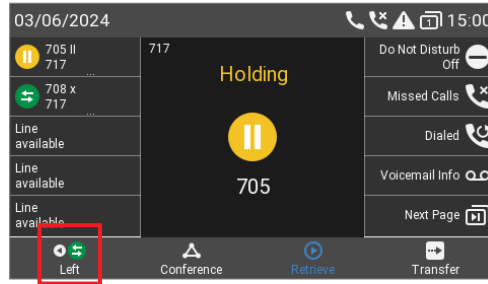


Fig. 4

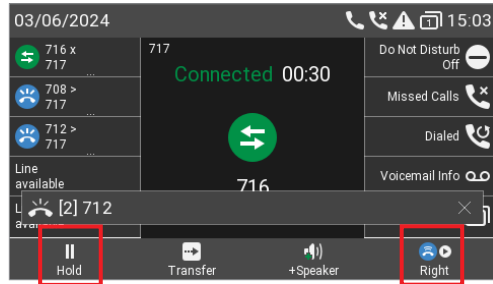


Fig. 5

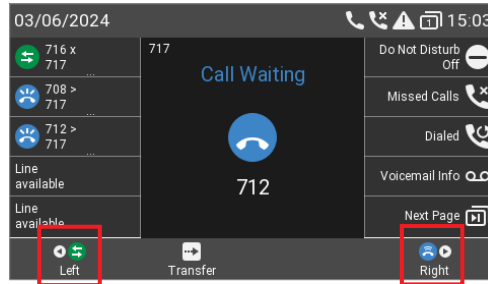


Fig. 6

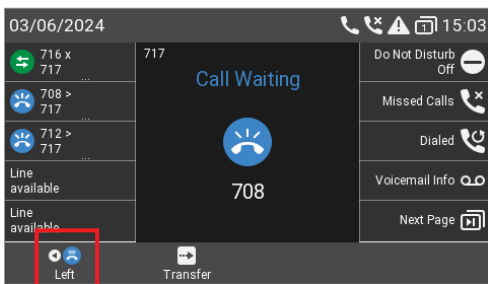











Fig. 7

When a call is waiting, you have the following options:

- Press the blinking line key of the call waiting to put your current call on hold and to accept the second call without knowing who is calling (Fig. 1). This option is available only when there is a free line key available at the time the call comes in.
- Press the function key underneath  (Fig. 1) to put the **Call waiting** screen on the display (Fig. 2); you will see the caller ID on-screen if it is being transmitted.
 - Press  to reject the call waiting. The caller will hear the busy signal.
 - Press  to accept the second call and put your current call on hold.
 - Press  to return to the **Connected** screen with your current connection (Fig. 2 and 7).

Note: Pressing  and  will affect the call shown on the display, i.e., your current connection in Fig. 1, 3 and 5, the call waiting in Fig. 2 and 6 or the call on hold in Fig. 4.


- If there is more than one call waiting (Fig. 5, 6, and 7), press the keys , , or , respectively, to bring them on-screen and to return to the connected call.

- If you do not wish to accept the waiting call, you can:
 - ignore the announcement. If you have set call forwarding when busy, the call will be transferred to that phone.
 - reject the incoming call by putting the **Call waiting** screen on the display and pressing **(x)**. The caller hears the busy signal. Pressing **(x)** for three seconds will also put the caller on the "Deny" list of the phone's directory. Future calls from this number will not ring on the phone; the caller hears the busy signal. For more information on the "Deny" list and how to remove entries from it, see "Contact Types" on page 48.


Active calls

Hold

One call on hold

Press  to put the ongoing call on hold. Held calls are indicated as follows:


- By the text on the display.

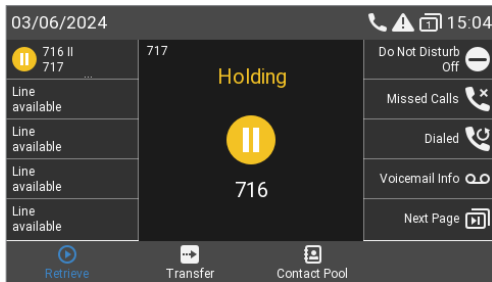


- By the slowly blinking line key.
- By the slowly blinking call indication LED.
- By the double beep when you put a call on hold.



You can now:

- transfer the held call blindly or with prior announcement - see "Transferring calls" on page 70.
- receive and make calls and put other calls on hold.

Pick up the held call by pressing its line key or by pressing  again. If the other party hangs up while on hold, the call is terminated on your phone as well and the LED indicators are turned off.

Holding multiple calls

If you are in a call with one party and have one or more calls on hold or if there is more than one call on hold, the symbol  is available in the function key line. You can switch back and forth between the active call and any call on hold. Up to 12 simultaneous calls are possible, if supported by the PBX.

- In Fig. 1 and 2 the phone is in one active call with a second call on hold. Fig. 1 shows the connected call. Press the function key underneath  /  to show the call not currently on screen.

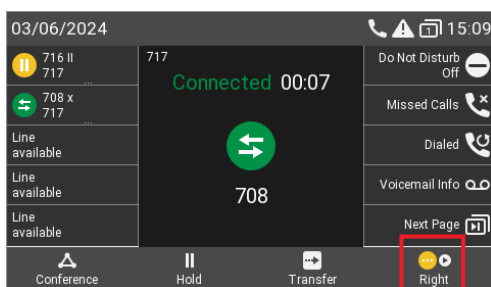


Fig. 1

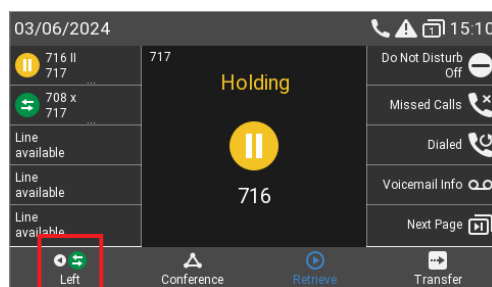




Fig. 2

- In Fig. 3- 4 there are two calls on hold. Fig. 4 shows the second held call. Press the function keys underneath  /  to show the call not currently on screen.

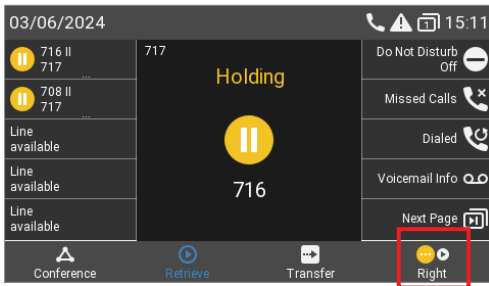


Fig. 3

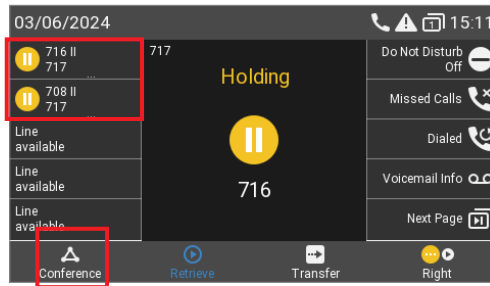




Fig. 4

- When the connected call is on-screen, you can transfer it to a third party or terminate it by pressing .
- When a held call is on-screen, press  to connect to it and put the currently connected call on hold.

Conference

Note: This section refers to phone-based conferences. For the number of participants and how to set up and participate in server-based conferences, please check with your network administrator or your VoIP provider.

The maximum number of participants (including yourself) is three.

To increase the maximum number of participants (including yourself) to five, perform the following steps:

1. On the web interface, open the **Status > Settings** page.
2. Right-click the setting **phone_features**. Enter the new value: *SmartLabel LargeLocalConference*, and then click **OK**.
3. Click **Reboot**, and then click **Yes** to confirm.
4. Wait for the phone to reboot.

Initiating a conference

1. Call the first intended participant.
2. Put the participant on hold, and then call the next intended participant.

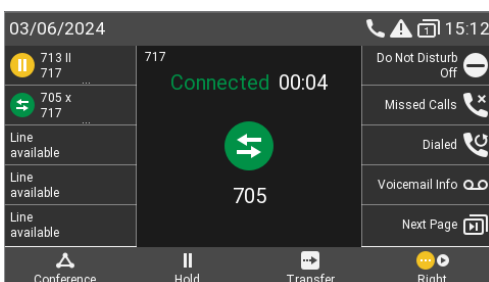




Fig. 1

3. If you previously increased the maximum number of participants to five:
 - a. To add a third participant, repeat step 2.
 - b. To add a fourth participant, repeat step 2.
4. Press  to start the conference.

Conference screen navigation

Your input on the phone's keys will affect the caller/callee(s) or the entire conference shown in the contact area of the display. Example: A conference with three participants, including yourself. After you have pressed  (Fig. 1) to start the conference, the names, if available, and/or phone numbers of the other participants are shown on-screen (Fig. 2 - 4). Fig. 2 shows the conference screen, e.g., "2 parties" while Fig. 3 and 4 show the screens for the individual participants.

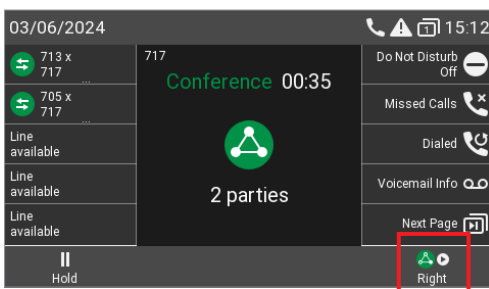


Fig. 2

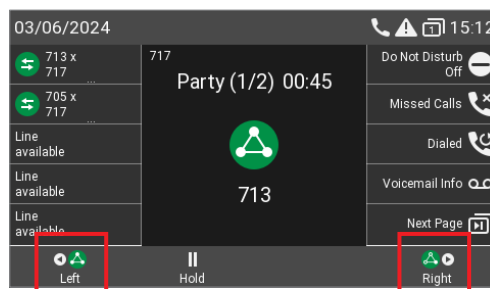


Fig. 3

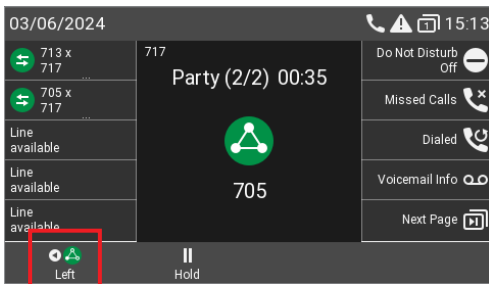














Fig. 4

- Selecting individual participants.
 - On the conference screen (Fig. 2), press  to select the first participant of the conference.
 - When viewing a participant (Fig. 3), press  to select the next participant (Fig. 4).
 - When viewing a participant (Fig. 4), press  to view the previous participant (Fig. 3).
 - When viewing the first participant (Fig. 3), press  to return to the conference screen (Fig. 2).
- Talking to one participant in private. With one of the participants on-screen (Fig. 3 or 4), press  to converse with that participant in private and to put the other participant(s) on hold. To restart the conference, press .
- Putting one participant on hold. With one of the participants on-screen (Fig. 3 or 4), press  to put this participant on hold and to converse with the other participant(s) in private. To restart the conference, press  and then press .

- Putting all participants on hold. Return to the conference screen (Fig. 2) and press . To restart the conference, press .
- To terminate the conference and the connections to all participants, return to the conference screen (Fig. 2) and press .

Transferring calls

You can transfer connected calls as well as calls ringing on your phone.

- When you have a call on the line, there are two ways to transfer it to a third party:
 - **Attended transfer:** Announcing the call to the third party first, to make sure the call is welcome and will be accepted;
 - **Blind transfer:** Transferring the call unannounced. There will be no feedback on whether the third party is available and/or picking up the call.
- When a call is ringing on your phone, you can transfer it to a third party without answering it first (blind transfer only).

Attended transfer

- With a single call on the phone.
 1. Put the call on hold. In our example, the caller on hold is 709.

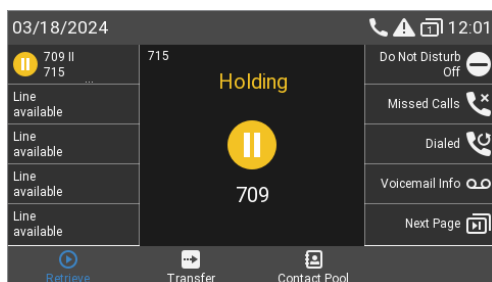


Fig. 1

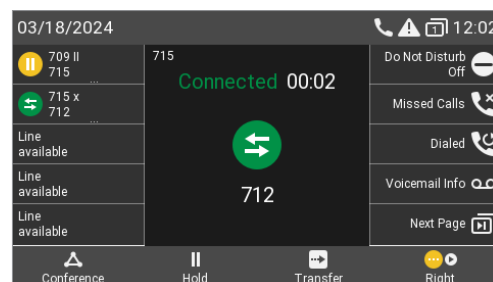


Fig. 2

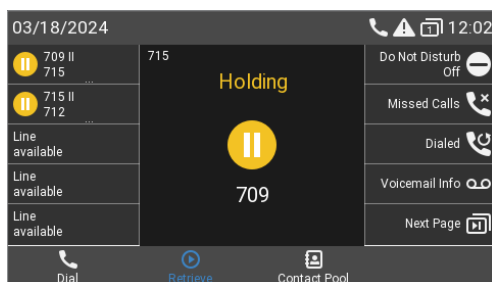








Fig. 3

2. Dial the number you want to transfer the call to and announce the call (Fig. 2). You can also select a number from the internal or one of the available external phone directories (see "Calling number from phone directory" on page 60 and "Calling number from external directory" on page 60).
3. If the third party wants to accept the call, press  or . The "Holding 709" screen appears (Fig. 3).

4. Press  to complete the transfer. You may briefly see the messages "Ended 712" (Fig. 6 below) and "Ended 709" (Fig. 7 below), indicating that the transfer was completed.

- With more than one call. All calls must be on hold. In the below example you have two calls from phone numbers 706 and 709 on hold. You want to transfer the call from 709 to 712.

1. Dial 712 and announce the call.
2. If the third party wants to accept the call, press  or . If the "holding 706" screen, i.e., the call you **do not** want to transfer, appears on-screen (Fig. 4), press  to bring "Holding 709" on-screen (Fig. 5).

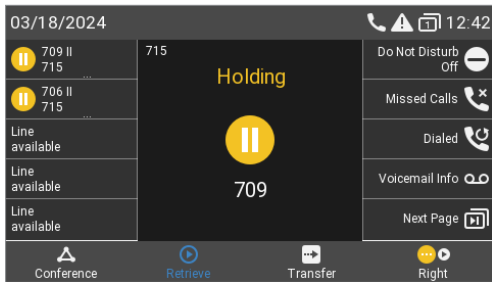


Fig. 4

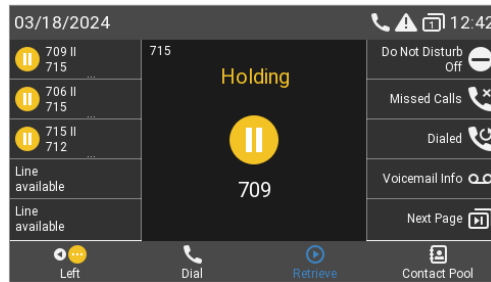



Fig. 5

3. Press . You may briefly see the messages "Ended 712" and "Ended 709" (Fig. 6 and 7), indicating that the transfer was completed.

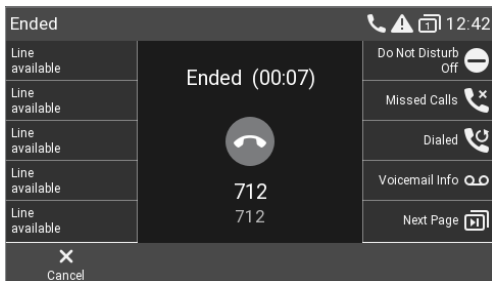


Fig. 6

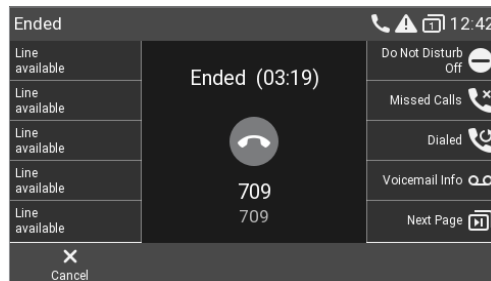


Fig. 7

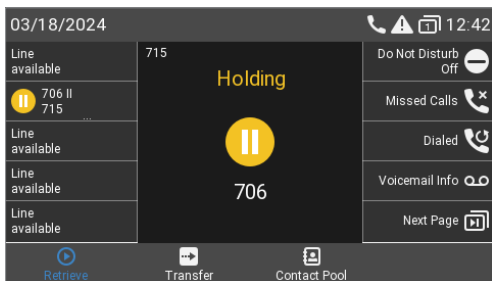


Fig. 8

The remaining call on hold or the first of the remaining calls on hold will then appear on-screen (Fig. 8).

Blind transfer

- Blind transfer of active call

1. With a call on the line (Fig. 9), press or . The dial screen will appear.

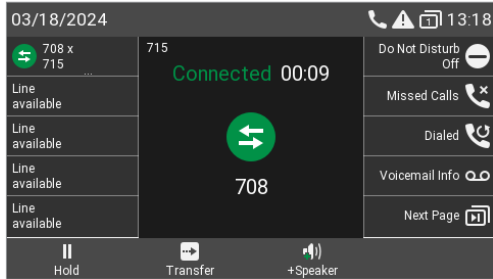


Fig. 9

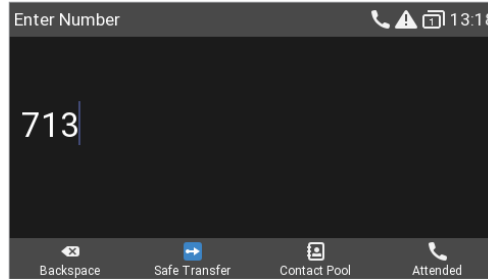


Fig. 10

2. Dial the number (Fig. 10), or press to select a number from the internal or one of the available external phone directories (see "Calling number from phone directory" on page 60 and "Calling number from external directory" on page 60).

3. Press . You may briefly see two "Ended" messages followed by the callee and caller's name/number, indicating that the transfer was completed (Fig. 6 and 7 on preceding page).

If a call is waiting (Fig. 11), as indicated by the symbol in the lower right corner, you must reject the call waiting before you can transfer your active call blindly.

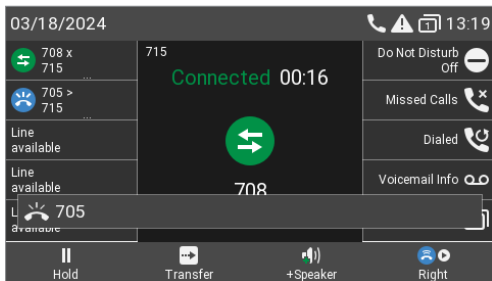


Fig. 11

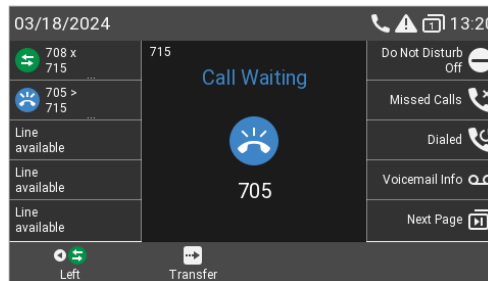


Fig. 12

- a. Press the function key underneath . The "Call Waiting" screen (Fig. 12) appears.
- b. Press to reject the call. The caller hears the busy signal.

Note: If you want to transfer the call waiting, see next section.

- Blind transfer of call waiting

1. If you are in a call and want to transfer a call waiting (Fig. 11, above), press the function key underneath . The "Call Waiting" screen (Fig. 12, above) appears.

Note: Your active call will remain active while you are transferring the ringing call.

2. Press or . The dial screen (Fig. 10, above) appears.
3. Enter the number of the third party you intend to transfer the call to and press . The "Connected" screen (Fig. 9, above) with your current call reappears.

• Blind transfer of ringing call

1. With a call ringing (Fig. 13), press or .

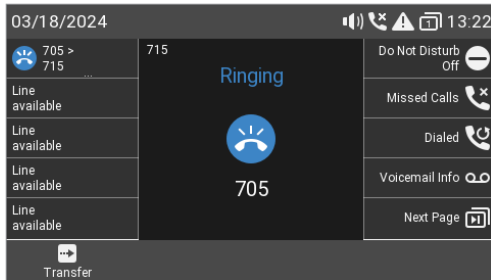


Fig. 13

2. The dial screen (Fig. 10, above) appears.
3. Enter the number of the third party you intend to transfer the call to and press .

Terminating calls

- When using the handset: Place the handset in the cradle or press .
- When using speakerphone or a headset: Press .

Missed calls

Missed calls are indicated by the call LED (steady light), the missed call symbol in the status line, and the "Missed" message with the number of new missed calls on the display (Fig. 1) and/or on the Status info screen (Fig. 2).

Note: If there are status messages with a higher priority, the status line will show the message with the highest priority.

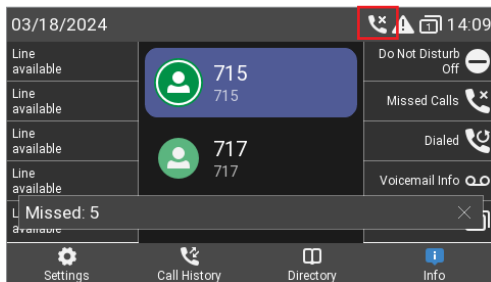


Fig. 1

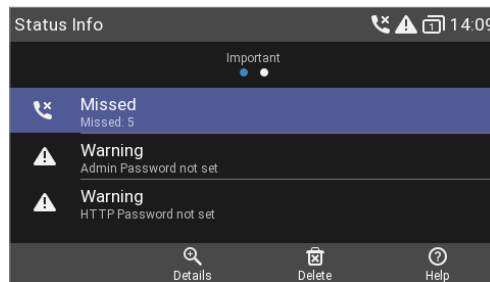


Fig. 2

- To view your missed calls, press the right arrow on the navigation key. The red dot indicates the arrival of new missed messages since the last time the missed calls were viewed (Fig. 3). It is removed from the list of all calls and turns blue in the list of missed calls once the list has been viewed (Fig. 4).

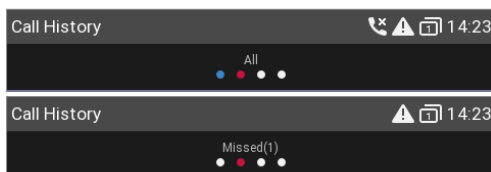


Fig. 3









Fig. 4

- Turning off the missed call indications (LED and "Missed" message). Use one of the following methods:
 - View the list of missed calls.
 - Via the **Status info** screen.
 1. Press , if available (Fig. 1), or open the **Settings** menu  > **Information** > **Status Info** to view the status info messages.
 2. Press the function key underneath  to delete the "Missed" message line (Fig. 2). If there are other status info messages, you may need to use the up/down arrows   on the navigation key to select the "Missed" message line.
- Note:** This will only remove the status message "missed" and turn off the LED. The missed calls will still be visible in the Call History until you delete them.

Call lists

Three call lists of missed, dialed, and received calls are stored on the phone. They contain the number, time and date, and duration of the calls. If the memory allotted to storing the call lists is full, the oldest ones will be overwritten.


1. Press  to open the call history (Fig. 1).



Fig. 1

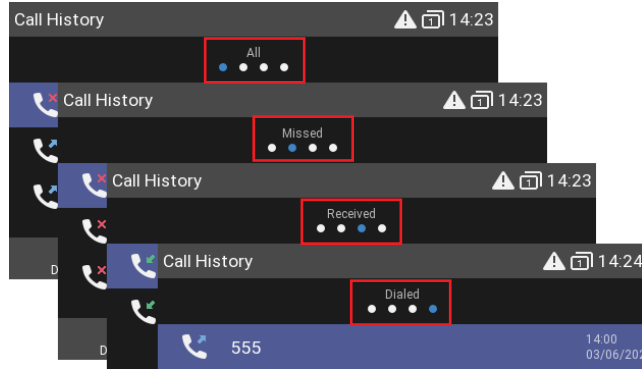


Fig. 2

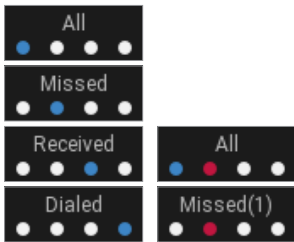







Fig. 3



Fig. 4




The red dot indicates the arrival of new missed messages since the last time the missed calls were viewed (Fig. 4). It is removed from the list of all calls and turns blue in the list of missed calls once the list has been viewed.







2. To view the list of missed, received, or dialed calls, press the left and right arrows   on the navigation key to put the lists on-screen one after the other (Fig. 2).

Note: On the idle screen you can also use the following keys to view the lists directly (default setting):

- Missed calls: Press the right arrow  on the navigation key. See also "Missed calls" on page 73.
- Received calls: Press the left arrow  on the navigation key.
- Dialed calls: Press .

3. On each list, the latest call is at the top of the list (Fig. 1, above). Scroll through the list with the up/down arrows   on the navigation key. The icons indicate the type of call:

-  - missed call
-  - received call
-  - dialed call

- Press  to dial the number of the selected call.
- Press  to delete the selected call.
- Press  to delete the entire list.
- Press  for three seconds to return to the idle screen.
- Press  to sort the calls.
- Press  to show the call details of the selected call.

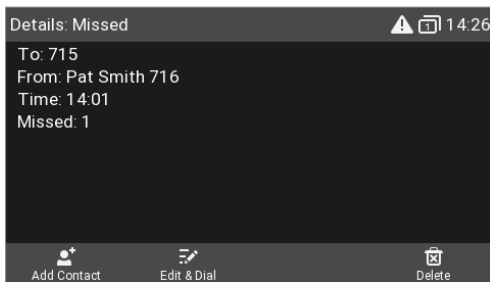


Fig. 1

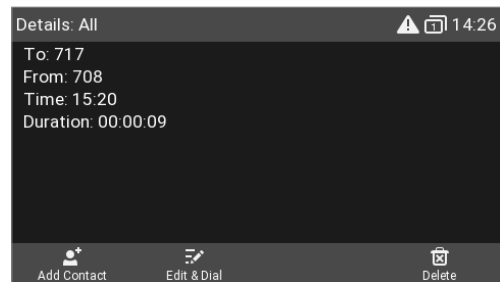





Fig. 2

- Missed calls: To, from, time (and date if not today), total number of missed calls from caller (Fig. 1).
- Received and dialed calls: To, from, time (and date if not today), duration of call (Fig. 2).
- When viewing the Details of a call:
 - Press  to add the caller/callee to the phone's directory. See "Editing existing entry" on page 51 for information on adding a name and other data to the new directory entry.
 - Press  to delete the call.

Locking and unlocking the keyboard

Press  for three seconds to lock and unlock the keyboard; you may need to enter a PIN to unlock, if a PIN has been set. When the keyboard is locked, only the emergency numbers configured on the **Preferences** page of the phone's web user interface can be dialed.



Setting a timer for automatically locking the keyboard after inactivity, setting a PIN for locking and unlocking the keyboard, and disabling keyboard locking: see "Keyboard Locking" on page 109. For more information on dialing and setting emergency numbers, see "Calling emergency numbers" on page 61 and "Emergency numbers" on page 108, respectively.

Rejecting or redirecting incoming calls

This includes manual and automatic rejection and redirection and automatic rejection of anonymous calls.


Manually

If you do not wish to pick up a ringing call, you have three options: Letting the call ring and not picking it up, rejecting it manually, or transferring it manually to a third party.

- Rejecting a ringing call manually.
 - Press . The caller will hear the busy signal.
 - Press  for three seconds to reject the call and additionally place the caller on the "Deny" list of the phone's directory so that calls from that number will never ring on your phone; the caller will always hear the busy signal. For more information on the "Deny" list and how to edit or remove entries from it, see "Contact Types" on page 48.
- Transferring the ringing call to another phone (blind transfer). See "Blind transfer of ringing call" on page 73.

Automatically

There are four options for rejecting incoming calls automatically or to have them forwarded automatically, either always or under certain conditions:

- Deny List. Calls from phone numbers on this list will not ring on your phone; callers will hear the busy signal. For further information, see "Contact Types" on page 48.
- DND - do not disturb mode . When this function is turned on, callers hear the busy signal. If there is an active setting for call forwarding on busy, incoming calls will be forwarded to the number specified in the setting. For more information, see "Dedicated keys" on page 26.

Exception: Phone numbers designated VIP in your phone's directory will ring on your phone even when DND is on.






- Call forwarding. For further information, see "Call forwarding" on page 79 and 110.
- Rejecting anonymous calls: See next section.

Rejecting anonymous calls

With this setting you can have your phone reject calls from phones that are blocking or not transmitting their numbers.

Please note: Calls from analog phone connections without caller ID will, most likely, be received as anonymous calls. They will be rejected when you turn this function on.

Activating rejection of anonymous calls

1. Press .
2. Select **Call Features** and press .
3. Select **Incoming Calls** and press .
4. Select **Reject anonymous**. The default setting is off (Fig. 1).
5. Press  to change the setting to on (Fig. 2). (When the function is active, pressing  will turn it off.)

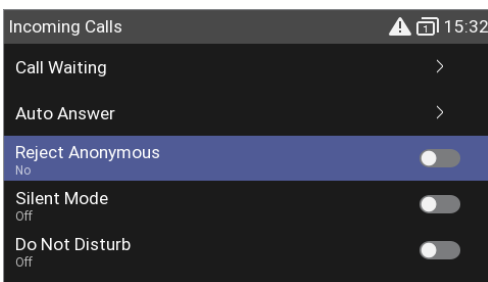


Fig. 1

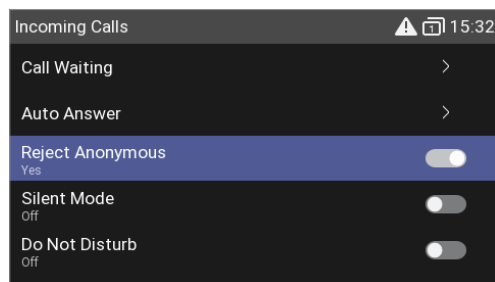



Fig. 2

6. Press  for three seconds to return to the idle screen.

Call forwarding

The phone can be set to forward incoming calls, either always or under certain conditions. The settings can be done on the phone and on the web interface. For further information on using the web interface for these settings, see "Call forwarding" on page 110.

Note: Call forwarding is set separately for each configured identity. When the setting is done on the phone, it applies to the identity selected as outgoing identity.

Forward All: Forwarding all incoming calls to the number of the phone, extension, or mailbox specified as this function's target (Fig. 2).

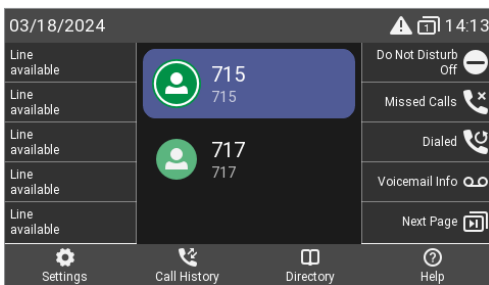


Fig. 1 - Call Forwarding off

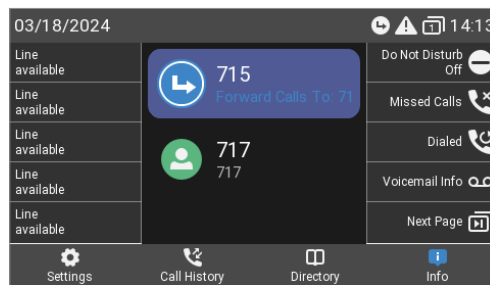


Fig. 2 - Forwarding all calls

You can map the Call Forward function onto a function key or SmartLabel key, or use the settings menu as shown in the table below. To turn on call forwarding of all calls for other configured identities, select each one in turn as the outgoing identity and repeat the setting (Fig. 3).

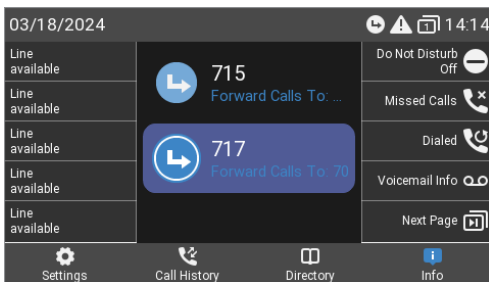


Fig. 3

Forward when Busy: Forwarding calls ringing while the phone is busy to the number of the phone, extension, or mailbox specified as this function's target.

Forward after Timeout: When a call starts ringing, the phone will wait for the number of seconds specified in the setting "Call forwarding time". If the call is not accepted by the end of this time period, it is forwarded to the number of the phone, extension, or mailbox specified as this function's target.

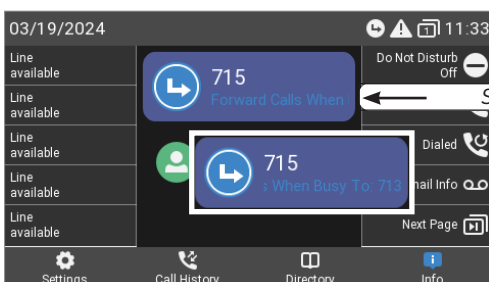


Fig. 5 - Forwarding when busy

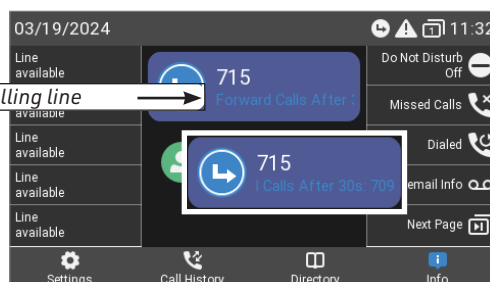


Fig. 6 - Forwarding when call has not been answered after time set in seconds

Making/changing the settings on the phone and turning on call forwarding

	Forward all	Forward when busy	Forward after timeout
Press			
Press	Call Features	Call Features	Call Features
Press	Call Forwarding	Call Forwarding	Call Forwarding
Press	Forward All	Forward when Busy	Forward after Timeout
Press	or Enable forwarding	or Enable forwarding	or Enable forwarding
	The setting will change from off (Fig. 7, below) to on, and the setting for the forwarding target will appear (Fig. 8). In the case of forwarding after timeout, the setting for the time span will also appear (Fig. 9).		
Press	Target	Target	Target
Type	phone number	phone number	phone number
Press			
Press			Call Forwarding time
Type			number of seconds
Press			
Press	for three seconds to return to the idle screen.		



Fig. 7



Fig. 8



Fig. 9

Turning off call forwarding

	Forward all	Forward when busy	Forward after timeout
Press			
Press	Call Features	Call Features	Call Features
Press	Call Forwarding	Call Forwarding	Call Forwarding
Press	Forward All	Forward when Busy	Forward after Timeout
Press	or Enable forwarding	or Enable forwarding	or Enable forwarding
	The setting will change from on to off, and the settings for the forwarding target and, in the case of timeout, for the time span will disappear.		
Press	for three seconds to return to the idle screen.		

Turning forwarding of all calls on/off with a function key or SmartLabel key

Turning call forwarding on

Note: Call forwarding is set separately for each configured identity. When the setting is done on the phone, it applies to the identity selected as outgoing identity.

1. Select the identity if there is more than one active identity.
2. Press . The display will show the **Target when Forwarding** screen.

Note: If is not available when the display is in idle mode, you can make it available on the **Function Keys** page of the phone's web interface. For further information see "Configuring the function keys", "Example 3, Changing setting of context-sensitive key" on page 95.

3. If no forwarding number has been set or if it needs to be changed, make the necessary entries.

4. Press .

Turning call forwarding off:

1. Select the identity if there is more than one active identity.
2. Press the function key underneath .

Configuring the function keys

See page 41 on how to open the phone's web interface. See page 43 on the mechanics of navigating in the windows and changing the settings.

Any changes you make will not take effect until you click **Apply** and **Save**. Changes will be lost if you open another page of the web interface without first clicking **Apply / Save**.

Function key types on Snom phones

Every phone has a limited number of hard keys. Phone users, however, have a myriad of different priorities and preferences when asked which functions they use most often and which functionalities they would like to access quickly. Snom has therefore designed the function keys to be programmable, even the preprogrammed "hard keys" whose default function is printed on them.

There are four types of programmable function keys (see also "At a glance" on page 23):

- **Context-sensitive, programmable function keys.** For the default settings, see "At a glance" on page 23. You can select a different key event to be available on each respective key when the phone is in idle mode. See "Example 3, Changing setting of context-sensitive key" on page 95 for step-by-step instructions on how to change the function mapped onto the key.

You cannot change the functions that are available when the phone is active, for example when you are in a call, when the phone is ringing, etc. Depending on the activity, different functions will be available.

See "Appendix 1 - Display Symbols and Icons" on page 122 for the lists of symbols and their description.

- **Navigation, confirmation, and cancel keys.** For the default settings, see "At a glance" on page 23. You can select a different key event to be available on each respective key when the phone is in idle mode.

You cannot change the functions that are available when the phone is active, for example when you are in a call, when the phone is ringing, etc.

- **Dedicated, customizable function keys.** The default setting is the respective key event printed onto the key. Other key events and a selected number of other functionalities can be programmed onto them. For the default settings, see "At a glance" on page 23.
- **SmartLabel keys with LEDs** – the keys controlling the SmartLabels – on the phone . All available functionalities, including key events, can be programmed onto them.


Settings descriptions:


- **Context**

This setting specifies which configured identity will be used when executing the functionality of the key. You may want to use this feature when you have accounts with different providers or when you wish to present different identities to certain destinations.

For example: If you have programmed key P2 to speed dial a specific number and you want to use configured identity 2 to call that number, select configured identity 2 from the drop-down menu of P2's "Context". When you speed dial the number by pressing key P2, identity 2 will be used as the outgoing identity.

The default setting is "Active", which means that the identity selected as the phone's outgoing identity at any given time will be used.

- **Type**
 Select the type of functionality from the drop-down list. See "Appendix 4 - Programmable Functions" on page 133 for more information. If you select "Key Event", a drop-down list with the available key events will replace the text field under "Number". The default setting is "Line".
- **Number**
 Enter one phone number or value for the function or, if the function is key event, select an event from the drop-down list. Enter phone numbers exactly the way they need to be dialed, i.e, type the number without spaces or punctuation marks between the digits. For example, a number with an area code that might conventionally be notated as (617) 555-0704 should be entered as 6175550704.
- **Short/Full Label Mode**
 Select a mode from the drop-down list. The default settings for both are icon and text.
 - Icon. The label will display the icon of the functionality mapped onto the key, e.g. ☎ if extension, 📄 if speed dial, etc.
 - Text. The label will display the text you have entered in step 10 of "Function key settings on the phone" on page 87 or the number if no text was entered.
 - Icon and text. The label will display the icon of the functionality mapped onto the key and the text or number.
- **Short/Full Label**
 Optional: Enter a name or other descriptive text in the text field. This is the data displayed on the key's label area on the phone. If you leave the field blank, the number will be displayed in the key label area.
- **LP Feature** (setting on phone only – functionality for long-pressing key)
 This is a shortcut to the configuration menu of each function key with LED  (keys P1-P40). In the default setting, the function is enabled (Fig. 1).

If necessary, use the Next Page key  to select the page the key is on, and then press the function key for three seconds to open its configuration menu. The yellow LED on the function key blinks. See "Function key settings on the phone" on page 86, step 4, on how to continue.

Note: The LP Feature must be deactivated for the functions Push-to-Talk and Line Info Layer.

If the LP feature of a key has been disabled, use the **Preferences** menu to access the key's configuration menu. See "Function key settings on the phone" on page 85.

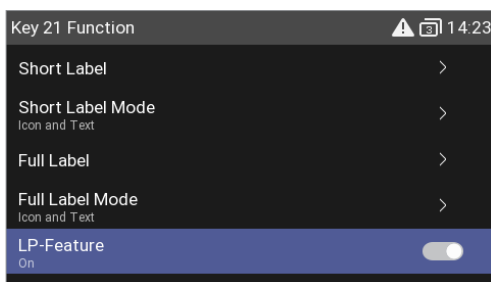


Fig. 1

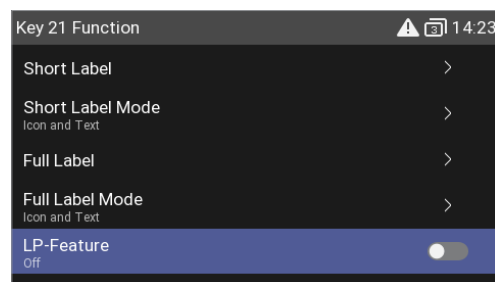


Fig. 2

Function key page of phone's web interface

The page has two subpages. The key settings are configured on the subpage **Key Assignment**; the manner in which the SmartLabel keys are shown on the display is configured on the subpage **SmartLabel**.

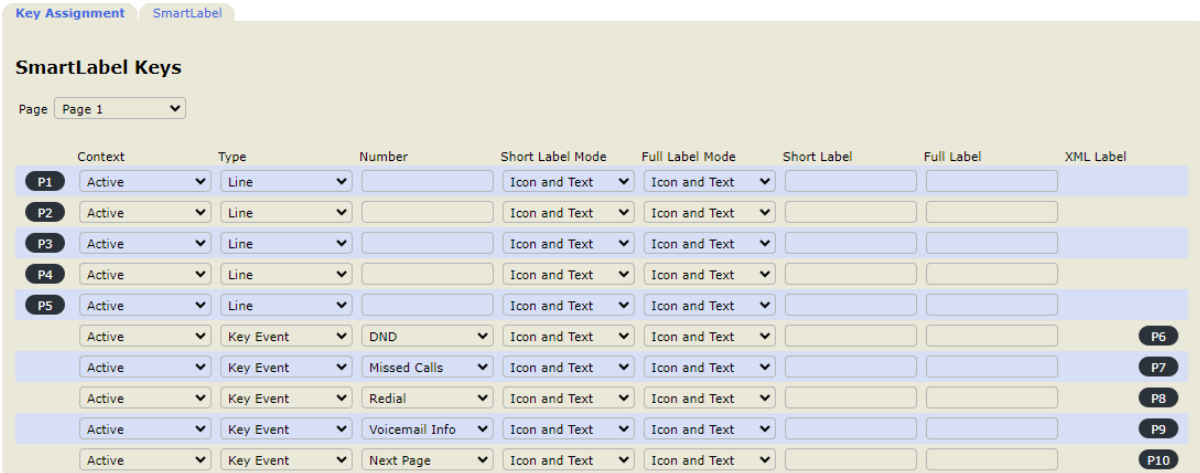


Fig. 1 - Page 1 with keys P1–P10 on phone's web interface

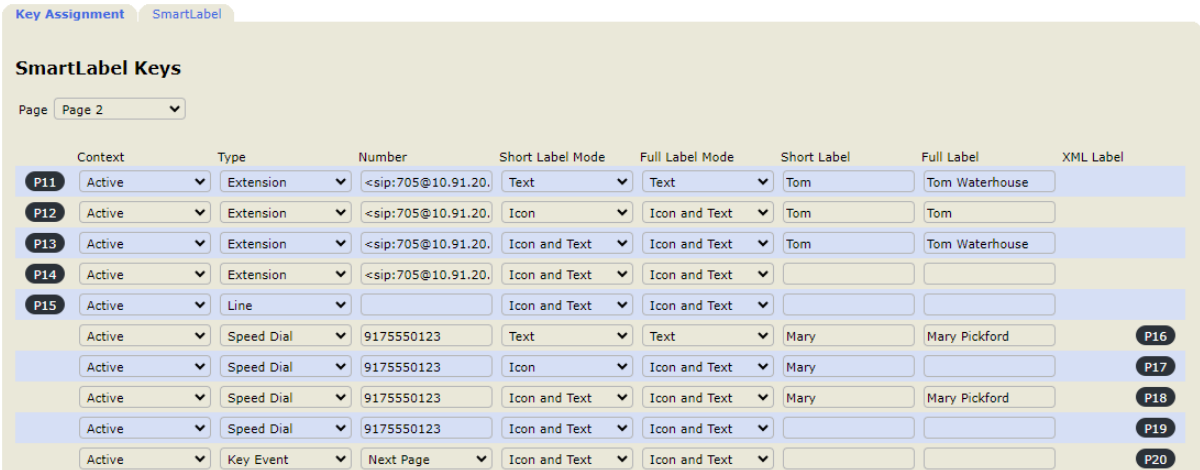


Fig. 2 - Page 2 keys with and without "Short" and "Full Label" settings

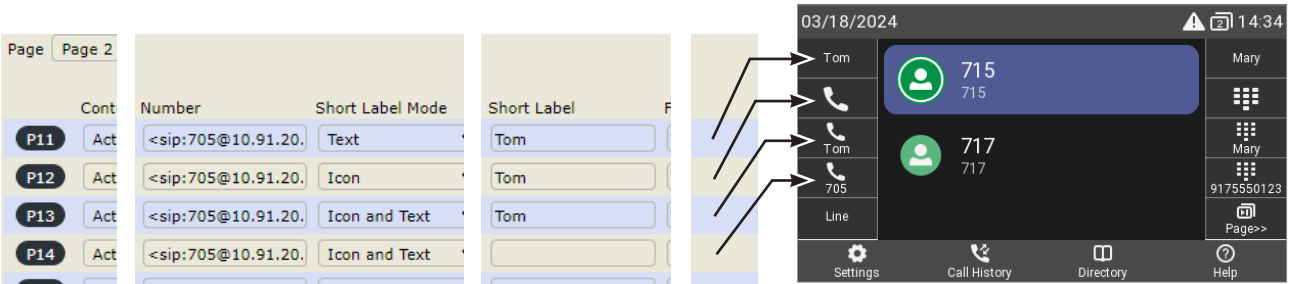


Fig. 3 - Short labels P11 – P14

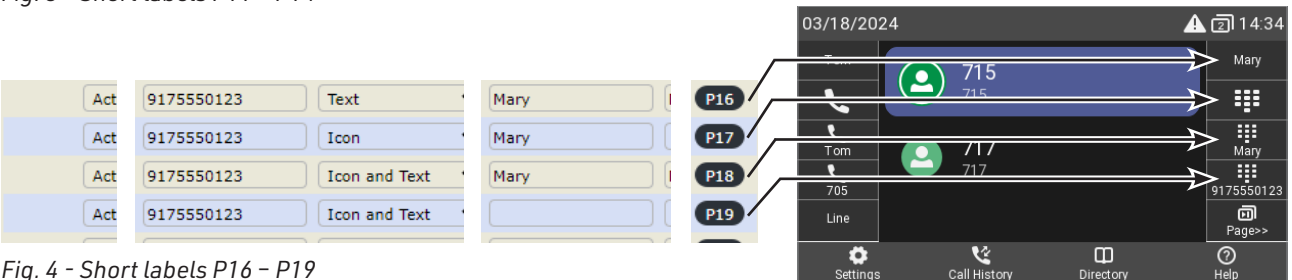


Fig. 4 - Short labels P16 – P19

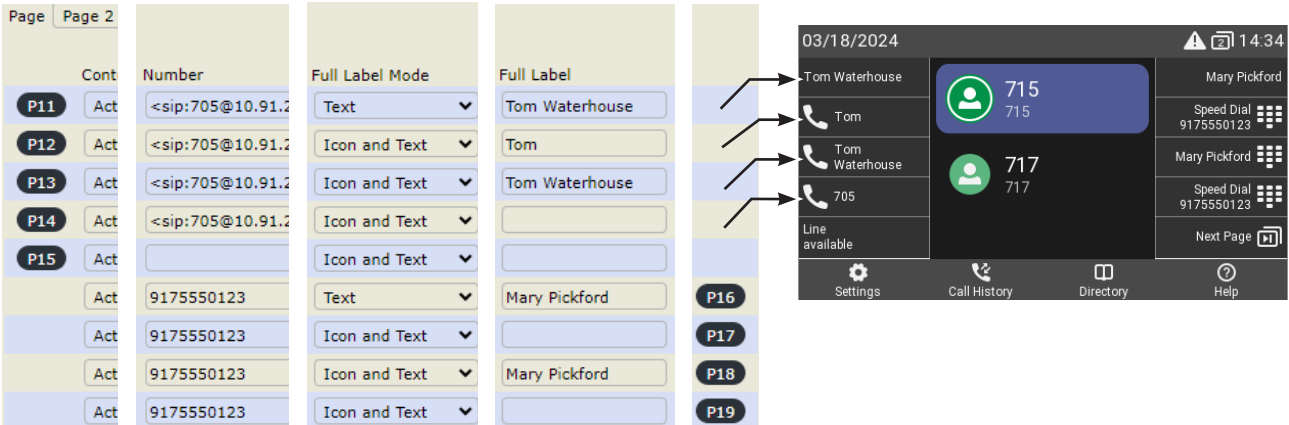


Fig. 5 - Full Labels P11 - P14

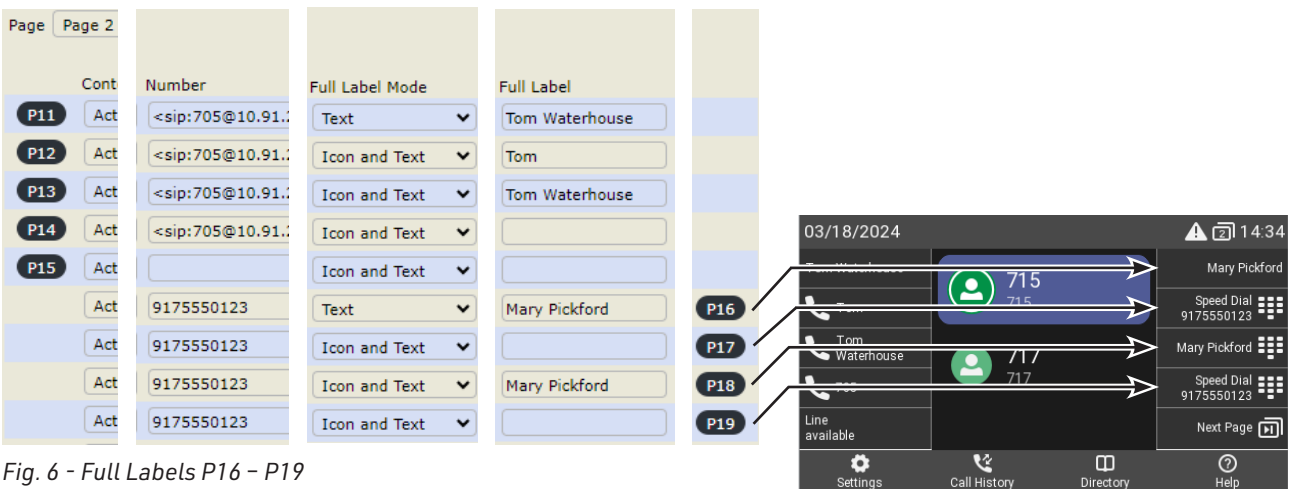


Fig. 6 - Full Labels P16 - P19

Programming the function keys

The freely programmable function keys on the phone can be mapped on the phone and on the phone's web interface. We recommend using the web interface which is faster and more comfortable.

Function key settings on the phone

On the phone, a limited number of functionalities is available.

1. Press  > **Preferences** > **Function Keys** (Fig. 1).

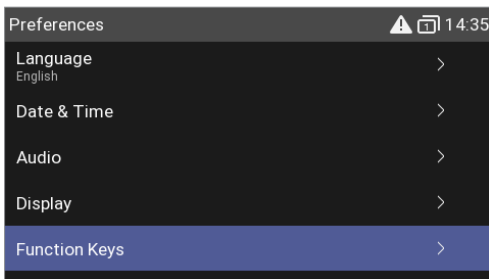


Fig. 1

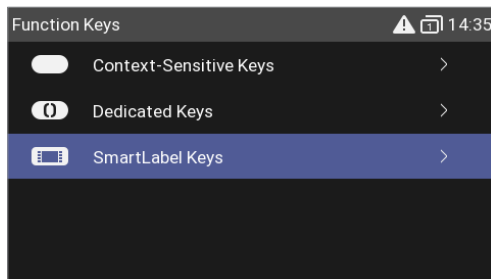



Fig. 2

2. Select **SmartLabel Keys** (Fig. 2).

3. Select **Page 1, 2, 3,** or **4,** respectively, by scrolling to the respective page and pressing  (Fig. 3). In the following example, we will be configuring key 21 on page 3.

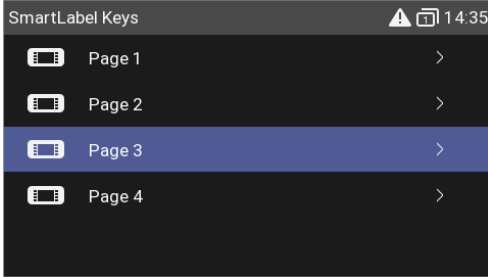


Fig. 3

4. Select the key and press  to open the **Key 21 Function** menu (Fig. 4). The selected key flashes yellow if the SmartLabel key page with the key to be configured is on-screen (Fig. 5).

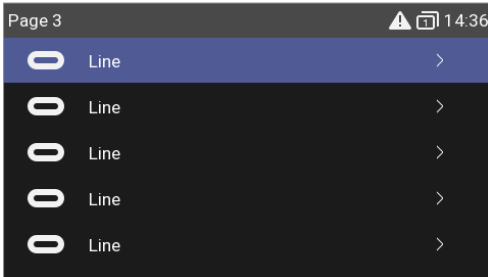



Fig. 4



Fig. 5

5. The default for **Context** is *Active*, i.e., all configured identities whose status is "active" (Fig. 6).
a. If you want to restrict the functionality to a configured identity, select **Context** and press .

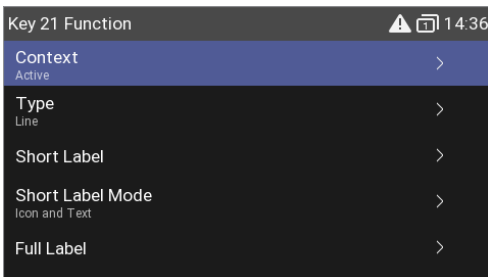


Fig. 6

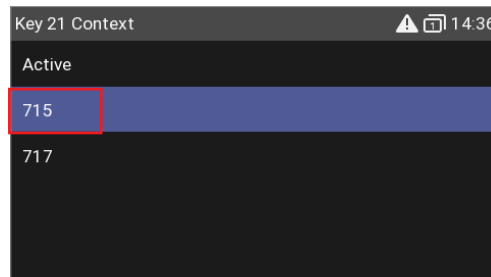


Fig. 7

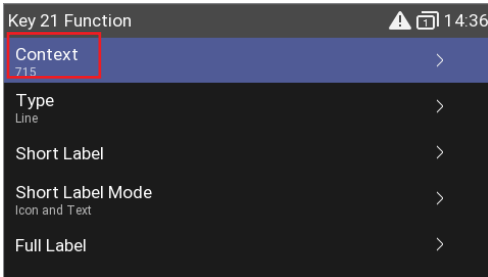




Fig. 8

6. Select **Type** and press  (Fig. 9). Use ∇ / \blacktriangle to scroll to a functionality on the list (Fig. 10) and press . The following prompts depend on the selected functionality.

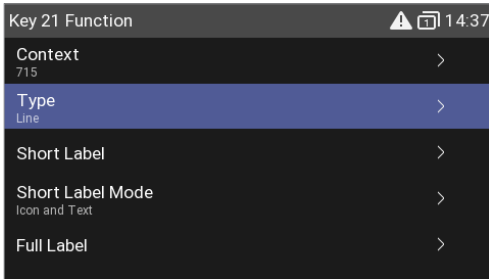


Fig. 9

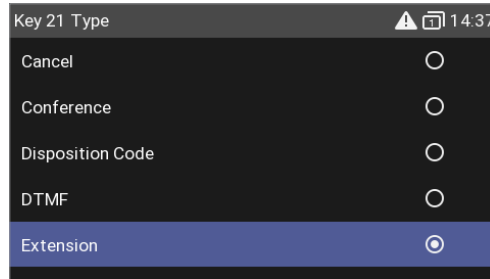



Fig. 10

7. In our example, the functionality is *Extension* (Fig. 10). Press  to select and return to the Key 21 Function menu where **Number** has been added to the menu below "Type" (Fig. 11).

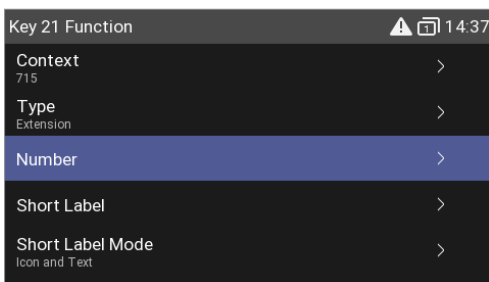




Fig. 11

8. Select **Number** and press .
9. Enter the extension number and press  (Fig. 12).

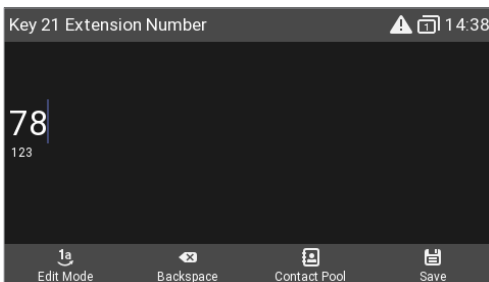




Fig. 12

10. **Short Label** (Fig. 13) and **Full Label** are optional. This is the data displayed on the key's short and full label areas on the phone's display (see "Fig. 3 - Short labels P11 – P14" on page 84, "Fig. 4 - Short labels P16 – P19", "Fig. 5 - Full Labels P11 – P14", and "Fig. 6 - Full Labels P16 – P19" on page 85). If you do not enter data for each label type, the number will be displayed in the label area instead. Enter a name or other descriptive text (Fig. 14) and press , or press  without entering data.

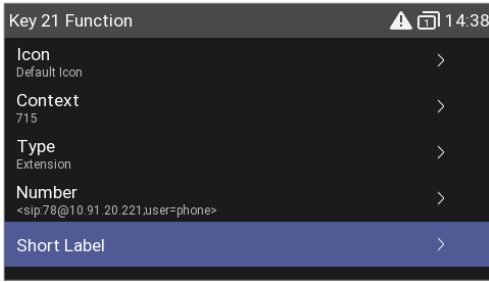


Fig. 13

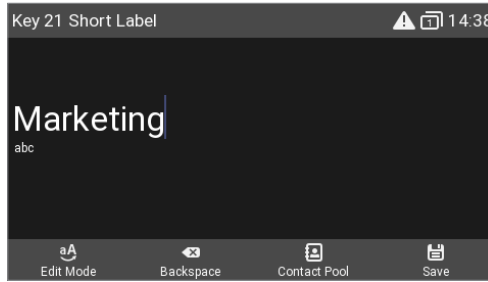


Fig. 14

11. Select **Short Label Mode** (Fig. 15) and press .

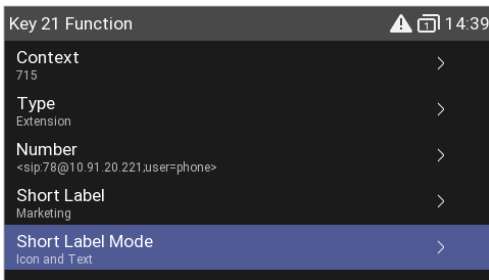


Fig. 15

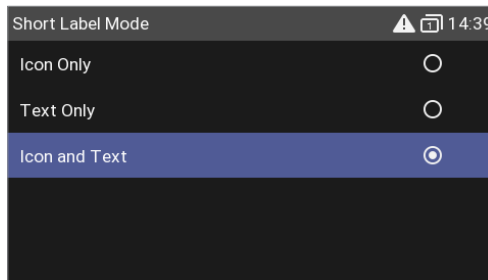




Fig. 16



12. Specify the content you want the label to display by scrolling to the respective line (Fig. 16) and

pressing  to save and return to the **Key 21 Function** menu (Fig. 15). The default is Icon and Text; you can also select Text Only or Icon Only – see "Short/Full Label Mode" on page 83 for more information.

13. Select **Full Label Mode** and press .

14. Specify the content you want the label to display by scrolling to the respective line and pressing

 to save and return to the **Key 21 Function** menu. The default is Icon and Text; you can also select Text Only or Icon Only – see "Short/Full Label Mode" on page 83 for more information.

15. Press  briefly to return to the **Key Function** menu; press  for three seconds to return to the idle screen. When page 3 is on-screen, the top left key can now be used to dial the extension by briefly pressing the key and to pick up calls ringing on the extension (Fig. 17); the LED will indicate the call status of the extension, i.e., idle, ringing, and in call. See "Example 1, Extension monitoring and call pick-up" on page 91 for more information on how to configure and use extension monitoring.

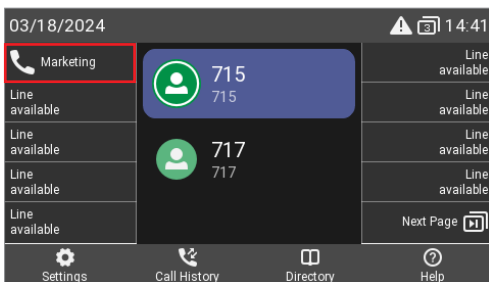


Fig. 17

Function key settings on the web interface

See "Selected examples for function key programming" on page 90 for the function key mapping, and "Display options for SmartLabel keys" on page 96 for the optical presentation on the display.

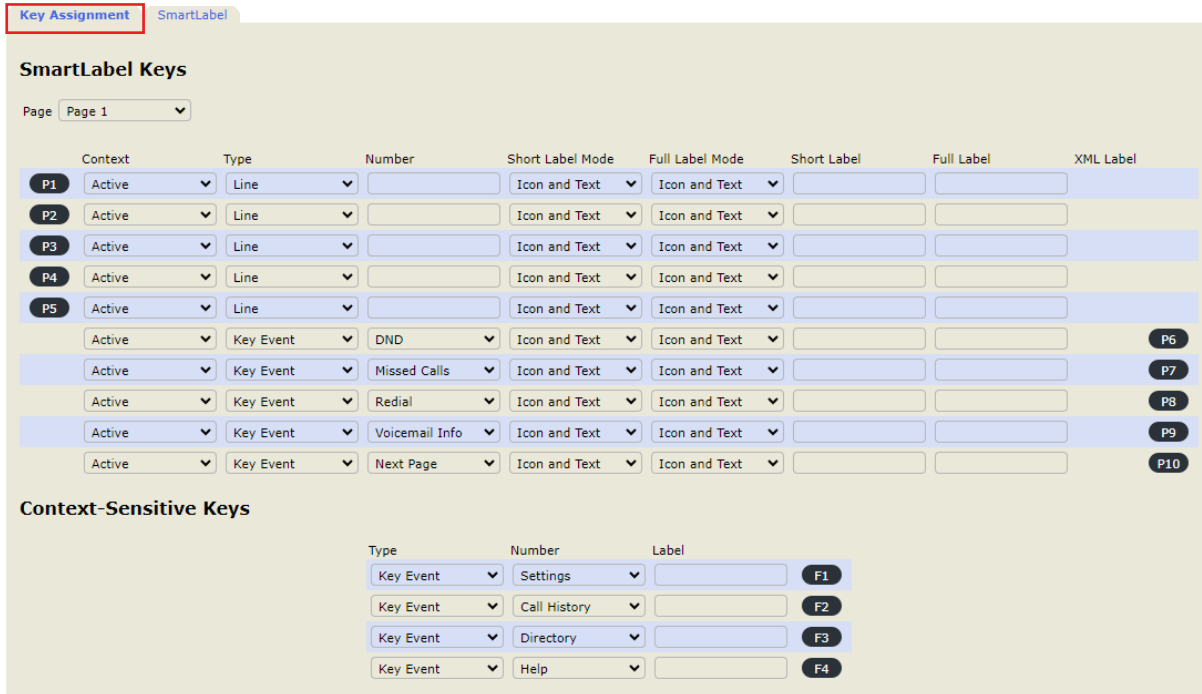


Fig. 1

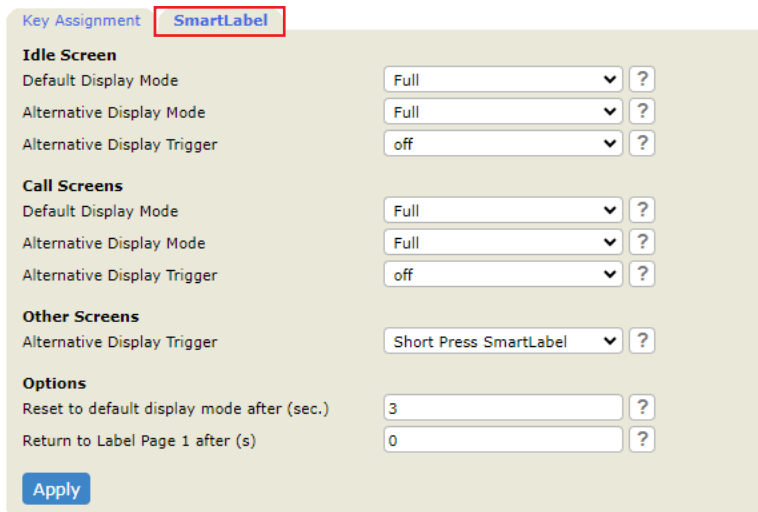


Fig. 2

1. On the phone's web interface, click **Function Keys** in the menu on the left. When the page is opened, the **Key Assignment** page is on-screen, as indicated by the **bold** font of its tab (Fig. 1). The four types of programmable function keys can be configured on this page.
2. Click the **SmartLabel** tab to open the settings for the appearance of the SmartLabels on the display (Fig 2). For the instructions on these settings, see "Display options for SmartLabel keys" on page 96.

3. If you make any modifications to the settings on either page, click **Apply** to save them before opening the other subpage or any other page of the phone's web interface, and before closing the web interface.
4. After you have clicked **Apply**, the button **Save** will appear at the top of the page. We strongly recommend clicking this button as well; any modifications not saved will be lost if and when the phone is unplugged from its power source or when there is a power outage.

Selected examples for function key programming


This chapter will show you a few examples for customizing function key settings to your needs and preferences, using the phone's web interface:

- First example: Extension monitoring and call pickup via one of the phone's SmartLabel keys
- Second example: Speed dialing with a SmartLabel key
- Third example: Changing setting of context-sensitive key

Example 1, Extension monitoring and call pick-up

This feature makes it possible to pick up a call ringing on another extension registered at the same registrar, for example when the other extension is busy or when the user is absent. The prerequisites for this function are:

- It must be supported by the PBX.
- The extensions must permit this function. Setting: Phone's web interface > **Identity** (1-12) > **SIP** tab > **Allow incoming Extension Monitoring**. The default is **on**.
- Restricting permission to groups of users by setting an ID: Phone's web interface > **Identity** (1-12) > **SIP** tab > **Extension Monitoring Group ID**: Enter an ID (any character string) into the textfield. Note: The first character of the ID must not be a '{' curly brace.
- The extension to be monitored must be programmed onto one of the SmartLabel keys. In our example we are monitoring extension 705 on key P11 which is located on function key page 2.

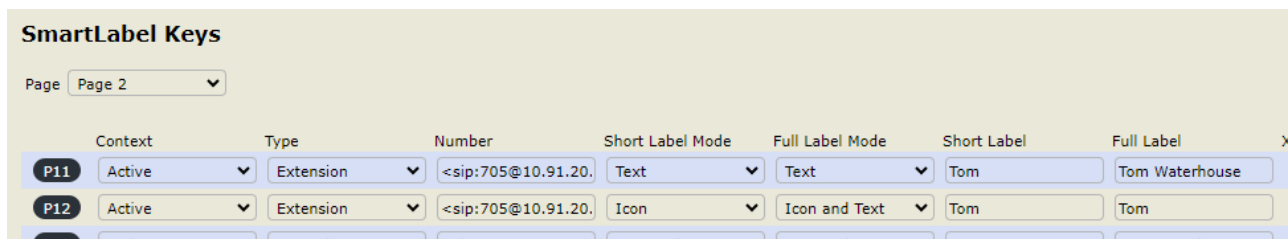

1. On the phone's web interface, click **Function Keys** in the menu on the left.
2. Click the **Key Assignment** tab, if necessary.
3. Select **Page 2** from the drop-down menu of **Page**.
4. Under **Context** of P11, select "Active" or one of the configured identities from the drop-down list.
5. Under **Type**, select "Extension" from the drop-down list.
6. In the **Number** text field, enter the phone number whose calls you want to pick up. In our example it is 705.
7. Select a display option from the drop-down menu of **Short Label Mode**. The default is "Icon and Text", i.e., an icon depicting the function on the key and the number or the short label text will be displayed on the display. name or descriptive text.
8. Select a display option from the drop-down menu of **Full Label Mode**. The default is "Icon and Text", i.e., an icon depicting the function on the key and the number or the short label text will be displayed on the display.
9. Optional: In the text fields of **Short Label** and **Full Label**, enter a name or descriptive text. In our example, it is "Tom" and "Tom Waterhouse", respectively. If either one or both of the text fields are empty, the label area will display the number.
10. Click **Apply** and **Save**.

Note: The page with the monitored extension(s) must be on-screen in order for the key's LEDs to show the status of the respective monitored extension.

The LED of key P11 on the phone will now flash red quickly when a call is ringing on 705 but only if page 2 is on-screen. If the call is not answered, you can pick it up by pressing key P11. When 705 is engaged in a call – **and page 2 is on-screen** – the key will glow red steadily.

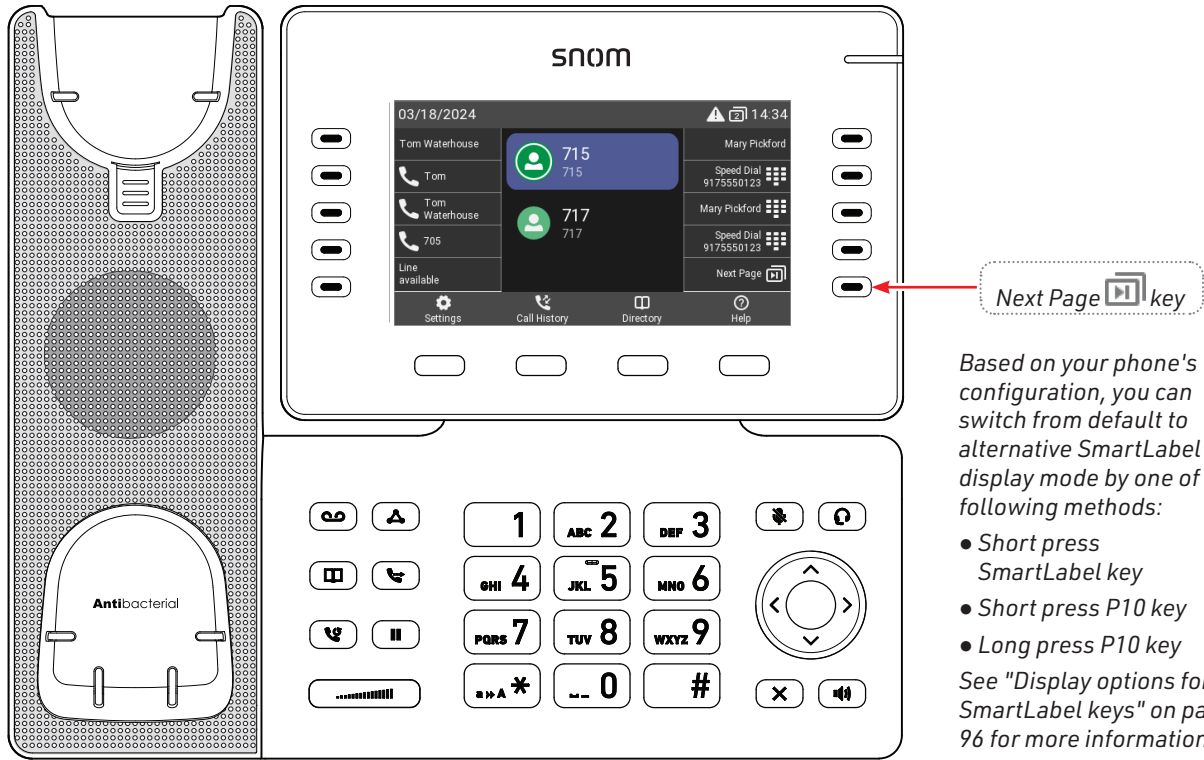


Fig. 1

Based on your phone's configuration, you can switch from default to alternative SmartLabel display mode by one of the following methods:

- Short press SmartLabel key
- Short press P10 key
- Long press P10 key

See "Display options for SmartLabel keys" on page 96 for more information.

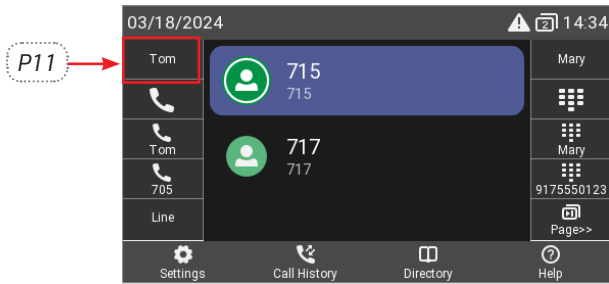


Fig. 2 - Short label mode

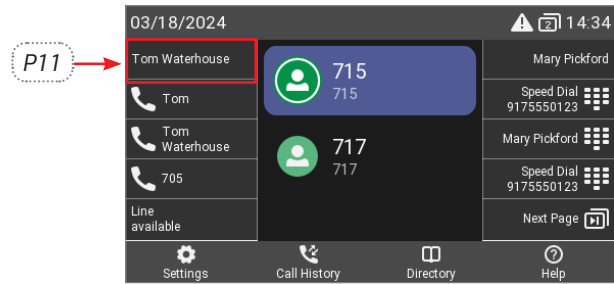


Fig. 3 - Full label mode

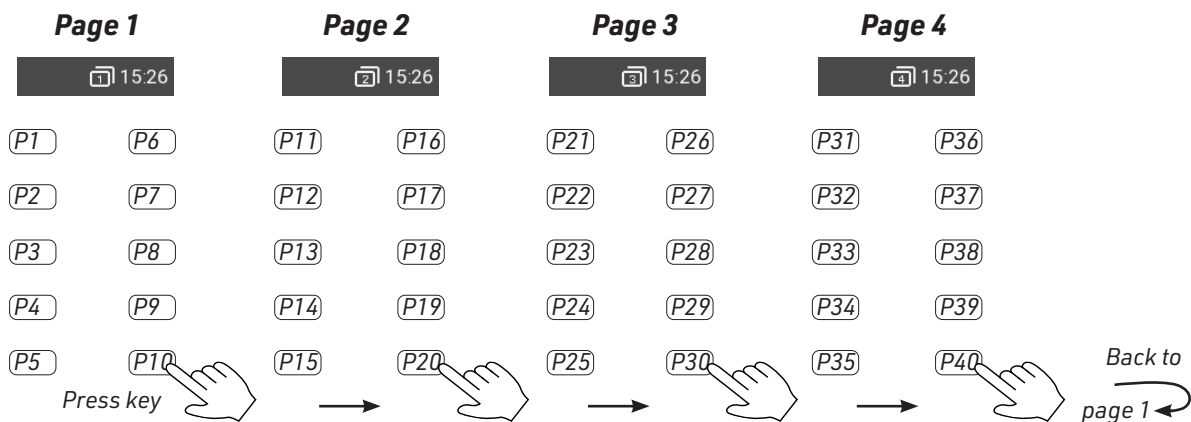


Fig. 4

Press the **Next Page** key to put page 2, 3, and 4 on-screen successively. When page 4 is on-screen, press key to return to page 1.

Example 2, Speed dialing

Besides using the **Speed Dial** page on the web interface to program speed dial numbers, you can also put the functionality on the SmartLabel keys on the phone. In our example, key P18 on page 2 of the function keys will be used to speed dial the number 9175550123.

	Context	Type	Number	Short Label Mode	Full Label Mode	Short Label	Full Label	XML Label
P11	Active	Extension	<sip:705@10.91.20.	Text	Text	Tom	Tom Waterhouse	
P12	Active	Extension	<sip:705@10.91.20.	Icon	Icon and Text	Tom	Tom	
P13	Active	Extension	<sip:705@10.91.20.	Icon and Text	Icon and Text	Tom	Tom Waterhouse	
P14	Active	Extension	<sip:705@10.91.20.	Icon and Text	Icon and Text			
P15	Active	Line		Icon and Text	Icon and Text			
	Active	Speed Dial	9175550123	Text	Text	Mary	Mary Pickford	P16
	Active	Speed Dial	9175550123	Icon	Icon and Text	Mary		P17
	Active	Speed Dial	9175550123	Icon and Text	Icon and Text	Mary	Mary Pickford	P18
	Active	Speed Dial	9175550123	Icon and Text	Icon and Text			P19

1. On the phone's web interface, click **Function Keys** in the menu on the left.
2. Click the **Key Assignment** tab, if necessary.
3. Select **Page 2** from the drop-down menu of **Page**.
4. Under **Context** of P18, select "Active" or one of the configured identities from the drop-down list.
5. Under **Type**, select "Speed Dial" from the drop-down list.
6. In the **Number** text field, enter the phone number that you want to be able to speed dial. In our example it is phone number 555-0123 in area code 917.
Type each phone number with any necessary area code and/or country code etc. without spaces, hyphens, etc. Example: In conventional notation you might write the number as (917) 555-0123. Type 9175550123 into the text field.
7. Select a display option from the drop-down menu of **Short Label Mode**. The default is "Icon and Text", i.e., an icon depicting the function on the key and the number or the short label text will be displayed on the display. name or descriptive text.
8. Select a display option from the drop-down menu of **Full Label Mode**. The default is "Icon and Text", i.e., an icon depicting the function on the key and the number or the full label text will be displayed on the display.
9. Optional: In the text fields of **Short Label** and **Full Label**, enter a name or descriptive text. In our example, it is "Mary" and "Mary Pickford", respectively. If either one or both of the text fields are empty, the label area will display the number.
10. Click **Apply** and **Save**.

You can now speed dial the number 9175550123 by selecting page 2 of the SmartLabels and pressing the LED key adjacent to the label.

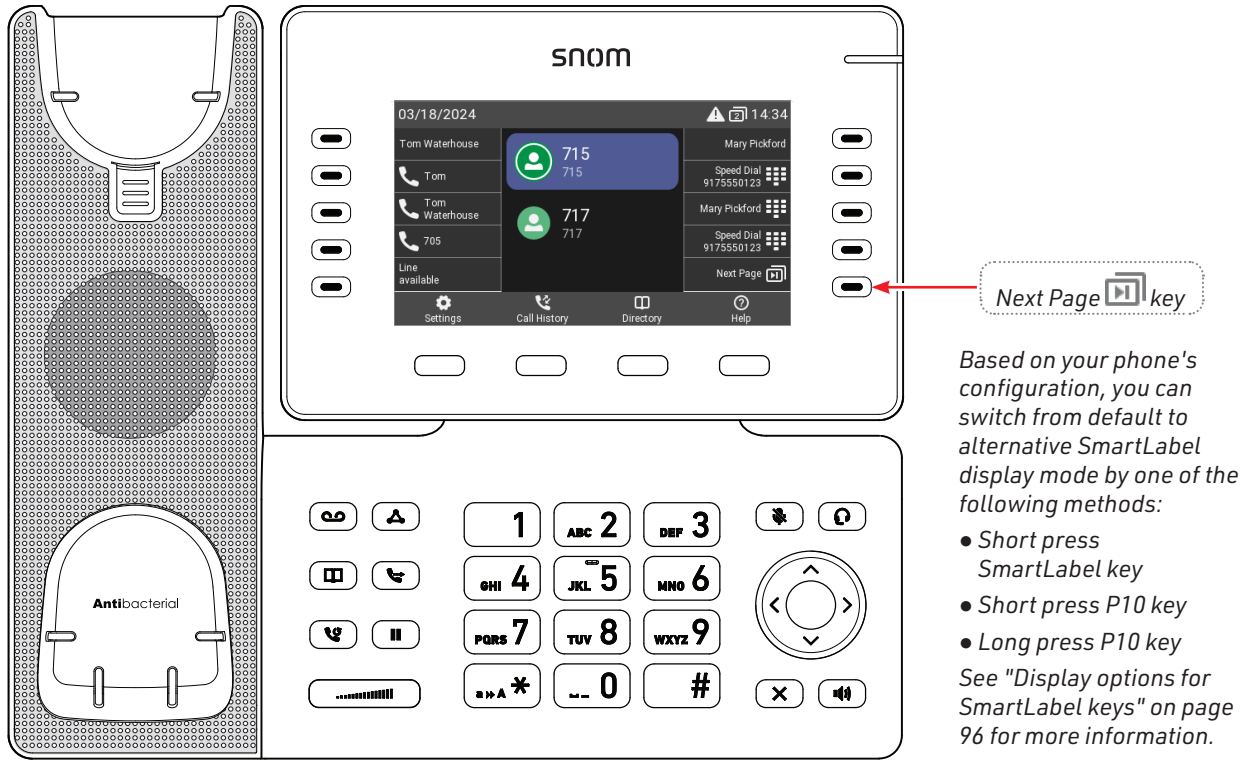


Fig. 1

Based on your phone's configuration, you can switch from default to alternative SmartLabel display mode by one of the following methods:

- Short press SmartLabel key
- Short press P10 key
- Long press P10 key

See "Display options for SmartLabel keys" on page 96 for more information.

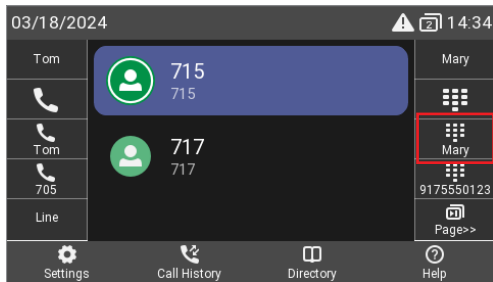


Fig. 2 - Short label mode

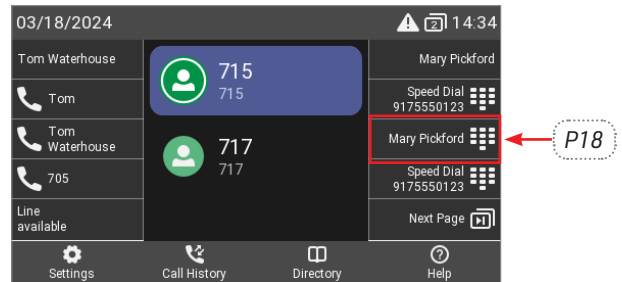


Fig. 3 - Full label mode


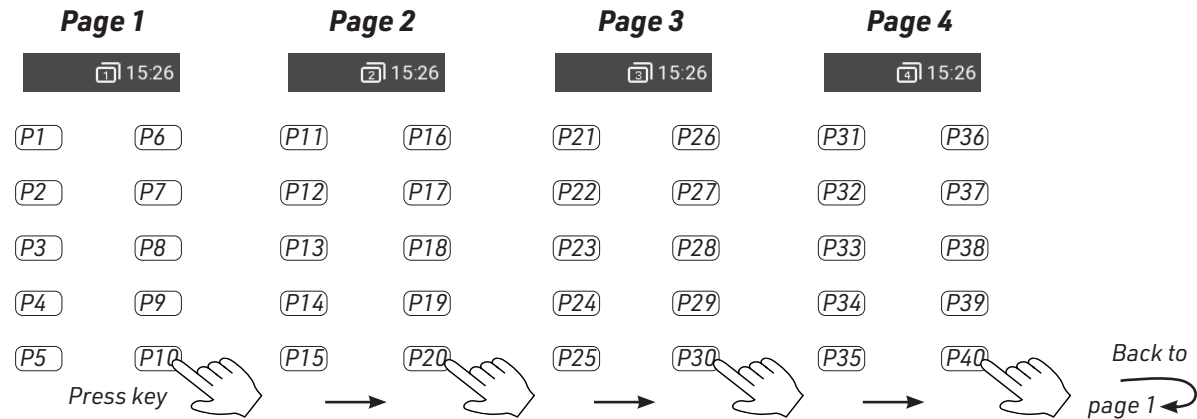


Fig. 4

Press the **Next Page** key to put page 2, 3, and 4 on-screen successively. When page 4 is on-screen, press key to return to page 1.


Example 3, Changing setting of context-sensitive key

You can select a different key event to be available on the four keys under the display when the phone is in idle mode. You cannot change the functions that are available when the phone is active, for example when you are in a call, when the phone is ringing, etc. In the following example, the setting of key F3 will be changed from **Directory** to **LDAP Directory**.

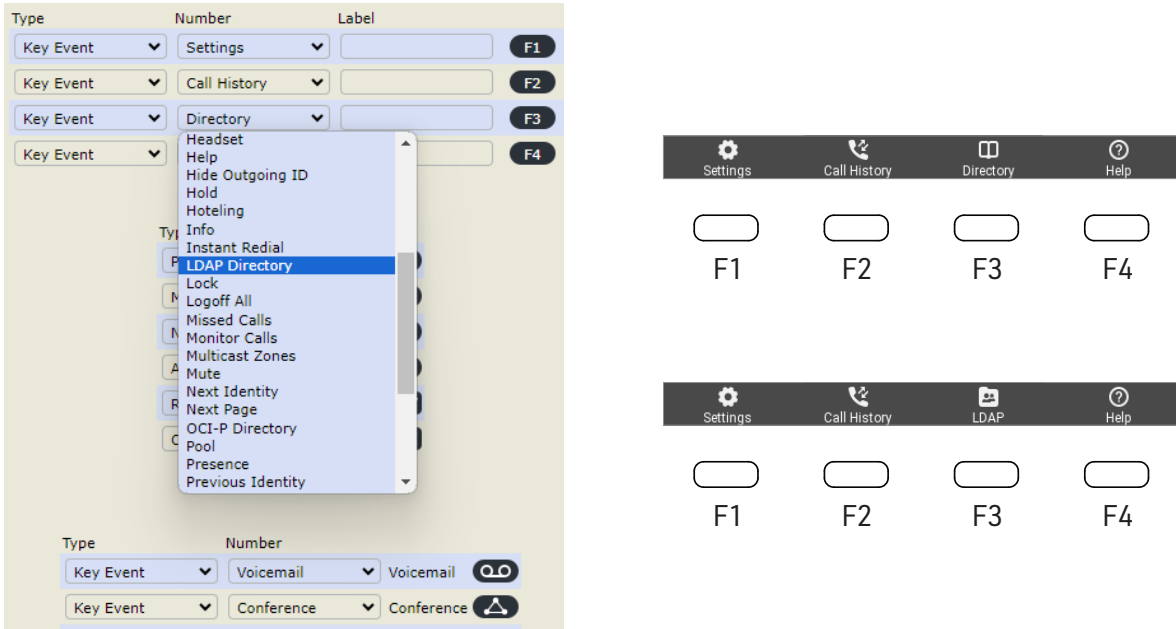

1. On the phone's web interface, click **Function Keys** in the menu on the left.
2. Click the **Key Assignment** tab, if necessary.
3. Click the **Number** drop-down list of context-sensitive key F3 and select "LDAP Directory".
4. Click **Apply** and **Save**.


By pressing key F3 you now have direct access to your LDAP directory, if available and if the settings are provided on the phone's **Advanced Settings** page > **Network** tab > **LDAP** section.

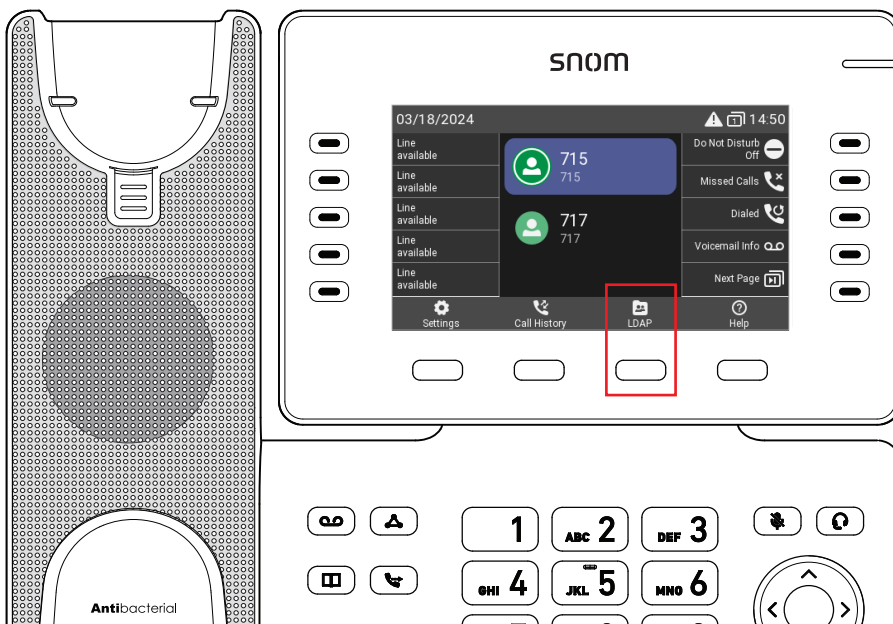


Display options for SmartLabel keys

A number of settings control the appearance of the SmartLabels on the display; they can be set on the phone and on the phone's web interface. There are separate settings for the idle screen, call screens, and other screens. Settings options:

- **Default Display Mode** and **Alternative Display Mode**. The display will revert to the default mode after the number of seconds set in **Return to Default Mode** have elapsed. The factory defaults are **Short** label for the **Default display mode**, and **Full** label for the **Alternative Display Mode**. You can also turn either one or both of them off.

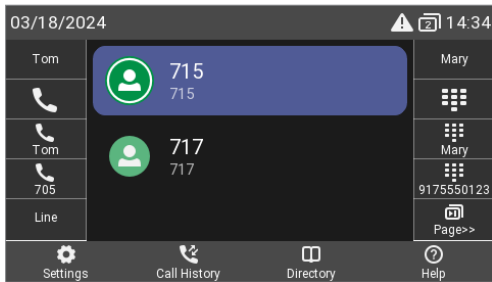

Short label

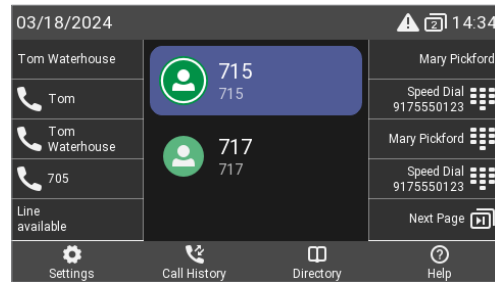

Full label

- **Alternative display trigger**. This setting defines how the appearance of the SmartLabels is switched from the default to the alternative appearance. The default setting is **off**.
- **Return to Default Mode / Reset to default display mode after (sec.)**. This setting defines after how many seconds the appearance of the SmartLabels will automatically return to the default. Valid values are 0 to 360 seconds, the default is 3 seconds. Selecting 0 turns automatic reversion off.

Manually returning the display mode to the default: Press . The display mode will also return to the default setting when another key is pressed, e.g., a number key to open the dial screen, the directory key to access the phonebook, etc.

- **Return to label page 1 after (sec)/Return to first page**. This setting defines after how many seconds the key page shown on the display, if other than 1, will automatically return to the first page. Valid values are 0 to 1209600 seconds; the default is 0 (firmware version 10.x.).

Settings on the phone

Display mode settings

1. Press > **Preferences** > **Display** > **Primary display** (if there is at least one connected expansion module) > **SmartLabel options** (Fig. 1) and press .

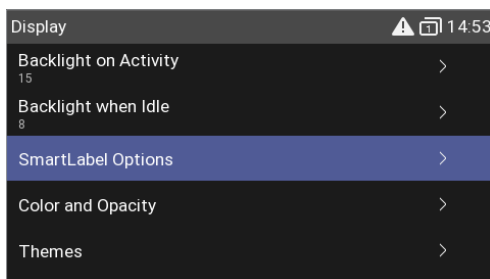


Fig. 1

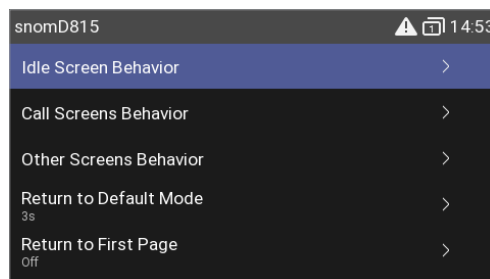



Fig. 2

2. Select **Idle Screen Behavior**, **Call Screen Behavior**, or **Other Screen Behavior** (Fig. 2) and


press . The default settings are indicated in **bold italic** in the table. The available options for the three different screens are:

	Idle screen	Call screens	Other screens
Default display mode	Off	Off	–
	Short	Short	–
	Full	Full	–
Alternative display mode	Short	Short	–
	Full	Full	–
Alternative mode trigger	Off	Off	Off
	Short Press P10	Short Press P10	Short Press P10
	Long Press P10	Long Press P10	Long Press P10
	Short Press SmartLabel	Short Press SmartLabel	Short Press SmartLabel

3. The configuration of the settings for all screens and other screens is done the same way.

- **Default Display Mode and Alternative Display Mode:**

- a. Select the display mode you want to change, for example the default mode (Fig. 3), and

press . In the following example, the default mode is set to **Full** (Fig. 3 and 4), and we want to change it to **Short**.

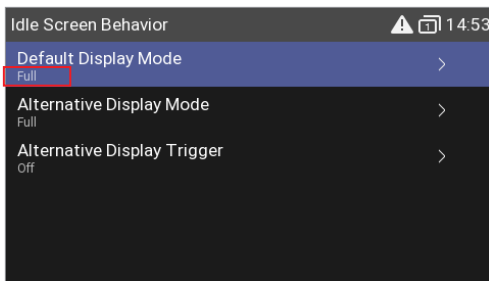


Fig. 3

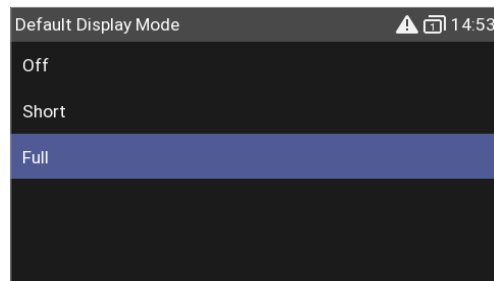



Fig. 4

- b. Use the navigation key ∇ / \blacktriangle to select **Short** (Fig. 5) and press  to save and return to the **Screen Behavior** menu where the line underneath **Default Display Mode** now reads **Short** (Fig.6).

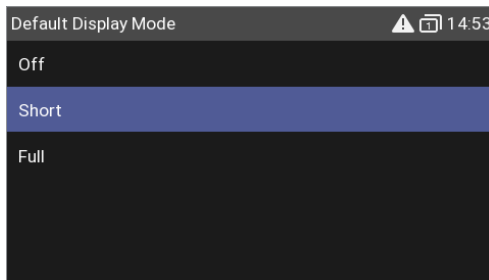


Fig. 5

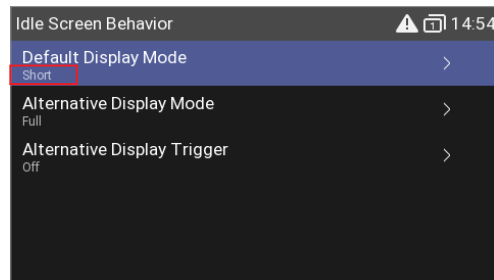



Fig. 6

◦ **Alternative Display Trigger:**

- a. Use the navigation key ∇ / \blacktriangle to select **Alternative Display Trigger** (Fig. 7) and press . In the following example, the trigger is currently set to **Off** (Fig. 7), as indicated by the radio button (Fig. 8), and we want to change it to **Long Press P10**.

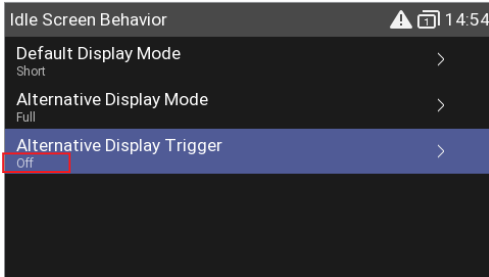


Fig. 7

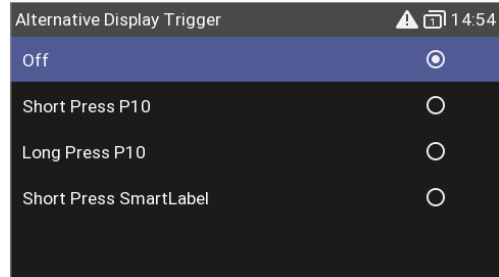



Fig. 8

- b. Use the navigation key ∇ / \blacktriangle to select **Long Press P10** (Fig. 9).
- c. Press  to save and return to the **Screen Behavior** menu where the line underneath **Alternative Display Trigger** now reads **Long Press P10** (Fig. 10).

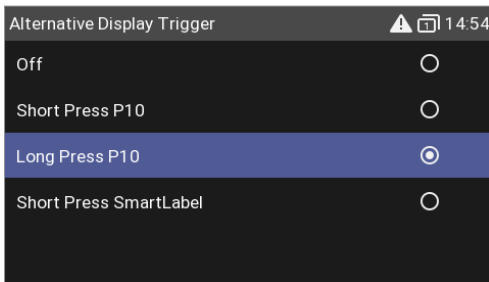


Fig. 9

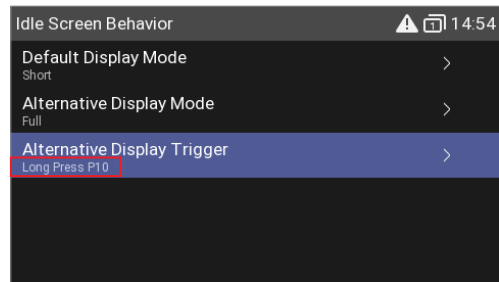





Fig. 10

- 4. Press  to return to the **SmartLabel options** menu (Fig. 2).

Timer setting for returning display mode to default

- 1. Press  > **Preferences** > **Display** > **Primary display** (if there is at least one connected expansion module) > **SmartLabel options** and press .
- 2. Select **Return to Default Mode** (Fig. 11) and press . The preset default is 3 seconds.

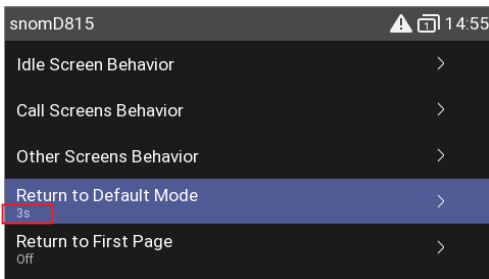


Fig. 11

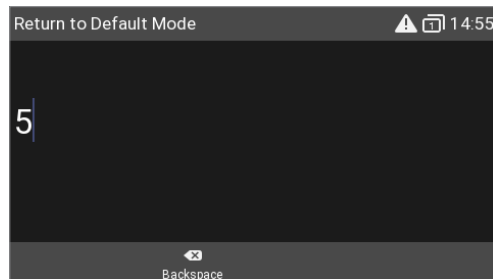



Fig. 12

3. Enter a different number of seconds between 0 and 360 (Fig. 12) on the alphanumeric keypad and press  to save and return to the **SmartLabel options** menu (Fig. 13). The timer now shows the new setting.

Note: If you enter 0 seconds, the display will not return to the default mode automatically.

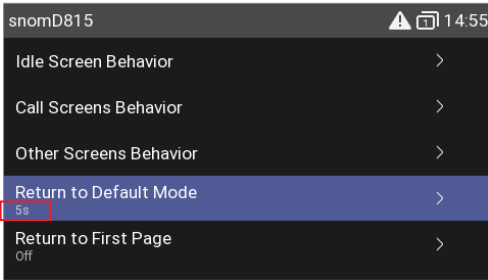



Fig. 13

Timer setting for returning label page to page 1

The page will automatically revert to page 1 after the number of seconds specified in this setting.

1. Press  > **Preferences** > **Display** > **Primary display** (if there is at least one connected expansion module) > **SmartLabel options**.

2. Select **Return to first page** (Fig. 14) and press . The preset default is 60 seconds (Fig. 15).

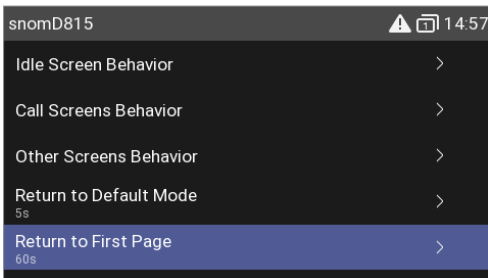


Fig. 14

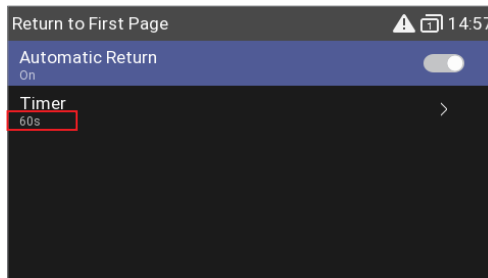




Fig. 15

3. If **Automatic Return** is off (Fig. 16), press .

If **Automatic Return** is on (Fig. 15), select **Timer** (Fig. 17) and press .

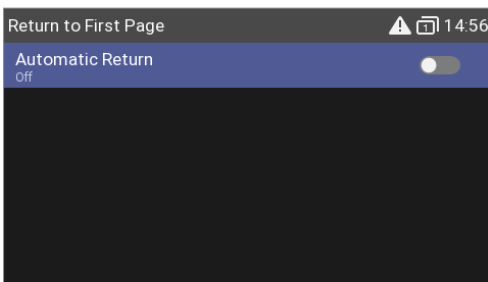


Fig. 16

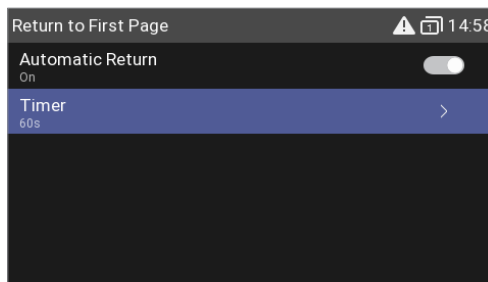



Fig. 17

4. Enter a different number of seconds between 0 and 1209600 seconds (Fig. 18) on the alphanumeric keypad and press  to save and return to the **Return to First Page** menu. The timer now shows the new seconds setting (Fig. 19).

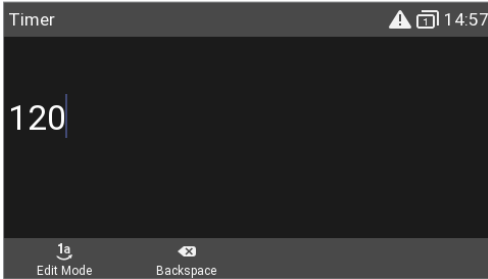


Fig. 18





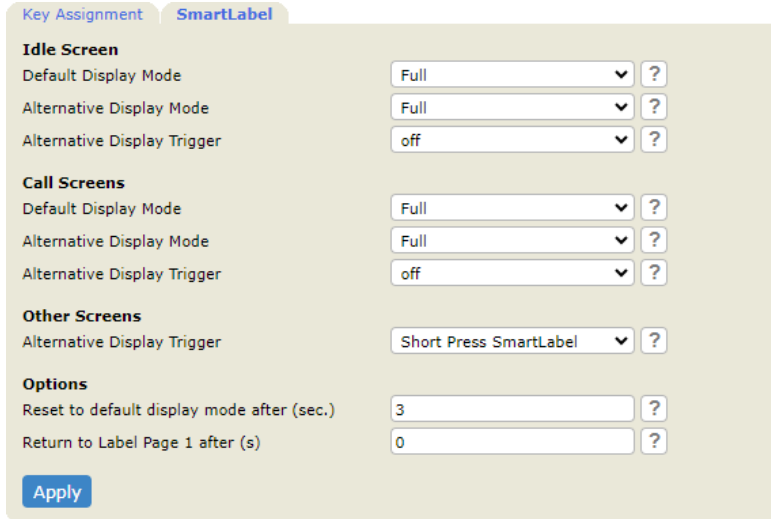
Fig. 18

Note: If you do not want the on-screen page to return to page 1 automatically, select

Automatic return (Fig. 15), if not already selected, and press  to turn off the function (Fig. 16). The **Timer** line is not visible in the **Return to First Page** menu after the automatic return has been turned off.

Settings on the web interface

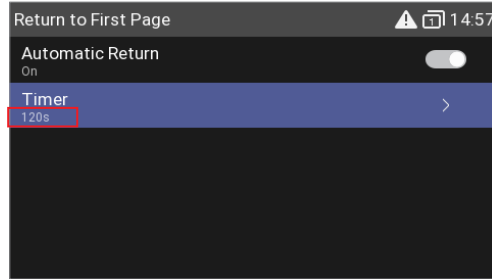
1. On the phone's web interface, click **Function Keys** in the menu on the left.
2. Click the **SmartLabel** tab.



3. The default settings are indicated in **bold italic** in the table. The available options for the three different screens are:

	Idle screen	Call screens	Other screens
Default display mode	Short	Short	–
	Full	Full	–
	Off	Off	–
Alternative display mode	Full	Full	–
	Short	Short	–
Alternative mode trigger	Off	Off	Off
	Short Press SmartLabel	Short Press SmartLabel	Short Press SmartLabel
	Short Press P10	Short Press P10	Short Press P10
	Long Press P10	Long Press P10	Long Press P10

4. Click the drop-down list of the setting you want to change and select a setting.

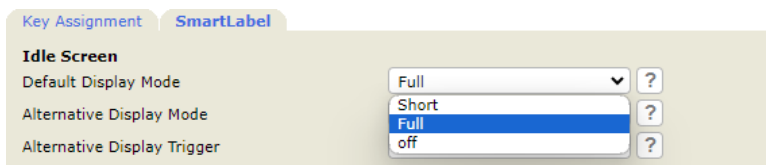


5. If you want to change the default timer settings for returning the display mode to the default and the SmartLabel page to page 1, type the number of seconds into the respective text fields.
6. Click **Apply** and **Save** before closing the page or opening another page on the phone's web interface.

Customizing the phone settings

See "The phone's web interface" on page 41 on how to open the phone's web interface, how the web interface works, and how to change the settings. See "User mode/administrator mode" on page 45 on the difference between administrator and user mode.

If you have access to administrator mode, but do not consider yourself to be an expert on SIP and SIP phones, we recommend that you do not change any of the technical settings since this may adversely affect the phone's performance or put it out of order altogether.

If you want more information on a web interface setting, click the question mark icon  that you see to the right of each item. It links to a page on Snom's Wiki with detailed information about that particular item.

On customizing the function key settings, see the chapter "Configuring the function keys" on page 82.

Note: Any changes you make on the web interface will not take effect until you click **Apply** and **Save**. Changes will be lost if you open another page or tab of the web interface or if you close the web interface without first clicking **Apply** and **Save**.

Identities/accounts

The phone supports up to twelve accounts or "phone numbers" with one or more providers or within an office or organization network. On Snom phones these accounts or phone numbers are called "identities".





Note: If your phone is part of an office network, you may need to contact your administrator to configure new or change existing identities, as this can only be done when the phone is running in administrator mode and when the PBX settings allow it.

See "Initializing and registering the phone" on page 18 for more information on required input data.

Configuring and editing identity/account

The settings are accessible in administrator mode only. In user mode it is possible to select a different outgoing identity and to reregister active identities.

On the phone

Press  > **Identity** > **Edit identity** > **Hotdesking** > select a free identity with  and enter account and registrar. If you want or need to enter more data, use  > **Identity** > **Edit identity** > **Edit identity** > select a free identity with  or its number in the menu. Available menu items:

1 Active [Yes]
2 Displayname
3 Displaynumber
4 Account
5 Password

6 Registrar
7 Outbound Proxy
8 Authentication Username
9 Mailbox
10 Mailbox Dial-in

On the web interface

Open the web interface and click an identity in the menu on the left. The configuration window for that identity will open; it contains six tabs, with the left one, Login, visible in the front. To view Features, SIP, NAT, RTP and Audio pages, click the respective tab; the font weight of the tab on the active page is **bold**.

If you change the account or the registrar, click **Re-Register** and **Save**. If you make other changes, clicking **Apply** and **Save** suffices (see "How the web interface works" on page 43).

1. Login tab. Enter the information received from your provider or your administrator in the appropriate fields.

- Display name

The display name is optional and freely selectable. It will be sent to any parties you call unless you hide your identity (see "Hiding my caller ID" on page 114). If you do not enter a display name, the data in the "Account" text field will be shown on your display and sent to any parties you call unless you hide your identity.

- Display text for idle screen

Any text you enter in in this text field will be shown - instead of your display name or account - on your display only. It will not be sent to any parties you call.

2. SIP settings. Click the **SIP** tab to bring the page to the front. It contains a number of technical settings and textfields for entering URIs/URLs to various servers (for music-on-hold, for example), as well as some behavior settings. These are:

- Automatic acceptance of incoming calls: **Auto Answer**. The default setting is "off".

Acoustic alert (one short beep) when the phone accepts a call automatically: **Preferences > Audio tab > Auto Answer > Auto Answer Indication**. The default setting is "off".

- Contact List. A contact list must be available on a server. Click "on" and enter the **Contact List URI**.

- **Identity can receive calls**. The default setting is "on". If you want to be able to use the identity for outgoing calls but do not wish other phones to be able to call the identity, turn the setting off.

- **Allow incoming extension monitoring**. If you do not want other phones to be able to monitor the activity on your phone, turn the setting off.

You can also allow only certain phones to monitor and pick up your calls. In this case, select the "On" setting and enter a password into the next field of the next setting, **Extension monitoring group ID**. **The password cannot start with a "{" bracket.**

Any phone allowed to monitor and pick up your calls must also use the same password in this text field.

Note: If you want the activity on the monitored phones to be displayed on your idle screen, enable the **Go to Call-Monitor on Activity** on the **Advanced Settings** page > **Behavior** tab > **Phone Behavior** section.

3. Audio settings. Click the **Audio** tab to bring the page to the front. It contains ringtone settings.

- Ringtone

The phone has 10 built-in ringtones that can be assigned to identities, group types, and contact types. It is also possible to download a custom melody and to turn off the ringer by selecting "Silent".

See "Assigning ringtones" on page 104.

Assigning ringtones






The phone has 10 built-in ringtones that can be assigned to identities, group types, and the contact type "VIP". It is also possible to download a custom melody. When an incoming call to an identity is ringing, the phone will play the ringtone assigned to that identity, unless it is a call from a VIP or from a group with a distinctive ringer of their own.

Note: Ringers assigned to the contact type VIP and to any of the group types override the ringers assigned to identities. For example, if you have assigned Ringer 1 to one of the identities and Ringer 2 to the group "Colleagues", the phone will play Ringer 2 when a contact from the "Colleagues" group calls that identity.

If your ringtones don't seem to work as expected, contact your administrator. There may be an overriding setting on the PBX.

Assigning ringtones to contact type VIP and group types: See "Ringtones" on page 48.

Selecting identity ringtones:

- **On the phone:**  > **Preferences** > **Audio** > **Ringer**. If there is more than one configured identity on the phone, they are shown on the display.
 - Select an identity with \blacktriangledown / \blacktriangle , if necessary, and press  to show the list of ringtones for the selected identity. The current ringtone is indicated by the radio button  marked "on".
 - Selecting a different ringtone.
 - Press \blacktriangledown / \blacktriangle to navigate up and down the list of ringtones.
 - Press \blacktriangledown / \blacktriangle jump to navigate up and down the list a page at a time.
 - Press  to play the selected ringtone.
 - Press  to save the selected ringtone as the new ringtone for the identity and return to the audio screen.
- **On the web interface** (the ringtones will be played by the phone): **Identity** (1-12) > **Audio tab**.
 - Click **Play Ringer** to play the currently selected ringer.
 - To change the ringer, select a ringer from 1 to 10 in the drop-down menu of "Ringtone". If you have selected the custom melody, enter the URL to the data file in the text field underneath. It must be a file of the type PCM 8 kHz 16 bit/sample (linear) mono WAV.
 - Click **Apply** and **Save**.

Date and time formats

Date and time formats can be set on the phone and on the web interface. The defaults are US time format and 24-hour clock (Fig. 1 and 2). European date and time formats are shown in Fig. 3 and 4, US date and time formats in Fig. 5 and 6.

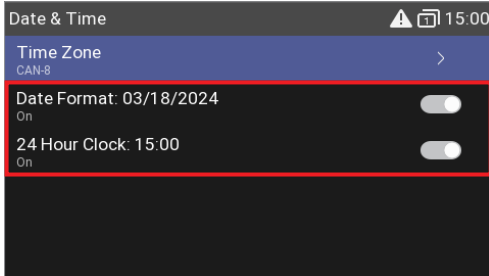


Fig. 1

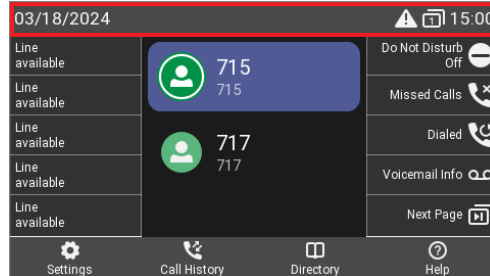


Fig. 2

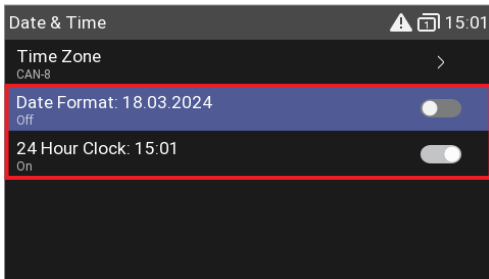


Fig. 3

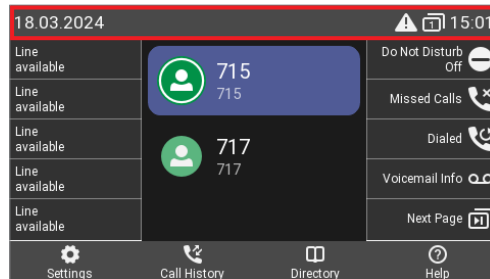


Fig. 4

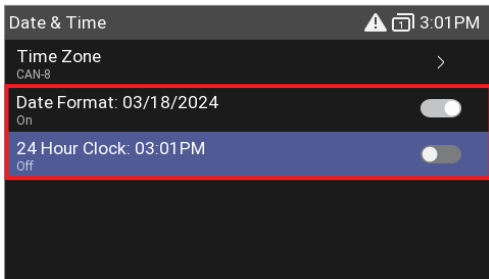


Fig. 5

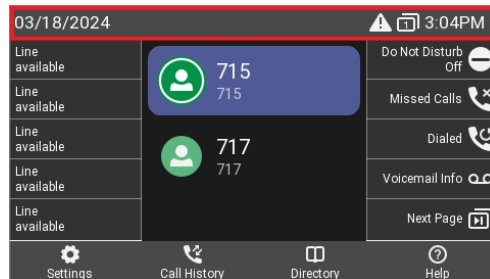


Fig. 6

Date


- Phone settings.

1. Press > **Preferences** > **Date & Time**. The default setting is US date format.

Date	US Date Format	
	Setting "On"	Setting "Off"
March 5, 2024	03/05/2024	05.03.2024
March 12, 2024	03/12/2024	12.03.2024
December 5, 2024	12/05/2024	05.12.2024
December 10, 2024	12/10/2024	10.12.2024

2. To change the date format from Month/Day/Year (Fig. 1, above) to Day.Month.Year (Fig. 3,

above), scroll down to **Date format** and press .

3. Press  briefly to return to the previous menu or for three seconds to return to the idle screen.




- Web interface settings.

1. Open the **Preferences** page > **General Information** section > **Appearance** tab > **U.S. Date Format (mm/dd)**. The default is "on".
 - Select "on" to have the date shown on the phone's display in "mm/dd/yyyy" format.
 - Select "off" to have the date shown on the phone's display in "dd.mm.yyyy" format.
2. Click **Apply** and **Save**.

Time

The time setting affects phones and/or firmware versions with a digital clock only. If the phone has a clock face, changing the setting will not affect it. The default setting is 24-hour clock.

- Phone settings.

1. Press  > **Preferences** > **Date & Time**.
2. To change the **24 Hour Clock** setting from **on** (Fig. 1, above) to **off** (Fig. 5, above), scroll down to it and press .
3. Press  briefly to return to the previous menu or for three seconds to return to the idle screen.

- Web interface settings.

1. Open the **Preferences** page > **Appearance** tab > **24-Hour Clock**. The default is "on".
 - Select "on" to have the time on the phone's display shown in 24-hour format, 00:01 to 24:00.
 - Select "off" to have the time on the phone's display shown in AM/PM format, 12:01AM to 12:00PM.
2. Click **Apply** and **Save**.

Time zone

Note: The time zone setting is accessible in administrator mode only.

The phone receives the time and date from your NTP time server. If the time and/or date on the display are incorrect, you may need to set the correct time zone. If you have set the correct time zone and the time is still incorrect, there may be a problem with the time server. Contact your network administrator or your IP provider.

The list of time zones is arranged by the difference in hours (+/-) to the UTC and, within each time zone, alphabetically by selected locations (country or country and city). Selecting and setting the time zone:

On the phone

1. Press  > **Preferences** > **Date & Time** > **Time Zone**.

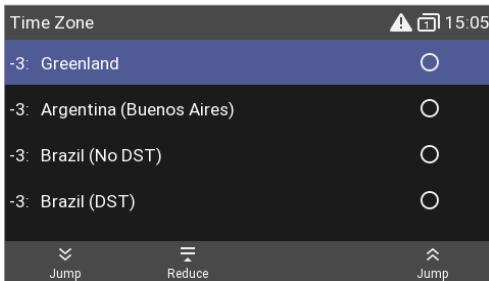










Fig. 1



Fig. 2

- Press  to collapse the list to show only selected times zones and/or locations where the phone language is spoken). When the phone language is English, all time zones are shown (Fig. 1).
- When only selected time zones and/or locations are shown (Fig. 2), press  to show all.
- Press  /  to fast-forward to the beginning of the next or the preceding time zone, respectively.
- Press  /  to scroll down or up one item at a time.

2. Press  to save your selection and to return to the **Date & Time** menu.
3. Press  briefly to return to the **Preferences** menu or for three seconds to return to the idle screen.

On the web interface






1. Open the **Advanced Settings** page > **Network** tab > **Time** section > **Time zone**.
2. Select your time zone/country/city from the drop-down list.
3. Click **Apply** and **Save**.



Language settings of phone and web interface

The language used on the phone can be changed on the phone as well as on the web interface. The language used on the web interface can be changed on the web interface only.

Phone language

Setting on the phone

1. Press  > **Preferences** > **Language**.
2. Press  /  to scroll to a language.
3. Press  /  to scroll a page at a time

4. Press  to save the selected language and to return to the **Language** menu.
5. Press  briefly to return to the **Preferences** menu or for three seconds to return to the idle screen.

Setting on the web interface

1. Open **Preferences > General Information > Language**.
2. Select the language from the drop-down list.
3. Click **Apply** and **Save**.








Web interface language

1. Open **Preferences > General Information > Web interface language**.
2. Select the language from the drop-down list.
3. Click **Apply** and **Save**.

Dial tones

There are different dial tones for different countries! Select yours on the phone or on the web interface.

Setting on the phone

1. Press  > **Preferences > Audio > Tone Scheme**.
2. Press  /  to scroll to a country.
3. Press  /  to scroll a page at a time.
4. Press  to save the selected country and return to the **Audio** menu.
5. Press  briefly to return to the **Preferences** menu or for three seconds to return to the idle screen.

Setting on the Web Interface


1. Open **Preferences** page > **Audio** tab > **Tone Scheme**.
2. Select the country from the drop-down list.
3. Click **Apply** and **Save**.

Emergency numbers

These are numbers that can be dialed when the keyboard is locked. They must be set beforehand on the web interface. The numbers "911", "112", "110", and "999" are preset.

1. Open **Preferences** > **General** tab > **General Information** section > **Emergency Numbers** (space separated).
2. Enter the emergency numbers in the text field. Type each number without spaces between the digits, separate the individual numbers with one empty space between them.
Example: If you want to set the emergency phone number 911 and the phone numbers of your doctor (986543) and a friend (234578), the entry would look this: 911 986543 234578.
3. Optional: In the **Privacy Settings** section, you can set a **PIN to unlock** (numerals 0–9), to be prompted for unlocking the keyboard.
4. Click **Apply** and **Save**.

Keyboard Locking

In the default setting, the keyboard can be locked for outgoing calls except for calls to the numbers defined as emergency numbers (see "Emergency numbers" on page 108) by pressing  for three seconds; it is unlocked by pressing the star key again for three seconds. Setting a PIN for locking and unlocking the keyboard is optional. On the web interface, the ability to lock the keyboard can be turned off. You can also define a time period of inactivity after which the keyboard will be locked automatically.

Setting a PIN for locking and unlocking

Valid values are the digits 0–9. When you enter the digits—both on the phone and on the web interface—they are replaced by asterisks or dots.

1. On the web interface, click **Preferences** in the left menu.
2. Click the **General** tab.
3. Scroll to the **Privacy Settings** section.
4. Click **PIN to unlock** and enter the PIN.

Note: The text field always contains 8 dots, whether a PIN has been set or not and regardless of the length of the PIN.

5. Click **Apply**.

Allow/disallow keyboard locking

In the default setting, the function is enabled. Setting on the web interface:

1. On the web interface, click **Preferences** in the left menu.
2. Click the **General** tab.
3. Scroll to the **Privacy Settings** section.
4. In **Allow keyboard locking**, click the toggle switch to turn keyboard locking **on** or **off**. The default setting is **on**.
5. Click **Apply**.

Automatic keyboard locking after inactivity

In the default setting, the function is disabled (blank text field). Valid values are positive integers. Setting on the web interface:

1. On the web interface, click **Preferences** in the left menu.
2. Click the **General** tab.
3. Scroll to the **Privacy Settings** section.
4. In **Lock keyboard after (s)**, enter the period of inactivity in seconds. The default setting is 0 (zero) seconds.
5. Click **Apply**.

Call forwarding

This feature automatically redirects all or certain incoming calls to another phone or a mailbox. Call forwarding is configured for each identity separately. On the web interface, the settings are configured on the **Configuration identity** (1-12) pages. If you set call forwarding on the phone, the settings are applied to the identity selected as the outgoing identity at the time of the configuration; the configuration must be repeated with the same or different settings for each identity.

Always

All incoming calls are forwarded to the number of the phone, extension, or mailbox specified as this function's target.

When busy

Calls ringing while the phone is busy are forwarded to the number of the phone, extension, or mailbox specified as this function's target.

After timeout

When a call starts ringing, the phone will wait for the number of seconds specified as "call forwarding time". If the call has not been accepted by the end of this time period, it is forwarded to the number of the phone, extension, or mailbox specified as this function's target.

Configuring the settings on the phone: See "Making/changing the settings on the phone and turning on call forwarding" on page 80 .

Configuring the settings on the web interface

If your internet telephony provider or your PBX uses codes to turn functions on and off, refer to their manuals for the codes to enter in **On Code/Off Code** text fields or ask your administrator.

Setting forwarding numbers

- Forwarding all incoming calls:
 1. Open **Identity** (1-12) > **Features** tab > **Call Forwarding** section > **Always**.
 2. Type the phone number in the **Target** text field. Type each number the way it needs to be dialed by the phone, without spaces or punctuation between the digits.
 3. Click **Apply** and **Save**.
- Forwarding incoming calls when the phone is busy:
 1. Open **Identity** (1-12) > **Features** tab > **Call Forwarding** section > **Busy**.
 2. Type the phone number in the **Target** text field. Type each number the way it needs to be dialed by the phone, without spaces or punctuation between the digits.
 3. Click **Apply** and **Save**.
- Forwarding incoming calls when they are not answered:
 1. Open **Identity** (1-12) > **Features** tab > **Call Forwarding** section > **Timeout**.
 2. Type the number of seconds into the text field of **Timeout (sec)**. If an incoming call hasn't been answered when the time has elapsed, the call will be forwarded to the phone number entered as target.
 3. Type the phone number in the **Target** text field. Type each number the way it needs to be dialed by the phone, without spaces or punctuation between the digits.
 4. Click **Apply** and **Save**.

Turning call forwarding on

1. Web interface > **Identity** (1-12) > **Features** tab > **Call Forwarding** section.
2. Click "On" after the forwarding event (**Always, Busy, Timeout**).
3. Click **Apply** and **Save**.

Turning call forwarding off





1. Web interface > **Identity** (1-12) > **Features** tab > **Call Forwarding** section.
2. Click "Off" after the forwarding event (**Always, Busy, Timeout**).
3. Click **Apply** and **Save**.

Call completion

On Snom phones call completion means that when a called number is busy or not available, your phone will call you back as soon as the dialed number is not busy anymore or available again. The factory default setting is "off". For more information, see "Call completion" on page 61.

Note: This function must be supported by your VoIP provider and/or your PBX.

On the phone

1. Press  and select **Call Features** > **Outgoing Calls** > **Call Completion**.
2. Press  to change the setting from **Off** to **On** and vice versa.
3. Press  briefly to return to the **Call Features** menu, press  for three seconds to return to the idle screen.

On the web interface

Open the phone's web interface > **Advanced Settings** page > **Behavior** tab > **Phone Behavior** section > **Call completion**: Click the radio button **on** or **off**.

Call waiting

Default setting: When in a call, another call coming in is announced visually in the status line and acoustically by a double beep. See "Call waiting" on page 64 on how to use this feature.


Available settings:

- **On:** Visual and acoustic announcement of calls waiting
- **Visual only:** Visual announcement of calls waiting in the status line
- **Ringer:** Acoustic announcement by double beeps
- **Off:** The call waiting is not announced visually or acoustically; callers hear the busy signal.

Call waiting is set independently for each identity. If you use the phone to change the setting, it will apply to the current outgoing identity only; if you want it to apply to any other identities on the phone, you must select each one in turn as the outgoing identity and repeat the setting for each one.

Setting on the phone

The setting is applied to the outgoing identity at the time it is saved. If you want to change the setting for other identities, select each one as the outgoing identity in turn and repeat the steps.

1. Press  > **Call Features** > **Incoming Calls** > **Call Waiting**.

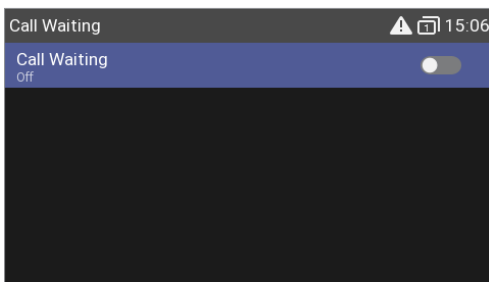


Fig. 1

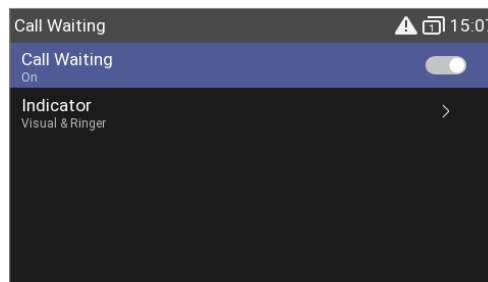


Fig. 2

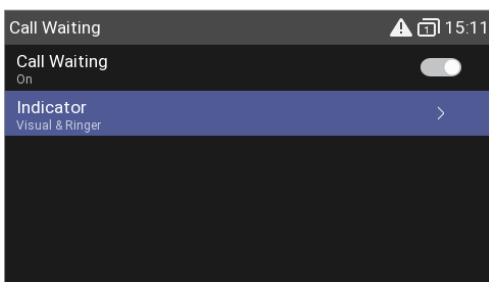


Fig. 3

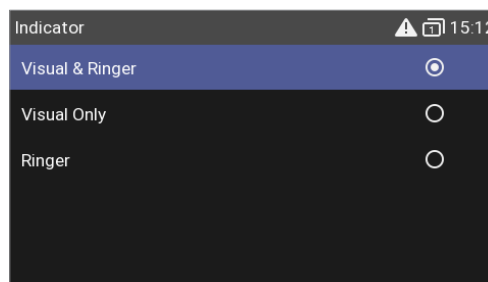


Fig. 4

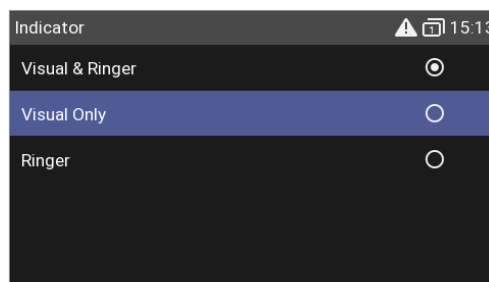


Fig. 5

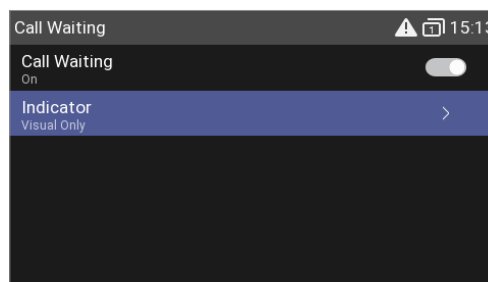







Fig. 6

- To turn call waiting on and off, select **Call waiting** and press  (Fig. 1 and 2). When call waiting has been turned off, **Indicator** is no longer available in the menu (Fig. 1).

- To change the way call waiting is announced, select **Indicator** and press  (Fig. 3).


The **Indicator** menu appears (Fig. 4). Select a setting (Fig. 5) and press  to save the change and return to the **Call waiting** menu (Fig. 6). The **Indicator** setting now indicates the new setting, for example, if you changed the default setting of "Visual & Ringer" (Fig. 5) to "Visual only" (Fig. 6).

2. Press  briefly to return to the **Incoming calls** menu, press  for three seconds to return to the idle screen.

Setting on the web interface

Call waiting is set independently for each identity.

1. In the menu on the left, click the **Identity** (1-12) whose call waiting settings you want to change.
2. Click the **SIP** tab. The setting **Call Waiting Indication** is the second to last on the page.
3. To turn call waiting off, select "off" from the drop-down menu. Select "Visual only" or "Ringer" if you want waiting calls announced only by the "phone ringing" symbol or by the double beep, respectively.

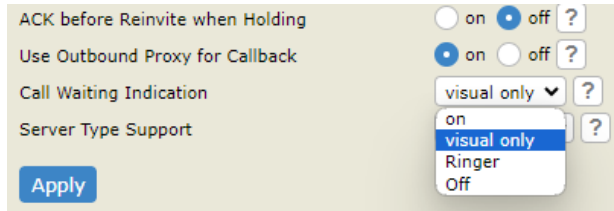





4. Click **Apply** and **Save**.

Hiding my caller ID

With this setting your phone number will not be transmitted to any phones you call. Please note that your call may not be accepted if the other phone is set to reject anonymous calls (see "Rejecting anonymous calls" on page 115). The default setting is off.

Setting on the phone

1. Press  and select **Call Features** > **Outgoing Calls** > **Hide own outgoing ID**.
2. Press  to change the setting from **No** to **Yes** and vice versa.
3. Press  briefly to return to the previous menu, press  for three seconds to return to the idle screen.

Setting on the web interface





1. Open **Identity** (1-12) page > **Login** tab > **Privacy Settings** section > **Suppress own Number (CLIP/CLIR)**.
2. Select the radio button **Hide** or **Show**.
3. Click **Apply** and **Save**.

Rejecting anonymous calls

With this setting you will not receive calls from phones whose number is not shown on your display. Anonymous callers will hear the busy signal.

Please note that calls from analog phone connections will, most likely, be received as anonymous calls. The default is off.

Setting on the phone


1. Press  and select **Call Features** > **Incoming Calls** > **Reject anonymous**.
1. Press  to change the setting from **No** to **Yes** and vice versa.
2. Press  briefly to return to the **Call Features** menu, press  for three seconds to return to the idle screen.

Setting on the web interface

1. Open the **Preferences** page > **General** tab > **Privacy Settings** section > **Reject Incoming Anonymous Calls**.
2. Select the radio button **Reject** or **Accept**.
3. Click **Apply** and **Save**.





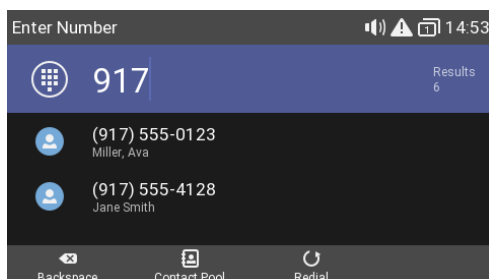

QuickLookup

When you have typed the minimum number of digits you have specified for this function, the phone will look for phone numbers containing that string of numbers in its call lists and directories and, if it finds matches, show the phone number(s) on the display.



The default setting is on. You can turn the setting on and off on the phone and on the web interface. You can also change the minimum number of digits on the phone and web interface.

Setting on the phone

1. Press  and select **Preferences** > **General** > **QuickLookup**.
2. Press  to change the setting from **On** to **Off** and vice versa.
3. Select **QuickLookup Start Length** and press .
4. Enter the minimum number of digits to be entered for QuickLookup to work and press .
5. Press  briefly to return to the **Preferences** menu, press  for three seconds to return to the idle screen.

Setting on the web interface

This setting requires administrator mode.




1. Open **Preferences** page > **General** tab > **Contact Search** section > **QuickLookup**.
2. Select the radio button **on**.
3. Type the minimum number of digits in the text field of **QuickLookup Start Length**.
4. Click **Apply** and **Save**.






Speed dial

You can use the numbers 0 to 30 to speed dial frequently dialed and/or long numbers without having to enter the complete phone number. The numbers must be set on the phone or on the phone's web interface first.

Note: You can also map a phone number onto one of the SmartLabel keys. See "Example 2, Speed dialing" on page 93 for the instructions.

Setting on the phone

1. Press  and select **Call Features** > **Speed dial**. Phone numbers currently assigned to any speed dial numbers are indicated in the line underneath the respective speed dial number (Fig. 1).
2. Use  /  to scroll down or up one number at a time (Fig. 1).

Shortcuts: When the selected number is "0", press  to go to "30"; when the selected number is "30", press  to go to "0".
3. Type the phone number into the text field without spaces or punctuation between the digits (Fig. 2).
4. Press  to save and to return to the **Speed dial** menu where the phone number has been added to the speed dial number (Fig. 3).
5. Press  briefly to return to the **Call Features** menu, press  for three seconds to return to the idle screen.

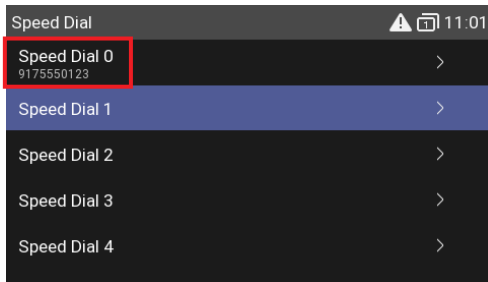


Fig. 1

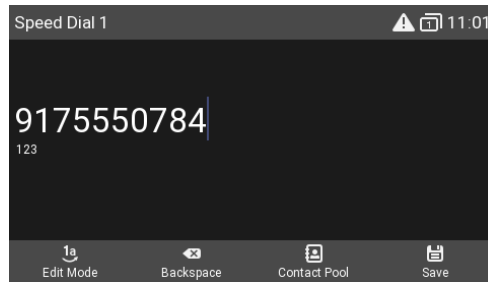


Fig. 2

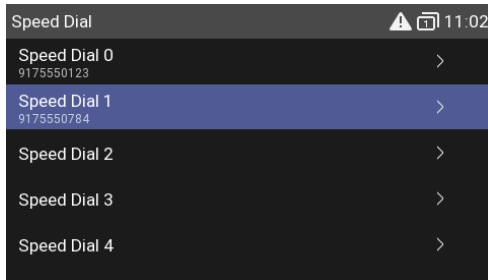


Fig. 3

Setting on the web interface

1. In the menu on the left side of the phone's web interface, click **Speed Dial**.
2. Enter one phone number with any required prefixes (area code, country code, operator/auto attendant, etc.) in the text field for each respective number or special character in the table.

Speed Dial Table		
0:	<input type="text" value="9175550123"/>	?
1:	<input type="text" value="9175550784"/>	?

Type each phone number without spaces or punctuation between the digits.


For example: You want to be able to speed dial phone number 555-0784 in area code 917 by typing on the keypad. In conventional notation you might write the number down as (917) 555-0784. In the speed dial table, type 9175550784 into the text field of the number 1.

3. Click **Apply** and **Save**. You can now speed dial the number by pressing and on the phone.

Note: You can also configure the SmartLabel keys (P1–P40) to dial one specific number each. See "Example 2, Speed dialing" on page 93 for the instructions.


Software update

Manual update

1. Open a browser and enter the address <https://service.snom.com/display/wiki/Firmware+Update+Center>.
2. In the "Desk Phones" section, click the link for the firmware version you want to update to.
3. On the next web page, scroll down to the "Downloads" / "Firmware Files" section.
4. In the table, scroll down to the **Phone Model** row for D815W and right-click the corresponding **Download Link** file.
5. Click **Copy link location** or **Copy link address** (wording depends on your browser).
6. Open the phone's web interface > **Software Update** page.
7. In the Web Interface > **Software Update** > **Manual Software Update** section, paste the link into the text field of **Firmware**.
8. Click **Load**. The phone begins to reboot.
9. If the phone asks "Reboot?", press .
- 10. DO NOT DISCONNECT THE POWER WHILE THE PHONE IS REBOOTING!**

Auto provisioning

For more information, see our web page <https://service.snom.com/display/wiki/Auto+Provisioning>.





1. Open the phone's web interface > **Advanced Settings** page > **Update** tab.
2. Please click the question mark icon  of each line and read the information on each setting on its Wiki page **before** you configure the setting.
3. Click **Apply**. If you have changed the setting URL and/or the PnP configuration, a reboot is required before they will take effect.

SRAPS

If you are using Snom's Secure Redirection and Provisioning Service (SRAPS), you can log in to your account at <https://sraps.snom.com>. For more information, see <https://service.snom.com/display/wiki/SRAPS>.

Troubleshooting

Reboot

1. Press .
2. Select **Maintenance** and press .
3. Select **Reboot** and press .
4. When asked whether to "Reboot?", press .
5. Wait for the idle screen to reappear.

Hard reboot





Disconnect the power, wait for 10 seconds, and reconnect. Wait for the idle screen to reappear.

Warning: Never disconnect the power during a firmware update!

Reset to factory values

The phone can be reset to factory values in administrator mode only.

Warning: All customized settings will be lost!

1. Press .
2. Select **Maintenance** and press .
3. Select **Reset values** and press .
4. Enter the administrator password and press .
5. See "Initializing and registering the phone" on page 18 on how to continue.

TFTP Update

When there is no other way to get the phone to work (administrator password lost, etc.). How it is done: See <https://service.snom.com/display/wiki/Updating+the+firmware%2C+recovery+via+Net+work>.

Warning: All customized settings will be lost!

Manual initialization

When automatic initialization via DHCP fails, enter the values for netmask, IP gateway, and DNS server manually after each prompt on the display.

Contacting Snom Support

If you are not a Snom partner, please contact your seller, visit our Snom Service Hub at <https://service.snom.com/> or our helpdesk at <https://helpdesk.snom.com/support/home> first. You may find the answer to your question or problem in one of the topics there. If you haven't found an answer or a solution to your problem, please post your question or problem on the forum at <https://service.snom.com/display/FORUM>.

Note: The forum is accessible to the general public. Do not post any private and/or security-relevant information there. This includes MAC addresses, SIP headers, etc. that may allow others to hack into your system or use your identity for nefarious purposes.

Submitting a ticket

If you are a Snom partner, log in to the Snom helpdesk and open a ticket: <https://helpdesk.snom.com/support/login>. You'll find the instructions here: <https://helpdesk.snom.com/support/solutions>.

Submitting system and settings information

System information

1. Open the phone's web interface > **System Information** page.
2. Copy the text under System Information into your forum posting or into the email, if Support has asked you to contact them by email.

Make sure to delete the MAC address and the IP address in the public forum posting.

Settings information

1. Open the phone's web interface > **Settings** page.
2. Copy the settings list into your forum posting or into the email, if Support has asked you to contact them by email.

Make sure to delete private and/or security-relevant data like the MAC address, public IP address, etc.

Traces

Snom Support may ask you to submit a SIP Trace and/or a PCAP Trace to help them analyze your problem.

Performing a SIP Trace

1. Open the phone's web interface > **SIP Trace** page.
2. Click **Clear** to clear the page.
3. Recreate the error to be documented in the trace.

4. Click **Reload**.
5. Copy the text and submit to Support in whatever form they requested you to use.

If it is the public forum, make sure to delete private and/or security-relevant data like the MAC address, public IP address, etc.

Performing a PCAP Trace

1. Open the phone's web interface > **PCAP Trace** page.
2. Click **Start** to start recording network traffic.
3. Click **Stop** to end recording.
4. Click **Save** to download and save the file.
5. Submit the file to Support in whatever way they requested you to use.

If it is the public forum, make sure to delete private and/or security-relevant data like the MAC address, public IP address, etc.







Appendix 1 - Display Symbols and Icons

Symbols found in the function key line








The buttons symbolize the functions that are currently available for activation. Press the function key underneath the symbol to activate the function.




























Programmable function symbols

These are the symbols displayed in the function key line when the phone is idle. They can be selected on the phone's web interface > **Function Keys** page. See "At a glance" on page 23 for the default settings.

	ACD
	Turning Auto Answer on and off (blue symbol = Auto Answer is on)
	Turning Call Forward all calls on and off (blue symbol = Call Forward is on)
	Intercom
	Speed Dial
	Transfer
(no icon)	XML Definition






























Key Event Symbols



	Accepted Calls
	Alternate
	Block Caller
	Call History
	Conference
	Consult Conference
	Contacts
(no icon)	Delete Message
	Directory
	DND (red symbol = DND is on)
	Executive-Assistant Behalf of
	Executive-Assistant Config
	Favorites
	Headset

	Help
	Hide Outgoing ID
	Hold
	Hoteling
 / 	Info (blue symbol = new info messages)
	Instant Redial
	LDAP Directory
(no icon)	Lock
(no icon)	Logoff All
	Missed Calls
	Monitor Calls
	Multicast Zones
	Mute
	Next Identity
	Next Page
(no icon)	None
	OCI-P Directory
	Pool
	Presence
	Previous Identity
	Previous Page
	Private Hold
	Reboot
(no icon)	Record
	Redial
	Server Directory
	Settings
	Silent Mode
	Voicemail
	Voicemail Info

Context-sensitive symbols

These are the symbols displayed in the function key line when the phone is active, for example when a call is ringing, when you are dialing, etc.

	Confirming a selection or an action
	Terminating/canceling an action and returning to the previous screen
	Switching input mode to lower case letters
	Switching input mode to upper case (capital) letters
	Switching input mode to numerals
	Deleting the character to the left of the cursor
	Available directories, contact lists, etc.
	Sorting Directory entries
	Adding Directory entries
	Editing mode for selected Directory entry
	Deleting selected directory/call list entry
	Details of missed calls (to, from, date/time, total number) and of received and dialed calls (to, from, date/time, duration)
	Deleting entire call list
	Moving to beginning of next time zone
	Moving to beginning of previous time zone
	Expanding the list of time zones to show all
	Collapsing the list of time zones to show only time zones relevant to the language setting (i.e., countries where the language is spoken)
	Put call or conference on hold
	Unhold/retrieve call
	Show held caller/callee on-screen
	Establishing conference with all calls on hold
	Show next participant or entire conference  /  on-screen
	Transferring call
	Transferring call safely
	Turning on the casing speaker
	Turning off the casing speaker
	Putting call waiting on-screen. See "Call waiting" on page 64 for more information.



















	When in call, show next ringing call or call waiting
	When in call, the next call screen will be your current call














SmartLabel function symbols

These are the symbols displayed in the SmartLabel area of the programmable function keys P1-P40 when the function key page with the configured key is on-screen. For information on the configuration of the keys see "Configuring the function keys" on page 82.


















Programmable function symbols





























These are the symbols of the functionalities selectable under **Type**. Please note that not all available functionalities are represented by a symbol. If the selected type is "Key event", please see the table "Key event symbols" on page 126.

	Action URL
	Turning Auto Answer on and off (blue symbol = Auto Answer is on)
	Busy lamp field (BLF) (idle / ringing / talking)
	Button
	Call Center Status (Unavailable / Empty) (Normal / Exceeded)
	Turning Call Forward all calls on and off (blue symbol = Call Forward is on)
	Cancel
	Conference
	Disposition Code
	DTMF
	Extension (idle / ringing / in use)
	Turning Intercom on and off (green symbol = Intercom is on)
	IVR (Interactive Voice Response)
(no icon)	Line (Idle)
	Line (Outgoing call ringing)
	Line (Incoming call ringing)
	Line (Connected)
	Line (Holding call)
	Line (Call being held by other party)

	Turning Multicast paging on and off (green symbol = Multicast paging is on)
	OK
	Park call (none/available)
	Presence
	Push-to-Talk
	Turn voice recorder on and off (red symbol = voice recorder is on)
	SendSipInfo
	SmartTransfer
	Speed Dial
	Star Code
	Transfer ringing or current call
	UserInputAndSendSipInfo
	XML Definition








Key event symbols

	Accepted Calls
	Alternate
	Block Caller - reject current and all future calls from the number
	Call History
	Conference (not established / established)
	Consult Conference (not established / established)
	Delete message
	Directory (internal phonebook)
	Turning DND on and off (red symbol = DND is on)
	Executive-Assistant Behalf of
	Executive-Assistant Config
	Favorites
	Turning headset on and off (blue symbol = headset is on)
	Help
	Turning Hide Outgoing ID on and off (green symbol = on)
	Hold / Retrieve call (blue symbol = Retrieve)
	Hoteling login






 / 	Info (blue symbol = new info messages)
	Instant Redial
	LDAP directory
	Logoff All
	Missed calls
	Monitor calls
	Multicast zones
 / 	Mute/unmute microphone (red symbol = microphone is mute)
	Next Identity
	Next Page
(no icon)	None
	OCI-P Directory
	Pool
	Presence state
	Previous Identity
	Previous page
	Private Hold
	Reboot
 / 	Record voice is off/on (red symbol = call is being recorded) - check local regulations whether call recording is allowed. Phone does not have built-in voice recorder.
	Redial
	Server directory
	Settings menu
 / 	Turning Silent Mode on and off (green symbol = on)
(no icon)	Unknown
	Voicemail
	Voicemail Info

Display indications

On activity

















	Outgoing call ringing
	Incoming call ringing
	Connected (single connection or conference)
	Call ended/terminated
	Dialed number is busy
	Holding call
	Call being held by other party

On idle screen



	<p>Outgoing identity</p> <ul style="list-style-type: none"> The current outgoing identity is indicated by a green circle surrounded by a white and a green ring. When you call someone, this is your identity for the call. Select a different identity for the next call by pressing ^ or v on the navigation key.
	<p>Active identity</p> <ul style="list-style-type: none"> Other configured and active identities are indicated by a green circle. Active identities can be called. Active identities can be selected as the outgoing identity for making calls by pressing ^ or v on the navigation key.
	<p>Identity not properly registered</p> <p>By changing the status of an identity to "inactive" on the phone's web interface, it is deregistered without removing its registration settings. Inactive identities are not shown on the idle screen. They cannot be called or selected as the outgoing identity. To deregister the identity, open the phone's web interface > Identity (1-12).</p> <ol style="list-style-type: none"> Change the "Identity active" setting to "off". Click "Re-Register". Click "Save".
	<p>Forwarding incoming calls (all, when busy, after timeout):</p> 

Symbols found in the Info/Status bar


These are the symbols displayed in the Info/Status bar at the top right of the phone screen.

	Handset is offhook
	Speakerphone is on
	Headset is on
	Silent mode is on (ringer is silent)
	Do Not Disturb (DND) is on
	Call Forward is on
	Call Completion is active (waiting for desired number to become available)
	Keyboard is locked
	Expansion module is connected to phone
	Hide outgoing ID
	Missed calls
	Important messages are available.
	SmartLabel page 1 is currently displayed
	SmartLabel page 2 is currently displayed
	SmartLabel page 3 is currently displayed
	SmartLabel page 4 is currently displayed

Appendix 2 - Status Messages

Whenever there is a current message concerning the status of the phone, the function key  will be available. Press the function key or, if it not available,  > **Information** > **Status Info**) to open the **Status info** screen. Additionally, some status messages will also be displayed on the display; if there is more than one current message, the one with the highest priority will be shown. The messages in descending order of priority:

Status message	Definition
SW ¹	A firmware update is available
Reboot required ¹	Reboot required, for example to have settings changes take effect
SIP disabled ^{1,2}	The phone cannot make calls due to license problems
Error ¹	An error occurred
Low memory ¹	Disk space full
Remote directory is too big ¹	The remote directory is too big to be imported
Not Registered: <account> ^{1,2}	The specified identity/account is not registered
Waiting for <name/number> to be available ²	Waiting for call completion to busy or currently unavailable number
<account> is now available ²	The dialed number is not busy anymore or is now available
Forward when Busy: <name/number>	Call forwarding is on. When your phone is busy, incoming calls will be forwarded to the phone number indicated
Forward Calls after <timeout>: <name/number>	Call forwarding is on. When an incoming call is not picked up within the set number of seconds, the call will be forwarded to the phone number indicated
Forward All: <name/number> ²	Forwarding of all incoming calls is on. All incoming calls will be forwarded to the phone number indicated.
Contacting NTP server	Network Time Protocol (NTP) is a protocol for synchronizing clocks over data network. If the connection is interrupted, the phone will not be able to display the correct time.
NTP server unreachable ¹	
HTTP Password not set ¹	No HTTP password has been set
Admin Password not set ¹	No Administrator password has been set
Keyboard locked ²	Only numbers designated as emergency numbers can be dialled
You have messages	There are spoken messages on the mailbox
You have new messages	New (messages on the mailbox)
Old messages	Old (messages on the mailbox)
Missed: <number>	The number of calls you missed since the last time you checked the list of missed calls or turned off the missed call indication

¹ The function key symbol  will appear blue


² The message cannot be deleted from the "Status Info" screen

Appendix 3 - Wall Mounting


The bracket for wall mounting is available separately. Please, contact your seller or distributor for more information. Not included in the delivery are the two screws (diameter of head between 6 and 9 mm, diameter of body max. 4.5 mm) and two screw anchors/molly bolts/wall plugs appropriate for your type of wall.

The bracket is suitable for mounting the phone over American standard Ethernet wall plates and for mounting it on the wall without the wall plate.


- **On the wall without wall plate.**

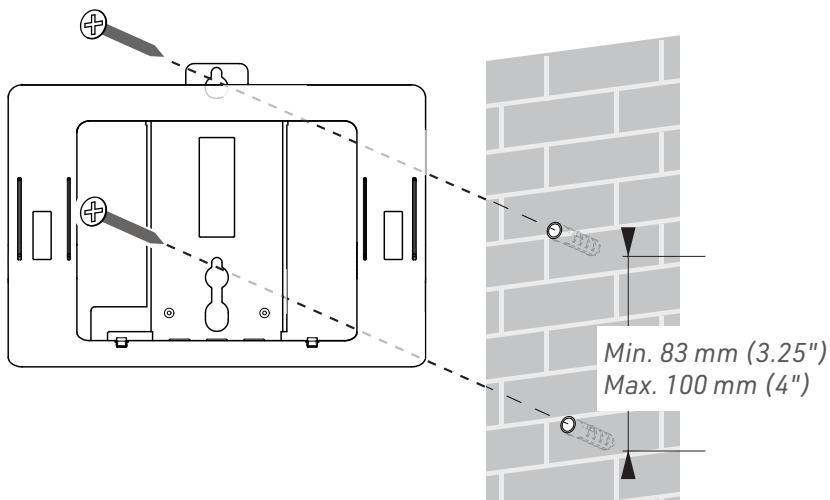


- **Over a standard Ethernet wall plate.**

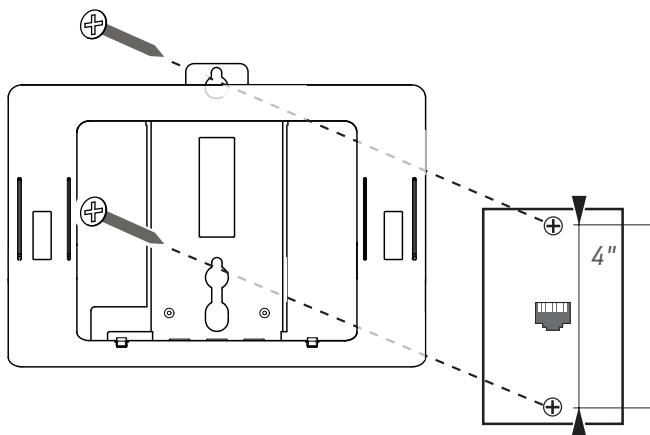

1. Place the anchors for the screws in the wall using the measurements given above.
2. Screw the bracket to the wall without or with the wall plate.
3. Plug the handset cord into the port labelled "☎" on the back of the phone and place the cord in the cable guide.
4. Plug the Ethernet cable into the port labelled "**NET**" on the back of the phone.

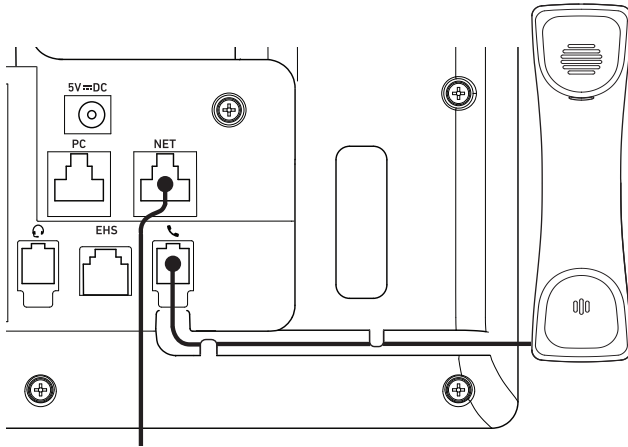

5. If you are using a wall plate, plug the Ethernet cable into the port on the plate.
6. Slide the phone onto the wall bracket until it clicks into place.

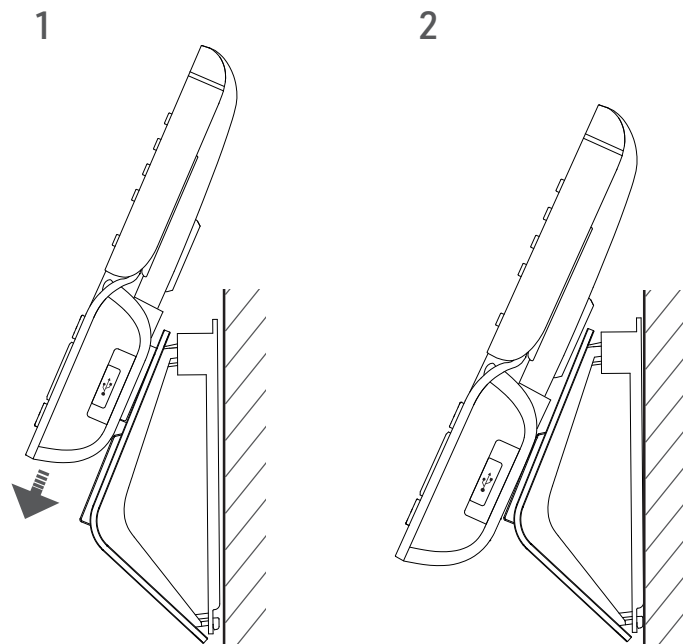



7. To hold the handset more securely on the tab of the cradle, rotate it 180° so that it protrudes slightly above the rim of the cradle. See "Rotating the tab of the cradle" on page 14.



Appendix 4 - Programmable Functions


Following is a brief description of the function key settings available on the **Function keys** page of the phone's web interface.

Freely programmable functions

Action URL	Action URLs are basically HTTP GET Requests that allow the phone to interact with web server applications. They can be used to send various data from the phone to a web server, like the customized settings stored on the phone; passwords are replaced by empty strings. Action URLs can be triggered by predefined events (Action URL Settings page of the phone's web interface) or manually by a pressing a function key that has been programmed to trigger an action.
Auto Answer	With this setting, your phone will automatically accept incoming calls when it is idle. If you leave the text field empty, incoming calls for all configured identities will be accepted; if you enter the number of an identity in the text field, only calls to that identity will be accepted automatically (i.e., 1 for Identity 1, 2 for Identity 2 etc.).
BLF (Busy Lamp Field)	This function key allows showing the status (idle, ringing, held call, busy) of another extension on the key's LED. By pressing the key, it may also be possible to pick up calls ringing on the extension, to dial the extension when the phone is idle, and to transfer an incoming call ringing on your own extension. These functionalities depend on your PBX; for more information, please check snom's interoperability page and the PBX manual. With Asterisk, generally use this feature rather than extension.
Button	This is a function key that is connected to your PBX to perform a task specified in the buttons document. For more information, see the detailed feature description at https://service.snom.com/display/wiki/HowTo+-+LED+Remote+Control .
Call Center Status	Displays queue status of a registered call center.
Call Forward	All incoming calls will be forwarded to the number (extension or external phone number) specified under "Number". The key is used to turn forwarding of all calls on and off; the red LED lights up when the function is turned on.
Cancel	Simulates pressing the CANCEL key  . Behavior depends on phone's current state and context, and configuration of the CANCEL hard key  .
Conference	This function key can be used for PBX-based conferences and for local conferences on the phone itself. <ul style="list-style-type: none"> PBX-based conferences. When a conference room or conference account has been created on the server for an individual identity, you can dedicate a function key to calling and monitoring the conference room. Select the identity and the "Conference server" function from the respective drop-down menus and enter the SIP URI of the conference room in the "Number" text field. For information on how to use this key with your particular PBX, please check the PBX manual. Phone-based conferences. If there is no SIP URI in the text field, pressing the function key will initiate a phone-based conference with all held calls and any active call.
Consult Conference	Conference status indication <ul style="list-style-type: none"> Conference setup (both local & network conference) Add participant to established network conference

Disposition Code	Sends a disposition code to the Broadsoft server.
DTMF	This function allows the specification of arbitrary key sequences (allowed digits: "0-9", "*", "#", "A-D" and flash: "!") which will be sent via DTMF when this key is pressed during an active call.
Extension	This function key allows showing the status (idle, ringing, held call, busy) of another extension on the key's LED. By pressing the key, it may also be possible to pick up calls ringing on the extension, to dial the extension when the phone is idle, and to transfer an incoming call ringing on your own extension. These functionalities depend on your PBX; for more information, please check snom's interoperability page and the PBX manual. With Asterisk, generally use BLF rather than this function.
Intercom	<p>Pressing a function key mapped with "Intercom" will establish a two-way connection to the extension specified in the "Number" text field; that extension must have enabled intercom reception on its web interface (Advanced Settings > Behavior tab > Phone Behavior > Intercom Policy "only in idle" or "always").</p> <p>"Intercom Policy" settings on the phone being called via intercom:</p> <p>Always: The intercom call will connect to the called phone automatically; if the called phone is in a call, that call will be placed on hold.</p> <p>Only in idle: The intercom call will connect to the called phone automatically if the called phone is idle. If it is in a call, the incoming intercom call will be announced as call waiting.</p> <p>Off: Pressing the intercom key will call the extension specified in the "Number" text field where it will be treated like any other incoming call, i.e., ring, be forwarded, etc.</p>
IVR (Interactive Voice Response)	<p>This function key can be used for regular calls to an extension that is reached via an IVR or auto attendant and a number of voice prompts where the caller has to make a selection by pressing a key after or during the prompt. If you know which keys need to be pressed in which order in order to reach the desired extension, the entire process can be automated and considerably speeded up.</p> <p>The syntax for the "Number" text field entry is <code><phone_number>;dtmf=<n>,<n></code>, etc. The angle brackets <> including their content are placeholders for the variables that you must replace by the actual characters. The comma represents a pause of one second, and n represents any number key on the alphanumeric keypad.</p> <p>Example: The number to dial is (917) 555-3814. When the connection has been established, the caller will hear three prompts. After the first prompt, he must press key 1; after the second prompt, he must press 3; and after the third prompt he must press 1 to reach the desired extension. The entry in the "Number" text field must look like this: <code>9175553814;dtmf=1,3,1</code>.</p> <p>Usage: When the phone is in idle mode, press the key to dial the number. As soon as the connection has been established, the phone will automatically send the DTMF tones associated with the alphanumeric keys 1, 3, and 1 with a one-second pause between them.</p> <p>(If the function type "IVR" doesn't work on individual phones, try "Speed dial" with the above description.)</p>
Key Event	When this key type is selected, a drop-down menu opens under "Number". For the available selections, see "Key Events" on page 137.
Line	<p>Default setting for all SmartLabel keys. Incoming calls will go to the first free "line" key, and outgoing calls will use the first free line key.</p> <p>Line keys can be used to make outgoing calls with the identity selected from a particular key's "Context" menu and to have incoming calls for that identity going to that particular function key. If the key is busy, the incoming call will go to the first free line key.</p>



Multicast	<p>This function key enables the phone to send multicast streams to IP multicast group addresses. The multicast IP address and port are entered in the "Number" text field in the format <i><multicast IP address>:<port></i> (e.g., 239.255.255.245:5555). The angle brackets <i><></i> including their content are placeholders for the variables that you must replace by the actual characters.</p> <p>Please note: This key is for sending multicast streams. To allow reception of multicast streams, multicast support must be enabled on the phone's web interface, Advanced settings > SIP/RTP tab > Multicast by setting Multicast Support to "on". You must also enter the IP Addresses of the multicasts you wish to receive in ascending order of priority, 10 being the highest. In case of simultaneous multicasts, the one with the highest priority at any given time will override the others.</p>
OK	<p>Simulates pressing the OK  key . Behavior depends on phone's current state and context, and configuration of the OK hard key .</p>
Park	<p>If a park orbit has been set up on the server, a function key mapped with the Park functionality can EITHER serve to park calls on the park orbit OR to park as well as retrieve calls, depending on the type of server used. Select the server type on the Identity (1-12) page of the context identity, SIP tab, from the Server Type Support drop-down menu. Enter the "phone number" of the Park Orbit and/or the park position in the text field of "Number", for example orbit1@my.proxy.com or 700@my.proxy.com etc.</p>
Presence	<p>If supported by your PBX, the LED of this function key will reflect the presence status (ringing, busy, available, etc.) of the extension specified in the "Number" text field. The function key can also be used to dial the extension, usually when the destination signals availability.</p>
Push-To-Talk	<p>Pressing the function key mapped with "Push-to-Talk" will establish a two-way connection to the extension specified in the "Number" text field for as long as the key is pressed; that extension must have enabled intercom reception on its web interface (Advanced Settings > Behavior tab > Phone Behavior > Intercom Policy "only in idle" or "always").</p>
Record	<p>The phone does not record the voice streams at all; they must be recorded on the PBX where a recording account must be set up. Pressing the key when the phone is idle will establish a connection between the phone and the recording account, making it possible to record spoken memos, meetings, or conferences. Pressing the key during a call will establish a three-party conference with the two phones and the recording account as participants. Please be advised that you must respect the legal restrictions of your country for recording calls with or without the participants' knowledge and permission.</p>
SendSipInfo	<p>Send SIP INFO request.</p>
SmartTransfer	<p>Show the SmartTransfer Target screen.</p>

<p>Speed Dial</p>	<p>Besides using the "Speed Dial" page on the web interface to program speed dial numbers, you can also put the functionality on the SmartLabel keys to be able to speed dial frequently used and/or long numbers without having to enter the complete phone number.</p> <p>Enter one phone number with any required prefixes (area code, country code, operator/auto attendant, etc.) in the "Number" text field for any given SmartLabel key. Example: 0019175557813.</p> <p>Or enter a partial phone number (country, area code etc.) and complete the number on the dialog screen. In this case, enter the partial number, followed by a semicolon and "number=incomplete" in the text field. Example: 001917555; number=incomplete.</p>
<p>Star Code</p>	<p>Making SIP calls without audiovisual indication on the phone user interface (PUI).</p> <p>Examples for using this feature:</p> <ul style="list-style-type: none"> Controlling settings on the PBX with dedicated keys that turn PBX functions on and off. The available functions must have been set on the PBX and they must be accessible from the phone, typically by dialing a star code. Phone function keys can be dedicated to activating and deactivating call forwarding and DND mode, transferring, picking up, and parking/unparking calls, etc. Depending on the settings on your PBX, you may either have to dedicate one key each for activating and deactivating a given function or to dedicate one key for both activating and deactivating the function. Silent alarms or emergency calls. <p>If the standard behavior of this function key type does not meet your requirements, it is possible to customize it. Copy the standard XML configuration of the key from the Settings page of the phone's web user interface (WUI) and edit it to suit your needs. Then paste the edited XML into the "Number" text field and change the key's type to "Xml definition".</p>
<p>Transfer</p>	<p>Transfer active calls and ringing incoming calls to the number set in the "Number" text field. Pressing the key once will transfer the active or ringing call.</p> <p>If the text field is empty, pressing the key will put the "Enter number" screen on the display. Enter the number and press  to complete the transfer.</p> <p>For further information, see "Transferring calls" on page 70.</p>
<p>UserInputAnd SendSipInfo</p>	<p>Show screen to ask for user input that will be used to send SIP INFO.</p>
<p>XML Definition</p>	<p>An XML Definition is a ruleset (defined through XML syntax) specifying a particular behavior. All of these rules and behaviors are Snom specific and do not apply to any other vendor.</p> <p>XML Definitions allow the user to create keys that are fully customized based on their specific needs.</p> <p>For more information, visit https://service.snom.com/display/wiki/XML+Definitions</p>

Key Events

Accepted Calls	(Accepted List) List of calls accepted on the phone
Alternate	Switch between short and full label mode
Block Caller	<ul style="list-style-type: none"> End call For an incoming call, mark the contact as "deny" in the Directory
Call History	Call history list (missed, received, dialed calls)
Conference	<p>Start a conference during an active call</p> <p>Show setup screen for an ad hoc conference</p>
Consult Conference	<p>Conference status indication</p> <ul style="list-style-type: none"> Conference setup (both local & network conference) Add participant to established network conference
Contacts	Used with the Presence feature. Provides access to the Contact List, where the Presence State of selected users can be seen (online, busy, offline)
Delete Message	Clear the current desktop message.
Directory	Internal phone directory
DND	Turning "Do not disturb" function (DND) on and off. When mapped to a function key with an LED, the LED will light up when DND is turned on.
Executive- Assistant Behalf Of	<p>Corresponds to Executive / Executive Assistant feature (visit https://service.snom.com/display/wiki/Configuration+and+Use+of+Executive+Assistant+Feature).</p> <p>Arranges for a Call On Behalf of one of the assigned Executives provided the following conditions are met:</p> <p>Executive / Executive Assistant feature has been enabled for an identity by provisioning and is configured to be an Executive Assistant:</p> <p>And in any of the following scenarios:</p> <ul style="list-style-type: none"> User enters one or more digits on Dialing screen excluding dialing screen for Transfer setup, Conference setup, Forward setup When a contact entry is highlighted in Directories (e.g. Local, LDAP, Broadsoft, XMPP, etc.) where an OK key will perform regular dialing When an entry is highlighted in Call History (e.g. All, Missed, Received, Dialed etc.) where an OK key will perform regular dialing.
Executive Assistant - Config	<p>Corresponds to Executive / Executive Assistant feature (visit https://service.snom.com/display/wiki/Configuration+and+Use+of+Executive+Assistant+Feature).</p> <p>If Executive / Executive Assistant feature has been enabled for an identity by provisioning:</p> <ul style="list-style-type: none"> If a phone identity has been configured as Executive, displays the Executive configuration menu If a phone identity has been configured as Executive Assistant, displays the Executive Assistant configuration menu
Favorites	Opens the list of contacts marked as Favorites in the Directory
Headset	<ul style="list-style-type: none"> Switch between headset and speaker. Answer or make call on headset.

Help	Displays the phone's IP address and the URI to Snom Wiki. IP address, MAC address, and firmware version can be found in the phone menu: Settings > Information > System Information .
Hide Outgoing ID	<ul style="list-style-type: none"> • Use XSI to toggle calling line id blocking for Broadsoft • Toggle the privacy out setting for non-Broadsoft
Hold	Place the active call on hold
Hoteling	Show PIN input screen (unlock guest), Guest Login screen or Guest Logout screen.
Info	Show Status Info screen.
Instant Redial	Show Enter Number screen if dialed call history is empty. Otherwise, dial the first entry in dialed call history.
LDAP Directory	Allows the user to look up a remote directory while dialing. Once set, this pressed key will open up the Direcopy Search window. If LDAP is setup, corresponding matching entries as returned by the sever will be shown. If LDAP is not used and and presence_lookup_number setting is turned on, the contact matches will be shown. The default edit mode is alphanumeric in this state.
Logoff All	Caution: This option will delete all account settings!! Usage: Mainly useful for call centers with frequently changing users.
Missed Calls	Missed call history list
Monitor Calls	When the phone has been programmed to monitor extensions and do/allow call pickup, a key can be mapped to show the list of monitored extensions and do call pickup from the monitor. The list will show only active extensions (i.e., busy or ringing). When there is no activity on any monitored extensions, the list is empty.
Multicast Zones	Show Multicast Zones screen.
Mute	Mutes/unmutes the microphone (handset, speakerphone, headset) during active call
Next Identity	Scroll to the next identity in idle screen, and sets it as the active line and outgoing identity.
Next Page	Show the next page of SmartLabel keys.
None	Sets the key to be inactive.
OCI-P Directory	Shows the OCI-P directory. Used for Broadsoft feature OCI-P.
Pool	Show a list of contact pools available in the Pool screen
Presence	Provides access to a list where the Presence state of each registered SIP Identity can be defined (online, offline, busy, invisible).
Previous Identity	Scroll to the previous identity in idle screen, and sets it as the active line and outgoing identity.
Previous Page	Show the previous page of SmartLabel keys.
Private Hold	Used for Broadsoft feature Private Hold
Reboot	Triggers a phone reboot

Record	The phone does not record the voice streams at all; they must be recorded on the PBX or other external device. Pressed during a call, the key informs the PBX to start and stop the recording of the audio stream on the PBX. While the call is being recorded, the recording symbol  will either blink on the display or be displayed, in red  , in the status line, depending on the phone type; if the function key has an LED, the LED will be lit throughout the recording. Please be advised that you must respect the legal restrictions of your country for recording calls with or without the participants' knowledge and permission.
Redial	Dialed call history list (last call at the top)
Server Directory	Show contacts on the server
Settings	Show the Settings screen.
Silent Mode	Toggle ringer silent
Unknown	This is a placeholder that is used when you first select "Type" as Key Event in the Web interface > Function Keys . Sets the key to be inactive until you assign a key event to the key.
Voicemail	Dial identity's mailbox or show text message.
Voicemail Info	Show the Voice Mail screen

Appendix 5 - GNU General Public License

COPYRIGHT NOTICE AND WARRANTY DISCLAIMER

I.

Das Produkt enthält Software, die unter der GNU General Public License, Version 2, frei genutzt werden darf.

This Product contains Software applicable to GNU General Public License, Version 2 which can be used freely.

II.

Im Verhältnis zu den Lizenzgebern der Software gilt der folgende Haftungsausschluss:

Towards the licensor of this Software the following liability is disclaimed:

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

III.

Der Lizenztext der GPL lautet wie folgt:
The GNU General Public License is as follows:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991
Free Software Foundation, Inc.
59 Temple Place, Suite 330
Boston, MA 02111-1307, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it. For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions,

and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and „any later version“, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM „AS IS“WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does>Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

IV.

Den vollständigen korrespondierenden Sourcecode der Software schickt Ihnen die Snom Technology GmbH auf Nachfrage gerne auf einem üblichen Datenträger gegen Erstattung der Herstellungskosten in Höhe von EUR 10,- zu.

Der vollständige korrespondierende Sourcecode kann auch über unsere Website unter <https://www.snom.com/footer/snom-entdecken/agb/quellcode-gpl-open-source/> herunter geladen werden.

If requested by you, the complete corresponding source code of the Software can be sent by Snom Technology GmbH on a standard data storage medium against the reimbursement of the manufacturing costs of EUR 10.- per unit.

The complete corresponding source code of the Software can also be downloaded from our web site <https://www.snom.com/en/footer/discover-snom/gtc/source-code-gpl-open-source/>.

V..

Weitere Informationen finden Sie auch unter <http://www.snom.com>. For further information see <http://www.snom.com>.

Snom Technology GmbH
Aroser Allee 66
13407 Berlin, Deutschland
office.de@snom.com

Snom Technology GmbH
Via Milano 1
20020 Lainate, Italia
office.it@snom.com

Snom Technology GmbH
The Courtyard, High Street
Ascot, Berkshire SL5 7HP, UK
office.uk@snom.com

Snom Technology GmbH
130 avenue Joseph Kessel
78960 Voisins-le-Bretonneux, France
office.fr@snom.com

VTech Communications Inc.
Snom Americas
9020 SW Washington Square Road,
Suite 555
Tigard, OR 97223
U.S.A.

VTech Technologies Canada Ltd.
Suite 222
13888 Wireless Way
Richmond, B.C. V6V 0A3
Canada

Manufacturer:

VTech Telecommunications Ltd.
23/F., Tai Ping Industrial Centre, Block 1,
57 Ting Kok Road, Tai Po
HONG KONG

Your specialist retailer - Ihr Fachhändler -
Votre distributeur - Su distribuidor - Il tuo rivenditore:

r

7

L

4